

June 1997

www.nasatech.com

Vol. 21 No. 6



TECH BRIEFS

THE DESIGN/ENGINEERING TECHNOLOGY DIGEST


**Computer
Hardware &
Peripherals**

**New!
Application
Briefs**

**Motion Control
Laser Tech Briefs**



LabVIEW®
It's Just that Easy



No time. Low budget. CLEAR CHOICE

You've heard it before. They need an instrumentation system – better, faster, and cheaper. And they are empowering YOU to build it by next month. Now, you can give them what they want. Use LabVIEW, the world's most popular instrumentation development software, and you'll complete your project ahead of schedule, just like thousands of engineers, scientists, and technicians have. It improves productivity at least 4 to 10 times, empowering you to create modular, reusable virtual instrumentation systems with compiled execution speeds.



So join the LabVIEW Revolution. Complete your project ahead of schedule. And take all the credit.




U.S. Corporate Headquarters
Tel: (512) 794-0100 • Fax: (512) 794-8411
info@natinst.com • www.natinst.com
Worldwide network of direct offices and distributors.

© Copyright 1996 National Instruments Corporation. All rights reserved.
Product and company names listed are trademarks or trade names of their respective companies.

For More Information Write In No. 600

FREE PRODUCTIVITY STUDY

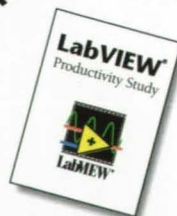

Come to NI Week, the worldwide conference on virtual instrumentation, Aug. 19-21

**Call for your
FREE LabVIEW
Productivity Study
today.**

(800) 433-3488
(U.S. and Canada)

FREE evaluation software available.
Point your Web browser to www.natinst.com to get a complete schedule of upcoming technical seminars.

http://www.omega.com
e-mail: info@omega.com

omega.com™

Ω OMEGA



One Omega Drive, P.O. Box 4047
Stamford, CT 06907-0047



Collection Series
#1-116008

To Request Your
DILBERT™ Deck Card Pack, Dial:
1-(203)-329-1266

DILBERT® by Scott Adams

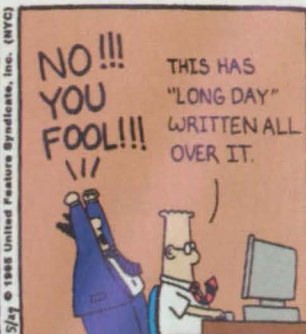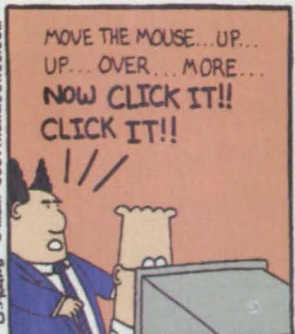

1/22/96

DILBERT © United Feature Syndicate, Inc.

Get Your Dilbert® Card Deck **Circle** No. 620

Laugh When You See Dilbert® Behind This Card

Where Do I Find Process Meters?
OMEGA...Of Course!

Legal-For-Trade Weigh Scale
Panel Meter with Load Cells



Model DP41-W
\$595
Basic Unit

Document
#3143

omega.com™
Ω OMEGA

Process or Strain Models



DP25 Series
\$245
Basic Unit

As
Seen
In...

Document
#3071

CE

Economical Digital Panel Meter



Model DP24
\$195
Basic Unit

Document
#3140

High Performance Process Indicators



Model DP41-S
\$545
Basic Unit

Document
#3026

For Sales and Service, Call:

1-800-82-66342™
1-800-TC-OMEGA

See Dilbert® On The Reverse Side Of This Card!

Where Do I Find Recorders?
OMEGA...Of Course!

Paperless
Recorder
RD840/850
Series
\$1824
Basic Unit



omega.com™
Ω OMEGA

Powerful Hybrid Trend Recorder
and Datalogger

RD1600
Series
\$2050
Basic Unit



Document
#8007

CE

Paperless
Recorders



VR100
Series
\$3425
Basic Unit

Document
#8058

CE

Optional

For more information, call OMEGAfax™
on-line publishing service at 1-800-848-4271
request desired document numbers.

Microprocessor Based Circular Chart
Recorder

CT9000
Series
\$1200
Basic Unit



Document
#8055

UL

CE

For Sales and Service, Call:

1-800-82-66342™
1-800-TC-OMEGA

NEW! FREE!

Vol. MM™
21st Century™ Preview Edition

YOUR SOURCE FOR

Temperature
Flow & Level
Pressure, Strain & Force
Data Acquisition

pH & Conductivity
Electric Heaters
Environmental

Request The Vol. MM™ 21st Century™ Preview Edition
Circle No. 621 or Request Document

#9989, OMEGAfax™ Service, or Dial 1-800-848-4271
http://www.omega.com
e-mail: info@omega.com



NEW FREE!

OMEGAfax™ SM
OMEGA's 24-Hour-a-Day, On-Demand Publishing Service
DIAL 1-800-848-4271

For Sales and
Service Call:

1-800-82-66342™
1-800-TC-OMEGA

ISO 9001
CERTIFIED
CORPORATE QUALITY

omega.com™

Ω OMEGA

OMEGA ENGINEERING, INC., ONE OMEGA DRIVE, P.O. BOX 4047, STAMFORD, CT. 06907-0047
©COPYRIGHT 1997 OMEGA ENGINEERING ALL RIGHTS RESERVED.

Light On Time

The new *NovaLine*™ LITHO
DUV microlithography excimer laser –
State-of-the-art performance
available on demand

For the last 25 years,
Lambda Physik has maintained
its leadership position in the
pulsed UV laser market through
a consistent investment in R&D
and total commitment to
producing the finest lasers
possible. As a result, our
newest *NovaLine* LITHO laser
provides the ideal combination
of performance, reliability,
ease-of-use and economy.

But today's microlithography
users demand more than just
a better product. They also
require a vendor who can
reliably deliver to meet
production schedules and furnish a
high level of after sales support. To
address these needs, Lambda Physik
has made a major commitment to
servicing the microlithography market.
We've invested in internal infrastructure
– increasing production capacity, adding
cleanroom space and expanding QA
resources. Plus, we've added support
personnel throughout our offices in Europe,
the USA and Japan.

The result of these efforts is the new *NovaLine* LITHO
excimer laser – the world's top microlithography laser,
available to meet production demands, and backed by
the best service and support in the industry.

For more information, contact your nearest
Lambda Physik sales office.




LAMBDA PHYSIK
LASERTECHNIK

e-mail: LambdaUSA@AOL.com · www.cohr.com/lp/lp_home.html · An affiliate of



COHERENT

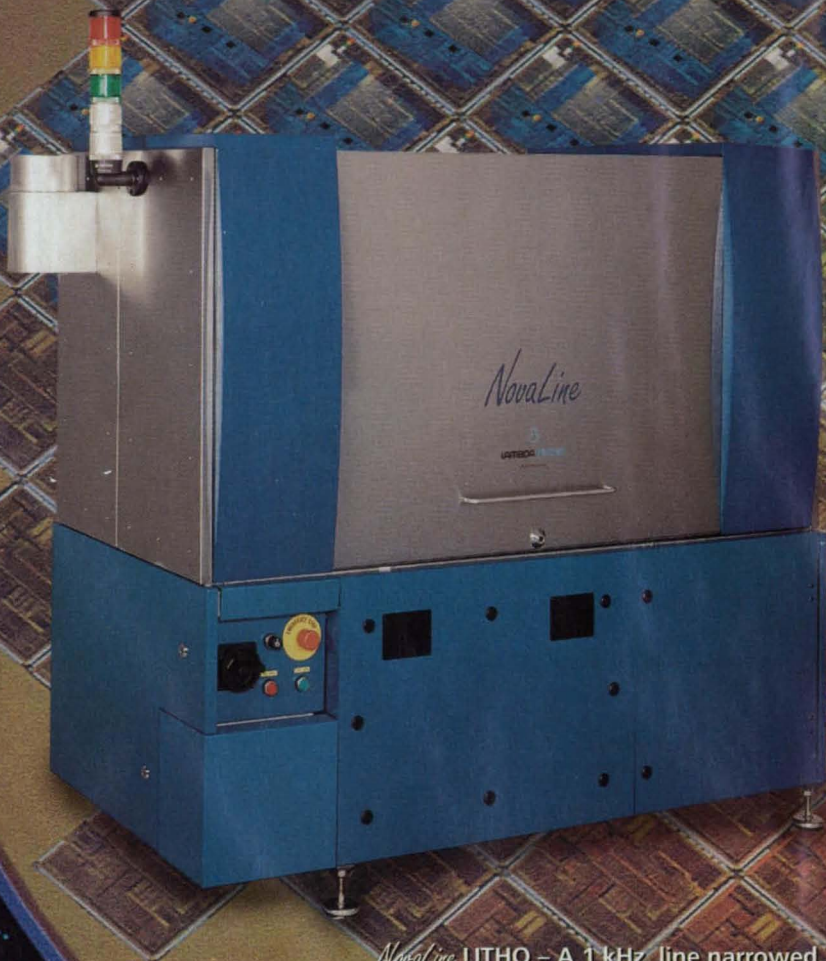

NovaLine LITHO – A 1 kHz, line narrowed,
248 nm excimer laser designed specifically
for the needs of sub-0.25 μm lithography.

NovaLine LITHO utilizes state-of-the-art
NovaTube™ construction and
solid state switching.



Tel (05 51) 69 38-0
Fax (05 51) 6 86 91
Tel (9 54) 4 86-15 00
(8 00) EXCIMER
Fax (9 54) 4 86-15 01
Tel (0 45) 9 39-78 48
Fax (0 45) 9 39-78 49

Why do more mechanical design engineers choose SolidWorks™?



Results. Our production solid modeling solutions help thousands of customers worldwide operate more efficiently with faster time-to-market – from Alcoa in the US to Sindo-Ricoh in Asia. With this kind of success, it should come as no surprise that SolidWorks experienced the best first year of any CAD company in history, with more first year revenue than PTC and Autodesk – combined.

Why the move to SolidWorks? We provide the highest quality solid modeling and mechanical design solutions in the market. Bar none. Our products are consistently released on time. They move our customers quickly into production. And offer Windows®-native ease-of-use, 100% editability for design flexibility, and productivity gains up to 60%. All for only \$3,995 (USD)*.

Experience the power of SolidWorks today.

For a FREE interactive CD and the location of a reseller near you, call **800-693-9000, ext. 304**. Or visit our Web site to learn more about upcoming SolidWorks seminars . . .

www.solidworks.com/304


SolidWorks



*Internationally, SolidWorks is priced locally. © Copyright 1997 SolidWorks Corporation. All rights reserved. SolidWorks is a trademark of SolidWorks Corporation. All other company and product names are trademarks or registered trademarks of their respective owners.

For More Information Write In No. 690

Whatever Direction Your Computing Needs Take You ...

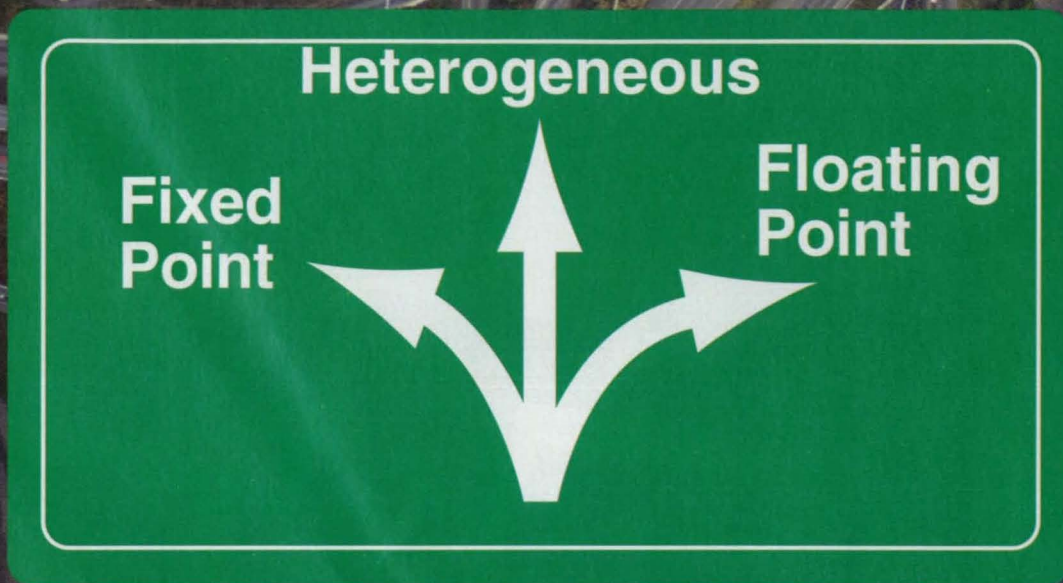

They All Lead To

ALACRON



High Performance Integer Calculations

- 3 x 3 convolution 6.6 msec
- Dilation / Erosion 1.2 msec
- Add, subtract, threshold .. 2.4 msec
- Median filter 11 msec
- Sobel / Robert's filter 6.0 msec
- Histogram 3.3 msec

High Performance Floating Point Calculations

- 8 SHARC 1DCFFT (1K) 0.072 msec
- 8 SHARC 2DCFFT (1K x 1K)138 msec
- 8 SHARC CONV3 (512 x 512) 9 msec

Alacron provides the optimal processing power for all your computing needs. Alacron's FT-C80 supplies 2 Giga Fixed Point OPs, while the FT-SHARC supplies up to 3 Giga Floating Point OPs per slot!!


The FT-SHARC and FT-C80 support Alacron's family of digital and analog framegrabbers, and Alacron's high resolution video output modules.

ALACRON
71 Spitbrook Road, Nashua, NH 03060

TEL: (603) 891-2750
FAX: (603) 891-2745

Web: <http://www.alacron.com>
EMAIL: sales@alacron.com

No Distributor Turns Your Order Faster!

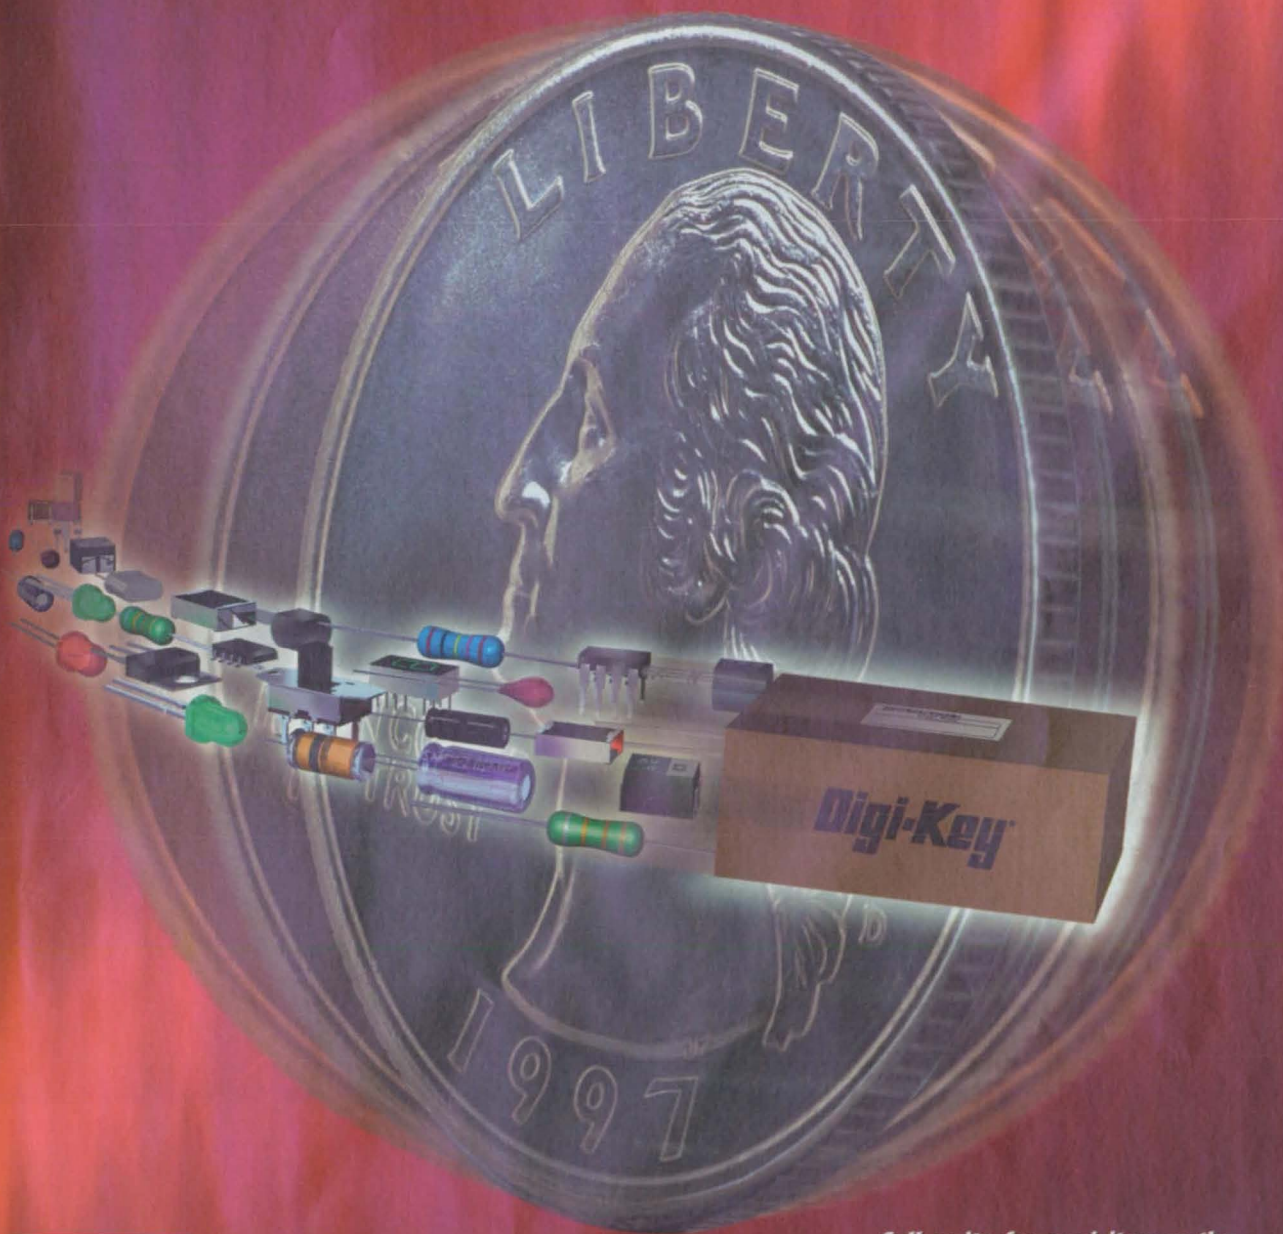

**Quality Electronic Components
Superior Service!**

**Rated #1 for On-Time Delivery!
...5 Years in a Row!**

Call, write, fax or visit us on the
Internet for your **FREE CATALOG** today!

Digi-Key®

Digi-Key Corporation
701 Brooks Ave. South
Thief River Falls, MN 56701
Toll-Free: 1-800-344-4539 • Fax: 218-681-3380
Order Online www.digikey.com

For More Information Write In No. 636

Features

22 Application Briefs

A bimonthly look at the innovative ways NASA applies commercial products and technology, with the goal of sparking new application ideas in our readers' minds.

Briefs



26 Special Focus: Computer Hardware & Peripherals

- 26 Apparatus Measures Directional Reflectance Properties
- 28 Millennium Modem/Channelizer Special Test Equipment
- 28 Portable FTIR Scatterometer Measures Surface Contaminants
- 32 Full-Flow-Field-Tracking Particle-Image Velocimetry
- 34 Optimization of Particle-in-Cell Codes on RISC Processors
- 36 Digitized X-Radiographs Indicate Densities in Ice Samples



42 Electronic Components and Circuits

- 42 Diffusion Barriers for GaAs and InP Devices
- 42 Au/Ge/Au Contacts for Shallow-Junction InP Solar Cells
- 45 Ag/Zn Contacts on Shallow-Junction p-Doped InP Devices
- 46 Planar Quad-Bridge-Diode Frequency Doubler



48 Electronic Systems

- 48 Concept for a Wide-Area Differential GPS Navigation System




54 Physical Sciences

- 54 Window Units for Solar-Assisted Heating and Cooling
- 56 Improved Data-Reduction Algorithm for Doppler Radar Wind Profilers
- 56 Using Langmuir-Blodgett Coatings to Calibrate Mass Microbalances
- 58 Electrokinetic Evaluation of Surface Coatings

Departments


- 14 Commercial Technology Team
- 16 NASA Patents
- 18 Commercialization Opportunities
- 38 Special Focus Products
- 91 New on the Market
- 92 New on Disk
- 94 New Literature
- 96 Advertisers Index

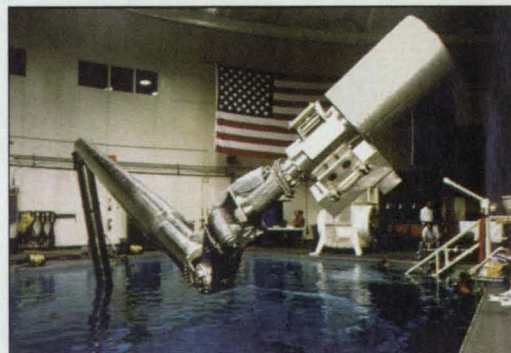

The Weightless Environment Training Facility Remote Manipulator System (WRMS) is a computer-controlled, seven-jointed robot arm that operates underwater in a 25-foot tank at NASA's Johnson Space Center in Houston, TX, to simulate weightlessness for astronaut training. ANSYS software from ANSYS, Inc., Houston, PA, was used to simulate and analyze arm movement during the design process. A new feature this month, Application Briefs highlights this and three other examples of how NASA is using commercial off-the-shelf products. See page 22.

Superdraw III™

All New Finite Element Modeling Software!

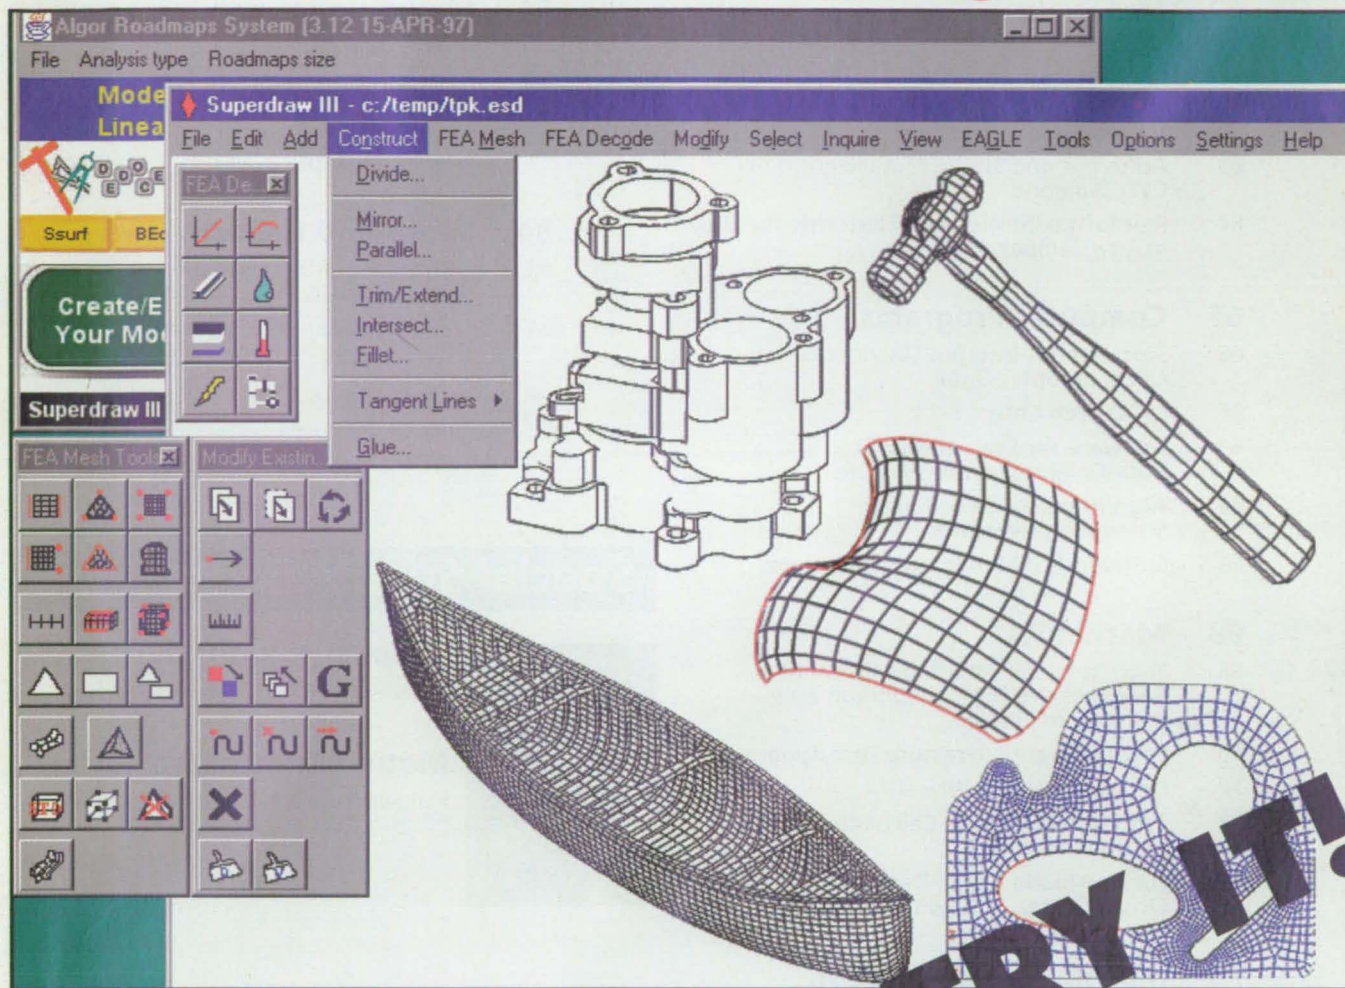


Download it at no cost from the Internet at:

WWW.ALGOR.COM

Or, order the **Free** CD-ROM below.

Three ways to order Algor's product information CD-ROM which includes a trial version of Superdraw III, plus:

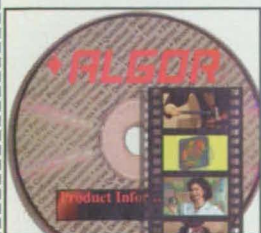

Video demos of lab tests confirming Algor results • More of the latest software for you to try • In-depth product info • Case histories • Powerful search capability • Faster access than the Internet • Accuracy verifications • The Algor Design World newsletter • An Internet browser, or use your own • Information on Educational books, videos and CD-ROMs

- 1) Call or e-mail now
- 2) Order at Algor's Web Site: **WWW.ALGOR.COM**
- 3) Complete this form and fax to: +1 (412) 967-2781

Name _____ Company _____
 Address _____
 City _____ State/Prov. _____ Zip/Postal Code _____
 Country _____ Telephone _____
 Fax _____ E-mail _____

ALGOR®

When the Engineering
Has to be Right™

Algor, Inc.

150 Beta Drive, Pittsburgh, PA 15238-2932 USA

Phone: +1 (412) 967-2700

fax: +1 (412) 967-2781

California: (714) 564-0844

Europe (UK): +44 (1) (784) 442 246

E-mail: **info@algor.com**

For More Information Write In No. 609



62 Materials

- 62 Testing and Analysis of Clothlike Structural Components
- 62 Water/Surfactant Solution as a Substitute for $\text{CCl}_2\text{F}-\text{CClF}_2$
- 63 Adherent and Stable Metallization of CVD Diamond
- 64 Reinforced, Stretchable Elastomer for Use at Low Temperature



65 Computer Programs

- 65 Software for Internet Distribution of Oceanographic Data
- 65 MOO Web Core
- 65 Software for Evaluation of Data-Compression Algorithms
- 65 Algorithms for Selection of Scheduling Heuristics
- 66 Software for Managing SAR Systems



68 Mechanics

- 68 Fluid Reservoir Maintains Constant Back-Pressure During Addition and Removal of Liquid
- 70 Low-Differential-Pressure Test Apparatus
- 72 Deployable Rigid Wheel
- 73 Procedure for Quick Calculations of Hydroelastic Loads
- 74 Turbine-Blade Radial Damper With Offset Center of Gravity



75 Machinery/Automation

- 75 Apparatus for Access to a Confined Space From Above
- 76 Reducing Gear-Mesh Vibrations With Piezoelectric Actuators



78 Manufacturing/Fabrication

- 78 Desktop Manufacturing of Silicon Nitride Components
- 78 Back-Surface Relief to Enhance Friction Stir Welding



81 Mathematics and Information Sciences


- 81 Double-Difference Precoding and Postdecoding
- 83 Flexible Software Processes Telemetric Data



84 Books and Reports

- 84 Coupled Fluid-Dynamic and Thermal Effects in a Turbomachine
- 84 Crack-Propagation Studies of Failure Modes in Thin-Rim Gears

Special Supplements

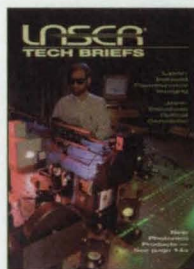

Laser Tech Briefs

Follows page 64 in selected editions only.

Motion Control Tech Briefs

Follows page 80 in selected editions only.

On the cover:

The IN Lite P Series notebook computer from Kontron Elektronik, Newport Beach, CA, is equipped with a 166 MHz Intel Pentium® processor with MMX™ technology, and withstands the rugged environments of industrial applications. It is one of the Computer Hardware & Peripherals products and technologies highlighted in the Special Focus beginning on page 26.


(Photo courtesy of Kontron Elektronik)

This document was prepared under the sponsorship of the National Aeronautics and Space Administration. Neither Associated Business Publications Co., Ltd. nor the United States Government nor any person acting on behalf of the United States Government assumes any liability resulting from the use of the information contained in this document, or warrants that such use will be free from privately owned rights. The U.S. Government does not endorse any commercial product, process, or activity identified in this publication.





Permissions: Authorization to photocopy items for internal or personal use, or the internal or personal use of specific clients, is granted by Associated Business Publications, provided that the flat fee of \$3.00 per copy be paid directly to the Copyright Clearance Center (21 Congress St., Salem, MA 01970). For those organizations that have been granted a photocopy license by CCC, a separate system of payment has been arranged. The fee code for users of the Transactional Reporting Service is: ISSN 0145-319X/94 \$3.00+.00

NASA Tech Briefs, ISSN 0145-319X, USPS 750-070, copyright © 1997 in U.S. is published monthly by Associated Business Publications Co., Ltd., 317 Madison Ave., New York, NY 10017-5391. The copyright information does not include the (U.S. rights to) individual tech briefs that are supplied by NASA. Editorial, sales, production, and circulation offices at 317 Madison Ave., New York, NY 10017-5391. Subscription for non-qualified subscribers in the U.S., Panama Canal Zone, and Puerto Rico, \$75.00 for 1 year; \$135 for 2 years; \$200.00 for 3 years. Single copies \$10.00. Foreign subscriptions one-year U.S. Funds \$195.00. Remit by check, draft, postal, express orders or VISA, MasterCard, and American Express. Other remittances at sender's risk. Address all communications for subscriptions or circulation to NASA Tech Briefs, 317 Madison Ave., New York, NY 10017-5391. Second-class postage paid at New York, NY and additional mailing offices.

\$489^{ESP}

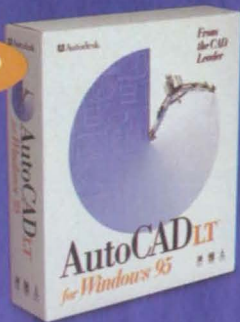

BUY AND GET OVER 2,000

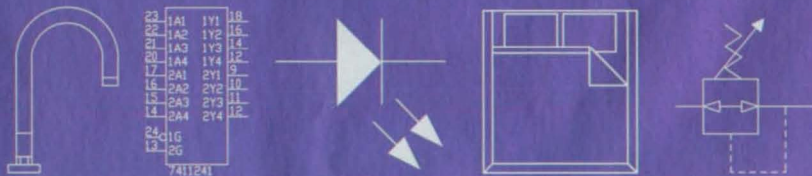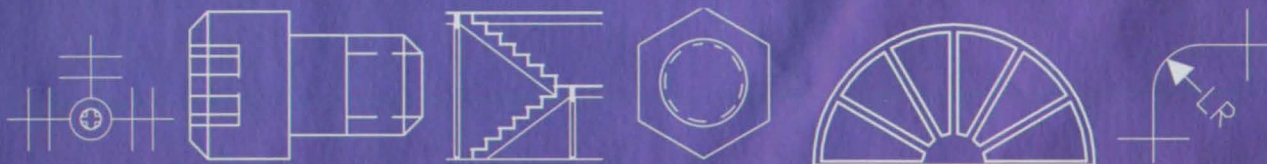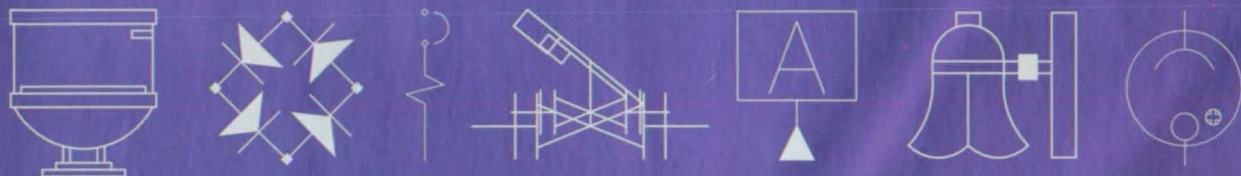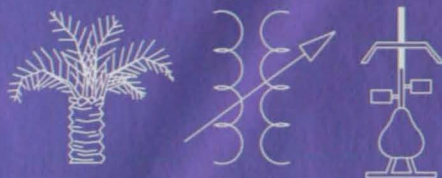

FREE!

**Here's an offer that symbolizes big savings for you!
Buy AutoCAD LT® for Windows 95, and you'll get a Symbols
package of your choice, FREE!**

Architectural, Mechanical & Electrical Symbols are full-scale, industry standard drawings that let you customize AutoCAD LT software for your professional design and drafting needs— instantly eliminating tedious hours from your drawing process.

Of course, with AutoCAD LT, you'll eliminate a lot of hassles right from the start. It's the only basic CAD program for architects and engineers that allows files to be shared quickly, accurately and worry-free with over two million AutoCAD and AutoCAD LT users worldwide. That covers practically the entire CAD world, from colleagues to contractors to clients. And with Symbols, you can be sharing those files a lot sooner.

To get over 2,000 Symbols **FREE**, just pick up your copy of AutoCAD LT. But hurry—this offer ends June 30th, and every hour you wait is time you could be saving!

To get the complete AutoCAD LT picture, see AutoCAD LT at your local software reseller. Or call 1-800-228-3601 and ask for DemoPak A127. You'll find information and customer testimonials on our Web site at www.autodesk.com/a127.




Autodesk

DESIGN
YOUR
WORLD



A \$99 Value

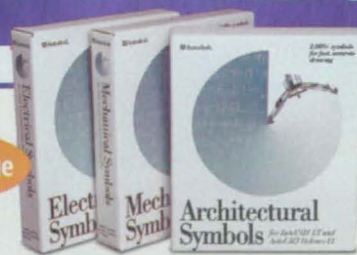

Here's how to get over 2,000 FREE Symbols!

1. Purchase AutoCAD LT between April 1, 1997 and June 30, 1997.
2. Mail the following to Autodesk, Inc. by July 31, 1997:
 - This COMPLETED promotion certificate.
 - Photocopy of your AutoCAD LT receipt or invoice.
3. Mail to: Autodesk Symbols Offer
4340 Redwood Hwy, Suite 229
San Rafael, CA 94903

Your Name _____

Address (no P.O. boxes, please) _____

City _____ State/Province _____ Zip/Postal Code _____


Country _____ Phone _____

Store where purchased _____

Choose one: ☐ Over 2,000 Architectural Symbols
☐ Over 3,600 Mechanical Symbols ☐ Over 2,500 Electrical Symbols

AutoCAD LT serial number: _____ (required)

*With purchase of AutoCAD LT for Windows 95. Offer valid 4/1- 6/30/97 in the U.S. and Canada only. Offer expires 6/30/97. Coupons and receipts must be postmarked by 7/31/97. Not valid with any other Autodesk offer or for product purchased under Autodesk Education, Government or Major Account agreements. Prices listed are in U.S. currency. Allow 4-6 weeks for processing. © 1997 Autodesk, Inc. All rights reserved. Autodesk, the Autodesk logo and AutoCAD are registered trademarks of Autodesk, Inc. All other trademarks or registered trademarks are the property of their respective owners.

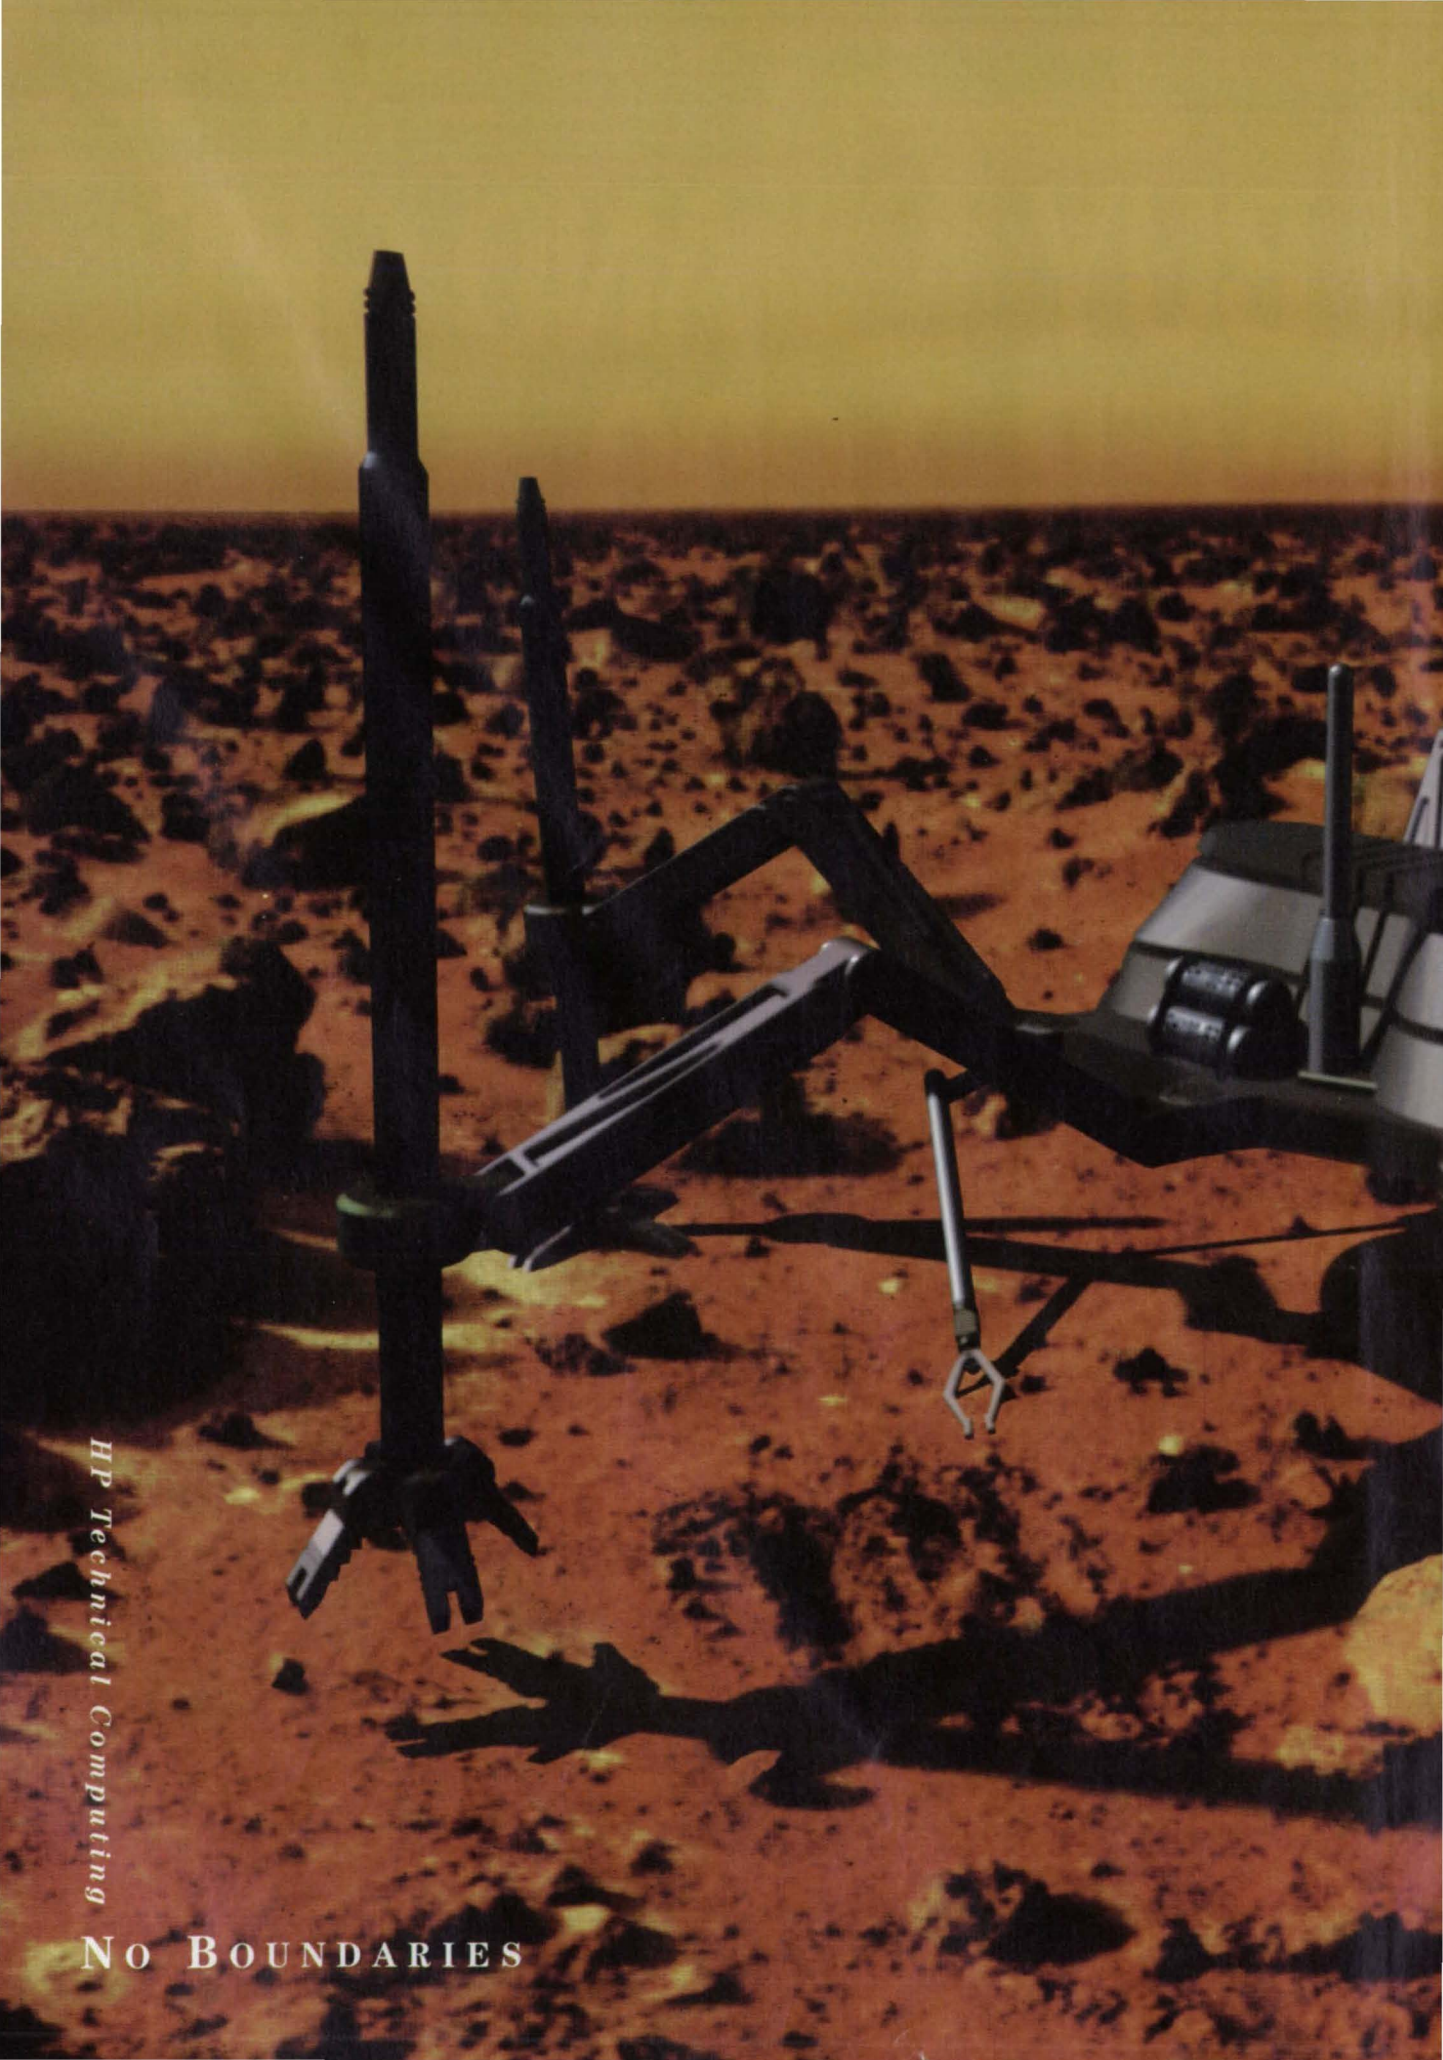

HP Technical Computing

NO BOUNDARIES



EAI'S JEFF SPENCER
ON AN HP WORKSTATION.
WHAT'S YOUR VISION?

You've got ideas. But do you have the tools to visualize them? You do with HP Technical Computing Systems. The leading price-performance HP UNIX®- and Windows® NT-based workstations and scalable supercomputers give you powerful graphics capabilities and real-time data analysis. So in addition to running world-class applications quickly and collaborating instantly with colleagues, you can make your vision a reality. Please call 1-888-844-6547 or visit www.hp.com/go/technical

Image courtesy of Engineering Animation, Inc. Landscape photo courtesy of National Space Science Data Center. UNIX is a registered trademark in the U.S. and other countries, licensed exclusively through X/Open Company Ltd. Windows is a U.S. registered trademark of Microsoft Corp. ©1997 Hewlett-Packard Company



STORE COMPUTER SIGNALS AT HIGH RESOLUTION (HDTV STANDARD)

INTRODUCING . . . THE VIDEOLINK HD™

Now you can record RADAR, SONAR and other tactical displays. The Videolink HD system lets you store everything displayed on a high resolution system to HDTV videotape. With 1024 lines of video resolution plus two channels of audio, you can capture all the action – every moment – every comment – for a definitive record of mission critical data.

Three hours of recording per cassette tape, a small physical package and low cost make an unbeatable combination.

The Videolink HD will revolutionize your monitoring and archiving. For details, speak with one of our sales representatives at (510) 814-7000 or visit us on the web at <http://www.rgb.com>.

Autosync

Freeze frame

Real time operation

Full color

**Inputs up to 90 kHz
horizontal scan rate**

**View on standard
computer monitor**

Training and simulation

Control room monitoring

Medical archiving

Trade show presentations

Scientific research




SPECTRUM®
a visual communications company™

950 Marina Village Parkway
Alameda, California 94501
(510) 814-7000 (510) 814-7026 FAX
E-mail: sales@rgb.com
<http://www.rgb.com>



TECH BRIEFS



Published by	Associated Business Publications
President/Chief Executive Officer	Bill Schnirring
Publisher	Joseph T. Pramberger
Chief Editor	Linda L. Bell
Editor, Market Focus Editions	Robert Clark
Production Manager	Donna Pituras
Advertising Coordinator	Margery Koen
Advertising Coordinator, Market Focus Editions	John Iwanciw
Art Director	Lois Erlacher
Assistant Art Director	Gene Aguirre
Circulation Manager	Lori Ramos
Telemarketing Specialist	Evelyn Mars
Assistant to Reader Service Manager	Damiana Garcia

BRIEFS & SUPPORTING LITERATURE: Written and produced for NASA by
Advanced Testing Technologies, Inc., Hauppauge, NY 11788

Technical/Managing Editor	Ted Selinsky
Sr. Technical Analyst	Dr. Larry Grunberger
Art Manager	Eric Starstrom
Staff Writers/Editors	Dr. Theron Cole, George Watson, Howard Falk, Gail Pyke
Graphics	Robert Simons
Editorial & Production	Joan Schmiemann, Caroline Weaver Becky D. Bentley

NASA:

NASA Tech Briefs are provided by the National Aeronautics and Space Administration, Technology Transfer Division, Washington, DC:

Administrator	Daniel S. Goldin
Director, Commercial Technology	Dr. Robert Norwood
Publications Director	Carl Ray

ASSOCIATED BUSINESS PUBLICATIONS

317 Madison Avenue, New York, NY 10017-5391
(212) 490-3999 FAX (212) 986-7864

President/Chief Executive Officer	Bill Schnirring
Executive Vice President/Chief Operating Officer	Domenic A. Mucchetti
Treasurer	Joseph T. Pramberger
Credit/Collection	Felecia Lahey
Staff Accountant	Larry Duze
Director of Marketing/New Business Development	George L. DeFeis
Exhibition Sales Manager	Wayne Pierce
Exhibition Sales Representative	Joanna Lipton
Human Resources Manager	Lourdes Del Valle
MIS Manager	Ted Morawski
Webmaster	Albert Sunseri
Assistant MIS Manager	Pak Tong
Network Administrator	Dmitry Master
Office Manager	Sylvia Valentin
Mailroom Operations	Alfredo Vasquez, Rose D'Addozio
Administrative Assistant	Christine Saluzzi

NASA TECH BRIEFS ADVERTISING ACCOUNT EXECUTIVES

Headquarters	(212) 490-3999
NY, NJ (Area Code 201), Eastern Canada	John Waddell
PA, DE, NJ (Area Code 908, 609), VA, DC, MD, WV	Tara Morie
at (610) 640-3118	
Eastern MA, NH, ME, RI	Paul Gillespie at (508) 429-8907
at (508) 429-9861	Bill Doucette
Western MA, CT, VT	George Watts
at (802) 824-5546	
OH, MI, IN, KY	Louise Clemens
at (216) 397-7477	
IL, WI, MO, IA, MN, ND, SD, NE, KS, Central Canada	Paul Tucker
at (847) 397-7084	
N. Calif., CO	Bill Hague
at (408) 730-6800	
WA, OR, ID, MT, WY, UT, Western Canada	Bill Madden; Bill Hague
at (206) 858-7575	
S. Calif., AZ, NM, NV (For NASA Tech Briefs)	Blake Dahlgren
at (310) 288-0391	
S. Calif., AZ, NM, NV (For Electronics and Laser Tech Briefs)	Richard Ayer
Jane Hayward	
at (714) 366-9089	
TechDeck Postcard Sales	Janet Krebs
at (847) 397-7084	


How To Reach Us On Line

NASA Tech Briefs home page: <http://www.nasatech.com>

Letters to the editor: ntb_edit@mindspring.com

To find out about advertising opportunities:
ntb_advertise@mindspring.com

Announcing The First LED Sunlight Readable, Mil-Spec Switch

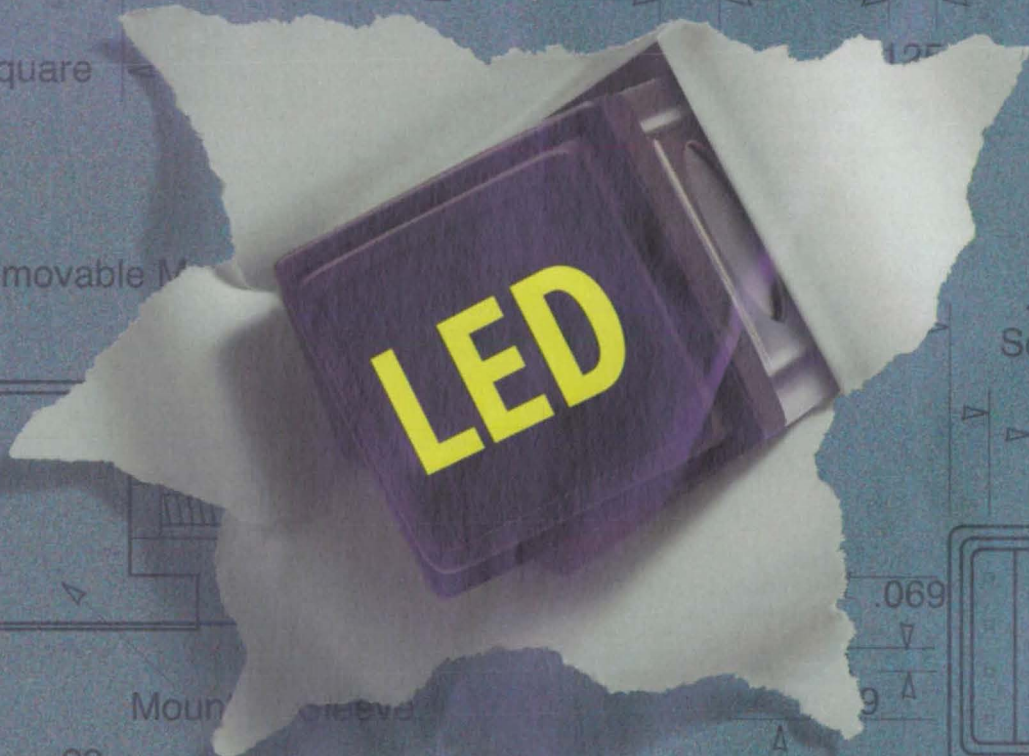

With Wire
Wrap/PCB
Terminals

Introducing the VIVISUN LED.

After 10 years of research and development, VIVISUN has produced LED lighting that meets the toughest standards in the industry...ours. This new revolutionary switch is sunlight readable and NVIS compliant per MIL-S-22885E and MIL-L-85762A. Additional features include:

*Low Power • Low Heat / Low Touch Temperature
Solderless Quik-Connect™ • Exceptional Lead Times*

VIVISUN LED

The Complete Switch

Contact us today:



AEROSPACE OPTICS INC.

Toll Free (888) VIVISUN

Fax: (817) 654-3405

Email: switches@vivisun.com

NASA Commercial Technology Team

NASA's R&D efforts produce a robust supply of promising technologies with applications in many industries. A key mechanism in identifying commercial applications for this technology is NASA's national network of commercial technology organizations. The network includes ten NASA field centers, six Regional Technology Transfer Centers (RTTCs), the National Technology Transfer Center (NTTC), business support organizations, and a full tie-in with the Federal Laboratory Consortium (FLC) for Technology Transfer. Call (206) 683-1005 for the FLC coordinator in your area.

NASA's Technology Sources

If you need further information about new technologies presented in *NASA Tech Briefs*, request the Technical Support Package (TSP) indicated at the end of the brief. If a TSP is not available, the Commercial Technology Office at the NASA field center that sponsored the research can provide you with additional information and, if applicable, refer you to the innovator(s). These centers are the source of all NASA-developed technology.

Ames Research Center

Selected technological strengths: Fluid Dynamics; Life Sciences; Earth and Atmospheric Sciences; Information, Communications, and Intelligent Systems; Human Factors.
Bruce Webbon
(415) 604-6646
bwebbon@mail.arc.nasa.gov

Dryden Flight Research Center

Selected technological strengths: Aerodynamics; Aeronautics; Flight Testing; Aeropropulsion; Flight Systems; Thermal Testing; Integrated Systems Test and Validation.
Lee Duke
(805) 258-0882
duke@louie.dfrf.nasa.gov

Goddard Space Flight Center

Selected technological strengths: Earth and Planetary Science; Missions; LIDAR; Cryogenic Systems; Tracking; Telemetry; Command.
George Alcorn
(301) 286-5810
galcorn@gsfc.nasa.gov

Jet Propulsion Laboratory

Selected technological strengths: Near/Deep-Space Mission Engineering; Microspacecraft; Space Communications; Information Systems; Remote Sensing; Robotics.
Merle McKenzie
(818) 354-2577
merle.mckenzie@ccmail.jpl.nasa.gov

Johnson Space Center

Selected technological strengths: Artificial Intelligence and Human Computer Interface; Life Sciences; Human Space Flight Operations; Avionics; Sensors; Communications.
Hank Davis
(713) 483-0474
hdavis@gp101.jsc.nasa.gov

Kennedy Space Center

Selected technological strengths: Environmental Monitoring; Sensors; Corrosion Protection; Bio-Sciences; Process Modeling; Work Planning/Control; Meteorology.
Gale Allen
(407) 867-8035
galeallen-1@ksc.nasa.gov

Langley Research Center

Selected technological strengths: Aerodynamics; Flight Systems; Materials; Structures; Sensors; Measurements; Information Sciences.
Dr. Joseph S. Heyman
(804) 864-6006
j.s.heyman@larc.nasa.gov

Lewis Research Center

Selected technological strengths: Aeropropulsion; Communications; Energy Technology; High Temperature Materials Research.
Ann Heyward
(216) 433-3484
ann.o.heyward@lerc.nasa.gov

Marshall Space Flight Center

Selected technological strengths: Materials; Manufacturing; Nondestructive Evaluation; Biotechnology; Space Propulsion; Controls and Dynamics; Structures; Microgravity Processing.
Harry Craft
(205) 544-5419
harry.craft@msfc.nasa.gov

Stennis Space Center

Selected technological strengths: Propulsion Systems; Test/Monitoring; Remote Sensing; Nonintrusive Instrumentation.
Kirk Sharp
(601) 688-1929
ksharp@ssc.nasa.gov

NASA Program Offices

At NASA Headquarters there are seven major program offices that develop and oversee technology projects of potential interest to industry. The street address for these strategic business units is: NASA Headquarters, 300 E St. SW, Washington, DC 20546.

Gene Pawlik
Small Business Innovation Research Program (SBIR)
(202) 358-4661
gpawlik@oact.hq.nasa.gov

Dr. Robert Norwood
Office of Space Access and Technology (Code X)
(202) 358-2320
rnorwood@oact.hq.nasa.gov

Philip Hodge
Office of Space Flight (Code M)
(202) 358-1417
phodge@osfms1.hq.nasa.gov

Gerald Johnson
Office of Aeronautics (Code R)
(202) 358-4711
g.johnson@aeromail.hq.nasa.gov

Bill Smith
Office of Space Sciences (Code S)
(202) 358-2473
wsmith@sm.ms.ossa.hq.nasa.gov

Bert Hansen
Office of Microgravity Science Applications (Code U)
(202) 358-1958
bhansen@gm.olmsa.hq.nasa.gov

Granville Paules
Office of Mission to Planet Earth (Code Y)
(202) 358-0706
gpaules@mtpe.hq.nasa.gov

NASA-Sponsored Commercial Technology Organizations

These organizations were established to provide rapid access to NASA and other federal R&D and foster collaboration between public and private sector organizations. They also can direct you to the appropriate point of contact within the Federal Laboratory Consortium. To reach the Regional Technology Transfer Center nearest you, call (800) 472-6785.

Dr. David Moran
National Technology Transfer Center
(800) 678-6882

Dr. William Gasko
Center for Technology Commercialization
Massachusetts Technology Park
(508) 870-0042

Gary Sera
Mid-Continent Technology Transfer Center
Texas A&M University
(409) 845-8762

Chris Coburn
Great Lakes Industrial Technology Transfer Center
Battelle Memorial Institute
(216) 734-0094

Ken Dozier
Far-West Technology Transfer Center
University of Southern California
(213) 743-2353

J. Ronald Thornton
Southern Technology Applications Center
University of Florida
(904) 462-3913

Lani S. Hummel
Mid-Atlantic Technology Applications Center
University of Pittsburgh
(412) 383-2500

Karen Robbins
American Technology Initiative
Menlo Park, CA
(415) 325-5353

John Gee
Ames Technology Commercialization Center
Sunnyvale, CA
(408) 734-4700


Dr. Jill Fabricant
Johnson Technology Commercialization Center
Houston, TX
(713) 335-1250

Dan Morrison
Mississippi Enterprise for Technology
Stennis Space Center, MS
(800) 746-4699

NASA ON-LINE: Go to NASA's Commercial Technology Network (CTN) on the World Wide Web at <http://nctn.hq.nasa.gov> to search NASA technology resources, find commercialization opportunities, and learn about NASA's national network of programs, organizations, and services dedicated to technology transfer and commercialization.

If you are interested in information, applications, and services relating to satellite and aerial data for Earth resources, contact: Dr. Stan Morain, **Earth Analysis Center**, (505) 277-3622. For software developed with NASA funding, contact the **Computer Software Management and Information Center (COSMIC)** at phone: (706) 542-3265; Fax: (706) 542-4807; E-mail: <http://www.cosmic.uga.edu> or service@cosmic.uga.edu.


Tired of being constrained by your data acquisition products?

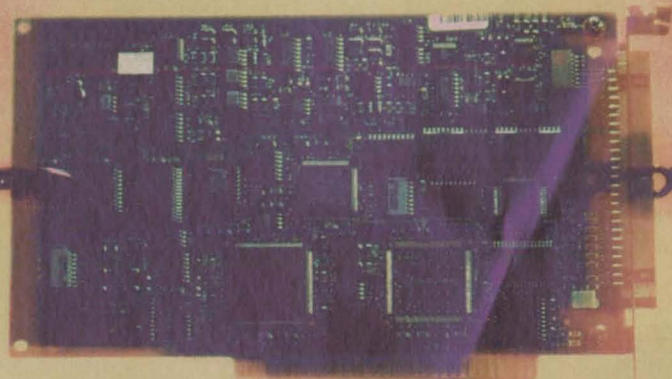

Unlock your potential with Data Translation!

Some vendors think there is only one way of doing data acquisition—their way!

At Data Translation, we know the work you're doing may involve multiple software environments or application packages. We also realize that you need software that can easily upgrade to new hardware devices and expand to add new functionality. With Data Translation, you get the software choice you deserve with the assurance that the applications you develop today will run on the operating systems and hardware of tomorrow.

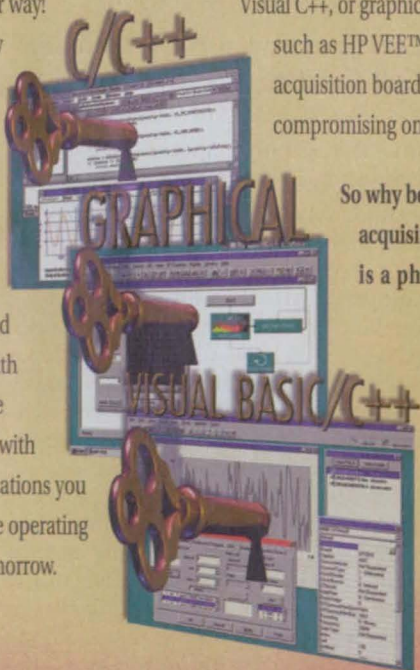

Whether you're working in C/C++, Visual Basic® or Visual C++, or graphical programming environments such as HP VEE™ or LabVIEW®, our data acquisition boards can support it—without compromising on ease-of-use or functionality.

So why be locked in by inflexible data acquisition products when your freedom is a phone call away!

1-800-525-8528

INTERNET: <http://www.datx.com>

E MAIL: info@datx.com

*Data Translation—
your key to all popular
software environments!*

DATA TRANSLATION®

World Headquarters: (508) 481-3700, UK Headquarters: (01734) 793838, Germany Headquarters: (07142) 95 31-0

Data Translation is a registered trademark of Data Translation, Inc. All other trademarks are properties of their respective holders.

For More Information Write In No. 612

When they tell you to cut costs and defects, tell'em about MIM and FloMet.

Metal Injection Molding (MIM) is the way to go for small, complex, high-volume, net shape parts. And we're the guys to go to. With MIM, you get tremendous design flexibility. Quick development. Cost-effective manufacturing. Virtually no machining. Little or no waste. Zero defects. And lower costs. Other advantages include:

Density: 98% of wrought material

Elongation: 20-33% for nickel steels, 45% for low carbon 316 stainless steel

Tensile Strength: 50,000-230,000 psi for nickel steels, 84,000 psi for low carbon 316 stainless steel

Hardness: Case hardening up to HRC 65

Complexity: Comparable to plastics

Surface Finish: 51 rms or better

This endoscopic suturing device would have required multiple operations using a CNC mill and wire EDM. With MIM, we cut costs more than 50%.



We use a controlled expansion alloy to produce this fiber optic switch base, which must retain its size and shape despite changes in temperature.

Comparison of Metal Fabrication Methods

Specifications or Characteristics	Machining	MIM	Investment Casting
Density	100%	98%	100%
Elongation	High	High	High
Tensile Strength	High	High	High
Hardness	High	High	High
Complexity	High	High	Med.
Surface Finish	High	High	Med.
Cost	High	Med.	Med.
Production Volume	Low	High	Med.



FloMet, Inc. • 810 Flightline Boulevard
DeLand, Florida 32724

Phone: 904-736-4890 • FAX: 904-736-6063

www.flomet.industry.net

FloMet, Inc. is an affiliate of Metal Powder Products Company

PATENTS NASA

Over the past three decades, NASA has granted more than 1000 patent licenses in virtually every area of technology. The agency has a portfolio of 3000 patents and pending applications available now for license by businesses and individuals, including these recently patented inventions:

Crystals of Serum Albumin for Use in Genetic Engineering and Rational Drug Design

(U.S. Patent No. 5,585,466)

Inventor: Daniel C. Carter,
Marshall Space Flight Center

It is widely accepted in the pharmaceutical industry that distribution, metabolism, and efficacy of many drugs can be altered based on their affinity to serum albumin. The invention is a method of producing high quality crystal forms of serum albumin from human, baboon, and canine serum albumin that are suitable for conducting drug and ligand binding experiments because of their superior x-ray diffraction quality. Monoclinic plate-like crystals of human serum albumin are grown from a precipitant solution of polyethylene glycol or ammonium sulfate, with concentration of reagents and pH carefully controlled within prescribed limits. Of the three methods for growing protein crystals, the hanging-drop method is preferred in this instance.

For More Information Write In No. 770

Constructing a High-Density Cell Culture System

(U.S. Patent No. 5,589,112)

Inventor: Glenn F. Spaulding,
Lyndon B. Johnson Space Center

Mammalian cell culture is more complex than bacterial culture because such cells are more delicate and have a more complex nutrient requirement for development. The invention is an annular bioreactor culture vessel with an open end closed by an endcap. It is rotatable around a horizontal axis by roller systems commonly used in culture laboratories. The wall of the endcap has tapered access ports that receive the ends of hypodermic syringes that permit the introduction of fresh nutrients and the withdrawal of spent nutrients. Nuclear or laser bombardment of the polymeric inner and outer walls of the vessel form minute gas-permeable perforations, thus making the walls' surface area available for oxygenation and increasing culture productivity.

For More Information Write In No. 771

Capacitance Probe for Fluid Flow and Volume Measurements

(U.S. Patent No. 5,596,150)

Inventors: G. Dickey Arndt,
Thanh X. Nguyen, and James R. Carl,
Lyndon B. Johnson Space Center

A reliable and accurate technique is needed for detecting the presence of fluid in a combination of multiple fluids and the flow volume of the material under test within a multiphase flow, one of which may be a gas. This apparatus uses an electromagnetic flow monitor with a first probe having two parallel elongate electrodes, the spacing between them functionally related to the droplet size of the fluid to be monitored. A cable applies a reference signal to the probe and conducts a reflection signal to detection circuitry. The percentage of a fluid present in a flow stream can be identified by measuring permittivity variations between the electrodes. A conductivity probe can also be provided to measure flow volume of the material. In a specific embodiment, a volume of urine entrained in an air stream is measured.

For More Information Write In No. 773

On-Line Method and Apparatus for Coordinated Mobility and Manipulation of Mobile Robots

(U.S. Patent No. 5,550,953)

Inventor: Homayoun Seraji,
Jet Propulsion Laboratory

The invention proposes a method and apparatus to control mobile robots that consist of a manipulator arm mounted on a mobile base. It departs from previous approaches by adding the base's degrees-of-mobility to the arm's degrees-of-manipulation, and using the overall degrees-of-freedom to accomplish a set of user-defined tasks in addition to end-effector motion. A simple on-line control scheme allows the user to assign weighting factors to individual degrees-of-mobility and degrees-of-manipulation, as well as to each task specification. The computational efficiency of the control algorithm makes it particularly suitable for real-time implementation.

For More Information Write In No. 774


New release!

SIMULINK[®] 2


Dynamic Simulation and Modeling

New features include:

- Triggered and enabled subsystems for multi-mode operation
- State-of-the-art solvers for extreme accuracy in large scale systems
- Intuitive block diagram editor, signal labels, and a powerful new Scope block
- Direct access to the MATLAB[®] 5 development environment, including tools for control system and DSP design, extensive graphics, and user definable data structures and objects

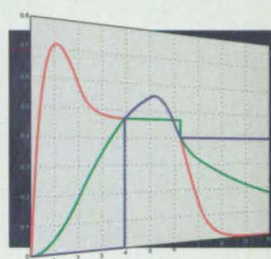

State-of-the-art solvers provide extremely accurate simulations—including event crossings.

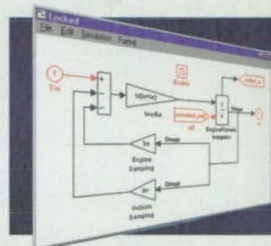

Conditionally executed systems offer modeling and simulation of multiple control modes.

Available Now!
Call 508-647-7000

To find out more about SIMULINK 2, MATLAB 5, and the new toolbox updates, call now and request KP171 to receive your free edition of MATLAB 5/SIMULINK 2 News & Notes.

<http://www.mathworks.com/ntb>

For more information on our Connections OEM/VAR program, visit our Web site at <http://www.mathworks.com/oem>, or call us at 508-647-7253.



The MathWorks, Inc. • 24 Prime Park Way, Natick, MA 01760-1500 USA • tel: (508) 647-7000 • fax: (508) 647-7101 • e-mail: info@mathworks.com • <http://www.mathworks.com>

Employment opportunities: <http://www.mathworks.com/newjobs.html> • MATLAB in Education: <http://education.mathworks.com>

The MathWorks is represented in: Australia: + 61 (0) 182-53-7644 • Benelux: + 31 (0) 182-53-7644 • Brazil: + 55-11-816-3144 • Czech Republic: + 42-2-68-44-174 • France: + 33 (0) 41-14-67-14 • Germany/Austria: + 49-241-470750
India: + 91-80-5-549338 • Israel: + 972-3-561-5151 • Italy: + 39-11-24-85-332 • Japan: + 81-3-5978-5410 • Korea: + 82-2-556-1257 • New Zealand: + 64-7-839-9102 • Poland: + 48-12-17-33-48 • Scandinavia: + 46-8-15-30-22
Singapore/Malaysia: + 65-842-4222 • South Africa: + 27-11-325-6238 • Spain/Portugal: + 34-(9)3-415-49-04 • Switzerland: + 41-31-882-0288 • Taiwan: + 886-2-501-8787 • United Kingdom: + 44-1223-423-200

© 1997 by The MathWorks, Inc. All Rights Reserved. MATLAB and SIMULINK are registered trademarks of The MathWorks, Inc. Other products or brand names are trademarks or registered trademarks of their respective holders.

For More Information Write In No. 519



Commercialization Opportunities

Millennium Modem/Channelizer Special Test Equipment

This test equipment is a fully programmable assembly of bit-error rate electronic test equipment for broadband characterization of modems and multichannel demultiplexer/demodulator systems. The test set is available for use in industry. (See page 28.)

Ag/Zn Contacts on Shallow-Junction p-Doped InP Devices

These contacts demonstrate unprecedentedly low electrical resistivities. A sintering step in the fabrication process prevents degradation or destruction of the underlying devices. (See page 45.)

Concept for a Wide-Area Differential GPS Navigation System

A proposed system would incorporate a number of recent and anticipated advances to achieve decimeter real-time positioning accuracy. The system is intended for civil aviation. (See page 48.)

RUGGED MULTI-SLOT PORTABLES

Dolch's rugged portable computers offer the industry's greatest expandability, most brilliant displays and hottest CPU power. The PAC's™ multi-slot add-in expansion, coupled with blistering processor performance and ultra-bright TFT displays, now let you move the applications previously chained to the desktop into field environments.



NotePAC™

- Water/Dust Proof NEMA 4 Case
- Drop/Shock Proof Ruggedness
- 1 Slot ISA + PCMCIA Expansion
- 12.1" SVGA TFT Display



PAC™ & L-PAC™

- 2 to 5 Full-Length Expansion Slots
- Pentium®/Pentium-Pro® to 200 MHz
- 12.1" SVGA/XGA TFT Displays
- Rugged Welded Alloy Chassis



MegaPAC™

- 10 Full-Length Expansion Slots
- Shock Mounted IsoGuard™ Chassis
- 10.4" VGA/SVGA TFT Displays
- Pentium® CPUs to 200 MHz

Call Now 1.800.995.6599

Dolch Computer Systems, Inc.
3178 Laurelview Court
Fremont, CA 94538
510.661.2220
<http://www.dolch.com>



Window Units for Solar-Assisted Heating and Cooling

These units are designed to minimize undesired heating in hot weather and cooling in cold weather. Spaces between the inner and outer panes are connected to inside or outside circulation paths, depending on the outside temperature. (See page 54.)

Adherent and Stable Metallization of CVD Diamond

Amorphous Ti+Si+N layers permit good metal contacts on chemical vapor-deposited carbon. This finding is important in fabrication of some electronic devices, particularly those intended for high-temperature applications. (See page 63.)

Low-Differential-Pressure Test Apparatus

This apparatus can be used to test a variety of low-differential pressure transducers in the laboratory and in the field. Originally, it was designed to test clean-room-air-conditioner differential-pressure transducers. (See page 70.)

Apparatus for Access to a Confined Space From Above

A proposed apparatus called an "access kit" would enable technicians and equipment to enter and leave a confined space through a relatively narrow opening in the ceiling. Large confined spaces such as chemical tanks, vats, and silos could be easily accessed from above. (See page 75.)

Take it from concept to final design.



Only Bentley's comprehensive mechanical engineering products do it all in a single system.

Here's where it all comes together. Now you can design, document and share your ideas all within a fully integrated environment.

Bentley has assembled a complete offering of mechanical engineering products. Products that cover every aspect of mechanical engineering design, streamlining every step of your workflow. Bentley's Single Engineering Model helps you move through the product cycle from conceptual design to manufacturing, through simulation, analysis, preproduction, engineering and manufacturing. When you make changes to your design, all components—including documentation—are updated automatically, virtually eliminating errors and omissions.

The Bentley Engineering Back Office™ range of products unites desktop engineering systems with enterprise IT and database systems for information sharing via the Internet. Best of all, our products are scalable to meet the demands of your projects—bringing together best-in-class applications into a single, powerful solution.

Go from concept to final design with Bentley. Call 1-800-BENTLEY for a free demo CD or visit www.bentley.com

MicroStation Modeler®: Provides all of the information you need for design and manufacturing, including assembly management and simulation.

MicroStation® MasterPiece™: An intuitive visualization tool for advanced rendering and mechanism simulations.

MicroStation TeamMate™ 96: A robust workflow and document management product.

COSMOS/M® DESIGNER II: For fully integrated structural analysis using state-of-the-art FFE® (Fast Finite Element) analysis technology.

ADAMS®/MS Mechanisms: For assembly simulation, evaluation of motion paths and calculation of joint forces.

ESPRIT/MS™: An integrated range of sheet metal design and manufacturing products.

MoldDesign™: An innovative product for designing mold bases for the injection mold industry.

Engineering the future together

610-458-5000 • 800-BENTLEY • FAX: 610-458-1060 • www.bentley.com

MicroStation and MicroStation Modeler are registered trademarks; Engineering Back Office, MasterPiece, TeamMate, MoldDesign, Bentley and the "B" Bentley logo are trademarks of Bentley Systems, Incorporated. COSMOS/M and FFE are registered trademarks of Structural Research & Analysis Corp. ESPRIT/MS is a trademark of DP Technology Corp. ADAMS is a registered trademark of Mechanical Dynamics, Inc. © 1997 Bentley Systems, Incorporated

For More Information Write In No. 650



Aaaaaaagh!

Does data acquisition have you pulling your hair out or just plain screaming? Well no more. Channel K has a number of ways to make your job easier. Like our new SmartDAQ™ PCI multifunction I/O boards with onboard DSP, TestPoint™ test and measurement software, SmartLink™ network measurement modules, and Keithley MetraByte DAS-1700/1800™ ISA multifunction boards. Not to mention our huge selection of other data acquisition products, interfaces, and accessories. All of which you can find in our new Channel K catalog. And don't forget our team of expert tech-heads who'll help you with outstanding pre-sale and technical support. Channel K. It's the easy way to your data acquisition solution. For more information and less stress, call 1-888-KEITHLEY today.

Call 1-888-KEITHLEY to get a free catalog!

(5 3 4 8 4 5 3)

Woowwww!

SmartDAQ PCI Boards

12- or 16-bit PCI data acquisition boards featuring 8 to 64 analog inputs and 160 or 330 kS/s scanning. From **\$1195!**


Write in No. 684



DAS-1700/1800 High-Performance Boards

Multifunction 12- or 16-bit ISA data acquisition boards with 8 to 64 analog inputs and 160 or 330 kS/s sampling. For most applications. From **\$799!**

Write in No. 685

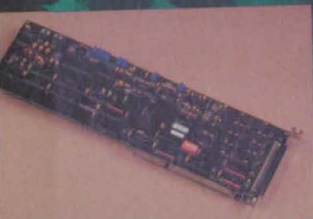


SmartLink Measurement System

Intelligent modules for remote and lab-grade measurements.

Link measurements from signal source directly to network or bus, including USB* and Ethernet™. Measure signals from volts to temperature to acceleration. From **\$574!**


Write in No. 686

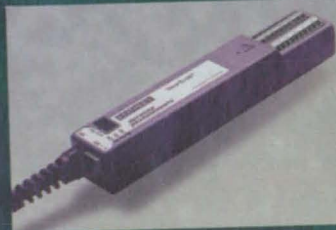

TestPoint Test & Measurement Software

Windows-based package with data acquisition, control, analysis and graphic presentation functions. Minimal programming and license-free executables. Supported by scores of hardware vendors! **\$995.**

Write in No. 687

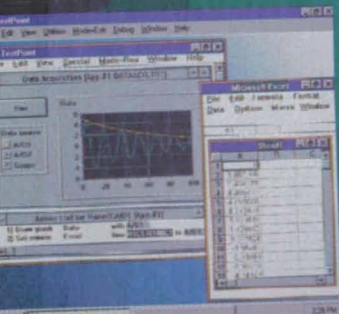

How to get it.
How to use it.

CHANNEL

K

KEITHLEY METRABY

*Universal serial bus; available with SmartLink Fall '97

Application Briefs

Design Team Collaborates Via the Internet

CATIA™ solid modeling software
IBM

White Plains, NY

914-642-5463; e-mail: cscott@vnet.ibm.com



The X-33 will launch vertically like a rocket and land horizontally like a plane.

Coast-to-coast, engineers developing the X-33 spacecraft prototype are working as a team, as if they were all in the same location. Over the next three years, they will prepare the vehicle for the first of 15 test flights to take place between March and December 1999. The X-33, which has been dubbed VentureStar, will launch vertically like a rocket and land horizontally like a plane.

The X-33 designers are working concurrently with access to the same information in real time via encrypted data accessed from the Internet. They are using as their primary design tool CATIA™ solid modeling software, which provides a common and consistent database of design information.

Engineers at the X-33's main assembly location, Lockheed Martin's Skunk Works in Palmdale, CA, are coordinating the effort, working with design engineers in companies developing X-33 parts in Colorado, New Orleans, New Jersey, and California. In addition, Skunk Works is supplying data continuously to NASA centers in Virginia, Alabama, Texas, and California.

They are using CATIA to generate 3D concepts and update them to the point that the designs can be analyzed for their aerodynamic and structural features. When an individual part is ready, it is sent to Skunk Works for integration into the prototype.

Many of the parts will be produced without any hands-on production; they will go directly from 3D modeling to numerically controlled machines for manufacture. "CATIA provides us with more complete data early and makes it possible to see the total picture of a particular design earlier in the development process," said design engineer Mark Wexler, senior specialist at Skunk Works. "It provides visualization for groups outside the actual design process, which is a significant advantage since they could know something we aren't aware of and thereby help us to keep moving in the right direction."

Software Tools Guide NASA's Automated Spacecraft

MULTI software development environment

Green Hills Software

Santa Barbara, CA

805-965-6044; fax: 805-965-6343

NASA's New Millennium Program (NMP) is an initiative intended to increase the frequency and effectiveness of near-Earth and deep-space missions. To do so, the NMP will utilize a fleet of smaller, simpler, less expensive craft that work in concert to solve complex problems. The craft will be endowed with advanced planning and decision-making capabilities that enable them to solve complex navigation, data collection, and other mission problems autonomously with minimal input from ground control.

NASA's Jet Propulsion Laboratory and Ames Research Center are developing and validating technologies needed for autonomous operation and multi-craft coordination. The first validation flight is scheduled for July 1998, beginning with Deep Space 1, which will be the first planetary spacecraft flown with completely automated navigation, guidance, and control systems. The first missions will be flybys of small celestial bodies such as comets and asteroids.

JPL selected MULTI software development tools, optimizing compilers, and C and C++ compilers to develop software that implements the bulk of Deep Space 1's mission planning, flight system control, navigation, and attitude control functions. A VMEbus system will provide all of the navigation, guidance, control, propulsion, instrumentation, and telemetry electronics for Deep Space 1. A radiation-hardened PowerPC-based CPU board running the VxWorks real-time operating system will serve as the main con-



NASA's Deep Space 1 craft will be controlled autonomously.

troller. It executes a LISP program that handles fault recovery, a C++ program that provides mission planning, and a C program that handles flight systems control, attitude control, and navigation.

Deep Space 1 will be used to validate several NMP technologies, including an autonomy remote agent that provides overall mission planning and control for the craft; autonomous cruise optical navigation and control; beacon mode operations that simplify ground control and reduce telemetry costs; and an advanced celestial sensor.

Backup 64 GB An Hour To The Strongest Tape Ever Made



Plug Compatible With

Alliant
 Alpha Micro
 Altos
 Amdahl
 Apollo
 Arix
 AT&T
 Basic-4
 Bull
 Concurrent
 Convergent
 Data General
 Digital
 Gould/Encore
 Harris
 Honeywell
 HP
 IBM PC/Compatible
 IBM Midrange/Mainframe
 ICL
 Intergraph
 Macintosh
 McDonnell Douglas
 Motorola
 NCR
 NeXT
 Novell
 Pertec
 Prime
 Pyramid
 Sequent
 Silicon Graphics
 Stratus
 Sun
 Texas Instruments
 Unisys
 Ultimate
 Wang
 Windows NT

Let's face it, your backup is only as good as your tape. And all the performance in the world won't get your data back if your tape is weak or dirty. Fortunately, there's no need to compromise. The CY-8000 is the safest, the most reliable, *and the fastest* 8mm tape drive on the market.

The CY-8000 uses **Advanced Metal Evaporated** media, a 100% cobalt, 2-layer tape that features a diamond-like coating for exceptional durability. And it's the *only* 8mm drive with a **built-in head cleaner** to keep the tape path free of contaminants, further ensuring data integrity and virtually eliminating the time and expense associated with cleaning kits.

In addition to superior design, the CY-8000 offers unbeatable performance. Able to store **25 GB at 3 MBS**, uncompressed, you can achieve up to **125 GB at 9 MBS** with optional data compression. With 257% more capacity and 500% greater speed* than industry standard 8mm drives, the CY-8000 can backup faster to fewer tapes.



The superior design of the AME tape makes it suitable for 20,000 passes.

For maximum flexibility, our exclusive Advanced SCSI Processor option provides five recording modes — **striping, mirroring, cascade, independent, and offline copy/verify**. So you can easily make duplicate tapes for off-site storage or data exchange, build fault tolerance, or simply maximize performance to accomplish bigger backups in less time. With the Advanced SCSI Processor, you've got a complete data storage management tool.

Available in a single or multi-drive desktop, rack mount, or library configuration, the CY-8000 is scalable to **15.75 terabytes**. If you need to ensure the safety of your company's critical data, don't trust anything less.



Compact in size, the CY-8000 can store up to 125 GB on each tape.



Automate access to up to six drives and 125 tapes with our intelligent tape library.


* Uncompressed; CY-8000 performance advantages are even more impressive with data compression.

(757) 833-9000

CYBERNETICS

111 Cybernetics Way • Yorktown, VA 23693 • Fax (757) 833-9300

Application Briefs

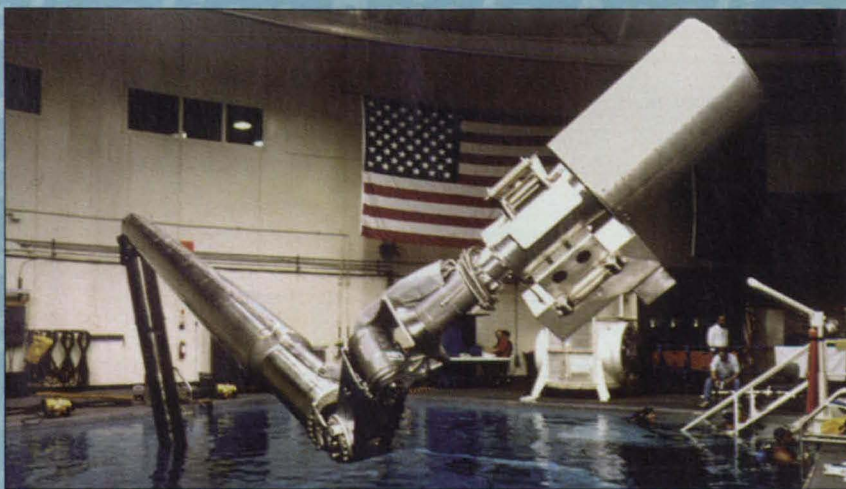

The WRMS wrist and end effector are shown out of the water in the 25-foot tank at Johnson Space Center's Weightless Environment Training Facility.

Streamlining Design of an Astronaut Training Device

ANSYS® design analysis and optimization software
ANSYS, Inc.
Houston, PA
412-746-3304; fax: 412-746-9494
<http://www.ansys.com>

The Weightless Environment Training Facility Remote Manipulator System (WRMS) is a computer-controlled, seven-jointed robot arm that is 50 feet long and built almost entirely of titanium. It operates underwater in a 25-foot tank at NASA's Johnson Space Center's Weightless Environment Training Facility, which is used to simulate weightlessness for astronaut training. Johnson Engineering Corp. of Webster, TX worked with engineers at Engineering Cybernetics of San Antonio to redesign the arm, which weighs 300 pounds less than its predecessor, but can lift 200 pounds compared to the 50-pound limit of the original arm.


The design of the WRMS is completely different than that of the shuttle arm, since the shuttle arm operates in zero gravity, not on Earth. The challenge was to simulate the operation of the shuttle arm during flight. "The WRMS has the same volume and controls as the real thing, but it is run with hydraulic instead of electric

power," said David McMahon, a Johnson Engineering project engineer at Johnson Space Center.

To evaluate lifting capacity, torque calculations were necessary at thousands of different positions of the wrist, elbow, and shoulder joints. Further, at certain positions, some portions of the arm rise above the water's surface. A variety of simulation methods, including non-linear buckling and contact analyses, were performed with the ANSYS design analysis and optimization software. An in-house proprietary loads analysis routine was combined with the ANSYS capabilities to design the new arm.

For the robot arm optimization, ANSYS was not performing a finite-element analysis with each design iteration. It used the results from the Johnson Engineering loads program as though they were analysis results. "Our program gave ANSYS the forces and torques, and it used that information to determine the maximums at each joint," said McMahon. ANSYS also was used to perform a non-linear buckling analysis of the arm's two booms.

All analyses were performed while the robot arm design was in progress. Several parts of the arm underwent major changes when analysis showed the original design would not meet stress and deflection requirements.

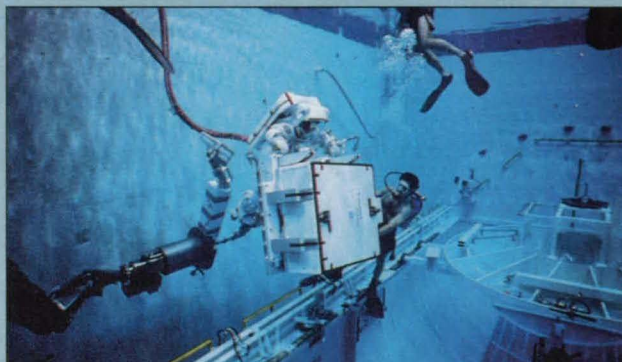

Using the WRMS, an astronaut is trained to handle a shuttle payload in a weightless environment.

NASA Tracks Satellites With Commercial Software

Epoch 2000 software
Integral Systems Inc.
Lanham, MD
301-731-4233; fax: 301-731-9606
<http://www.integ.com/>

The number of personnel necessary to track NASA's low-earth-orbit (LEO) satellites is being reduced, and the capabilities of ground systems are being boosted with the aid of Epoch 2000 software. Several satellite command and control functions, including launch control and monitoring, and in-orbit operations support are provided by the UNIX-based software, which is being integrated by engineers from AlliedSignal of Columbia, MD into a ground system called Low Earth Orbit Terminal (LEO-T). LEO-T will be installed at NASA facilities at Wallops Island, VA and Fairbanks, AK this year.

The software will generate its own schedule for monitoring LEO satellites and automate other satellite monitoring functions that formerly required the expertise of a NASA specialist. "The big improvement in the system is the automation," said Steve Bundick, a NASA engineer with Goddard Space Flight Center's Wallops Flight Facility. "Our statement of work required the system to operate unmanned." Bundick said NASA chose the off-the-shelf software to "keep costs down and give better reliability."

THE BEST CFD SOLUTION ON THE PLANET

FUNCTION/PERFORMANCE/COST



Trying to solve real-world fluid flow problems? Finding commercial CFD software prices astronomical, with capabilities that are decidedly earthbound? Search no more.

Function.

CFD2000 is a powerful engineering tool that can solve your fluid flow problems, whether you need to investigate the intricacies of blood flow in the tiniest capillaries of the human body, or compute the spread of an airborne pollutant over half a continent. CFD2000 can do it all. And with CFD2000's intuitive 3D model-building tools and intelligent menus, you are guided each step of the way—from grid generation to visualization.

Performance.

CFD2000 is fully compatible across desktop workstation platforms, and runs under both UNIX and Windows 95/NT. And, thanks to Adaptive's twenty years' experience in software optimization and algorithm development, CFD2000 delivers the fastest number crunching capability around.

Cost.

CFD2000's prices are down-to-earth. Our prices are well below what you'll find in other CFD software packages, and our CFD turnkey systems offer the best cost-performance solution on the market.

You won't find a CFD capability that compares to CFD2000 at such an affordable price. But please try. Talk to the other guys—then give us a call. CFD2000. You'll be amazed at what it can do for you.

www.adaptive-research.com

**Complete CFD turnkey system
available for under \$23,000!**



Windows NT/95 • Pentium Pro System

adaptive™
RESEARCH
a Division of
Pacific-Sierra Research Corporation

2901 28th Street, Suite 300
Santa Monica, California 90405
(800) 326-5155, Fax (310) 314-2323

4960 Corporate Drive, Suite 100
Huntsville, Alabama 35805
(205) 830-2620, Fax (205) 830-2628

Email: sales@adaptive-research.com



Special Focus: Computer Hardware & Peripherals

Apparatus Measures Directional Reflectance Properties

Advantages include precision and automation.

NASA's Jet Propulsion Laboratory, Pasadena, California

A computer-controlled, semiautomated apparatus measures the bidirectional reflectance distribution functions (BRDFs) of panel specimens of materials at three wavelengths. Other visible and near-infrared wavelengths can be conveniently added. Designed originally for characterizing nearly Lambertian panels that will serve as internal diffuse-reflection calibration standards for a spaceborne imaging radiometer, the apparatus can also be used to characterize other diffusely reflective panels. In comparison with other apparatuses that also measure BRDFs, this apparatus offers advantages of a four-axis angular-positioning capability that facilitates characterization of anisotropic specimens, greater measurement precision, and computer control of the acquisition and processing of data.


The apparatus (see figure) includes a helium/cadmium laser with a wavelength of 442 nm, a helium/neon laser with a wavelength of 632.8 nm, and a gallium aluminum arsenide semiconductor diode laser with a

wavelength of 859.9 nm. The laser output is directed sequentially through a beam-expanding telescope to produce a magnified collimated beam. This beam is then reflected through a linear polarizer, which separates the beam into a reference beam and a signal beam that are decoupled from each other. The reference beam goes directly to a silicon photodetector (the reference photodetector), which thus provides a measure of the intensity of the signal beam. The signal beam strikes the panel specimen, and the portion of light reflected from the specimen in a given direction is measured by another photodetector (the reflected-radiance detector) that is positioned and oriented to receive light in that direction. By using the ratio between the output of the reflected-radiance detector and the reference detector as the raw reflectance signal, this apparatus inherently minimizes the effects of any amplitude instability in the selected laser.

The panel specimen is centered on the optical axis of the signal beam,

and the reflected-radiance photodetector is mounted on a 30-cm-long boom that extends radially outward from the center of the panel. The panel specimen and the boom are mounted on a four-axis goniometer that includes rotary stages driven by high-torque dc motors and monitored by shaft-angle encoders. Under computer control, the rotary stages can reproducibly orient the specimen panel and the reflected-radiance photodetector at various angles to obtain BRDFs over wide ranges of angles. The level of repeatability and resolution of angular positioning is 0.01° . The overall precision with which the apparatus can determine the BRF of a specimen is represented by a standard deviation of a factor of 0.002.

This work was done by Brendan T. McGuckin, David A. Haner, Robert T. Menzies, Carlos Esproles, and Alan M. Brothers of Caltech for NASA's Jet Propulsion Laboratory. For further information, write in 11 on the TSP Request Card. NPO-19806

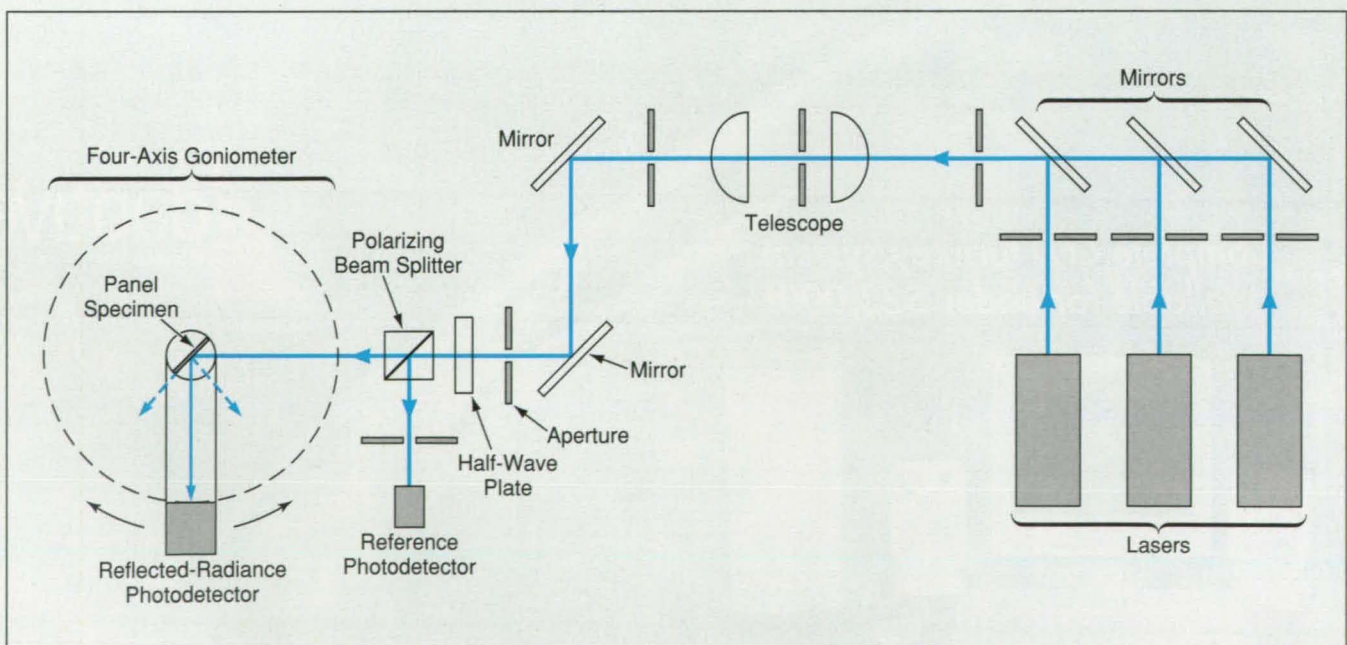

The Panel Specimen is illuminated at a selected one of three wavelengths and at a specified angle of incidence, and the light reflected at a specified other angle is measured. All angular settings, acquisition and processing of photodetector readings, and other functions are performed under computer control.


Simply OUTSTANDING

\$227³⁹*

Upgrade from
CorelDRAW 3, 4, 5 or 6

\$434⁶⁹*

Full CD-ROM
version

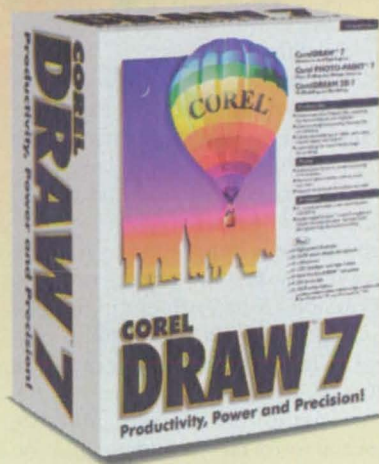

The
reviews
are in!

“Throughout CorelDRAW 7, you’ll find impressive new ease of use enhancements.”

“Graphics artists who want a well-rounded suite should give CorelDRAW a close look.”

“CorelDRAW 7 is a full-featured graphics suite with state-of-the-art tools.”

Windows Sources, January 1997

“Draw 7 will be an excellent choice for any Web page designer. . . . Draw 7 represents a real leap forward. . . . Draw users will cheer. But I think the real story about Draw 7 is its accessibility to new users. If you’ve never used an illustration app before, Draw 7 makes it easy.”

Government Computer News,
November 1996

“Graphics professionals, take note: if you have the power, Corel has the program. CorelDRAW 7 is a feature-packed behemoth with something to please professional illustrators, graphic artists, and desktop publishers alike.”

C/Net.com, November 11, 1996

“CorelDRAW 7 is the most stable and well-developed version of the program yet. Corel has taken the strongest elements from previous versions—CorelDRAW, Corel PHOTO-PAINT, and CorelDREAM 3D—and made them easier to use, more reliable, and more unified as a suite.”

PC Graphics & Video, December 1996

“At this point, no other graphics program offers the breadth of features or comprehensive automation capabilities found in CorelDraw 7 Graphics Suite.”

PC Magazine, February 18, 1997

“For the first time in several years, CorelDraw’s interface has changed significantly, yielding such innovations as a context-sensitive toolbar that alters according to the drawing tool you’re using.”

PC World, January 1997



*US\$ plus applicable taxes and shipping.



COREL DRAW 7™

Productivity, Power and Precision!

Exceed the boundaries of traditional design with CorelDRAW™ 7. Created for the professional illustrator, graphic artist and desktop publisher, CorelDRAW 7 includes Corel PHOTO-PAINT™ 7 for photo editing and bitmap creation and CorelDREAM 3D 7 for 3D modeling and rendering. Optimum performance is top priority with faster open, save and redraw across all applications. Interactive tools and utilities give you onscreen feedback, making the design process more intuitive. Explore your creative potential with CorelDRAW 7 and attain the impossible!

Includes:



Also included:

- Eight powerful utilities
- 32,000 clipart images and symbols
- 1,000 photos
- 1,000 TrueType® and Type 1 fonts
- Over 450 CorelDRAW™ templates
- 250 3D models

For More Information Write In No. 627

Millennium Modem/Channelizer Special Test Equipment

The equipment can be modified for testing different modems and multichannel demultiplexer/demodulator systems.

Lewis Research Center, Cleveland, Ohio

The Millennium modem/channelizer special test equipment ("test set" for short) is a fully programmable assembly of bit-error-rate electronic test equipment for broadband characterization of modems and of a multichannel demultiplexer/demodulator. The test set in its baseline configuration was designed for testing a specific wideband modem and channelizer that is capable of demultiplexing fifteen 80-MHz-wide channels stacked across the frequency band from 1.20 to 2.48 GHz. The test set is also designed to be readily modifiable for testing other modems and multichannel demultiplexer/demodulator systems. Developed for the Advanced Research Projects Agency, in a teaming effort with Honeywell, TRW, Raytheon, E-Systems, and Wright Patterson AFB, the test set is also available for use in industry.

The test set (see figure) contains three Broadband Integrated Services Digital Network (B-ISDN) modulators that generate octonary-phase-shift-keyed (8-PSK) data signals like those encountered in operation. These signals are mixed with local-oscillator signals for up-conversion and stacking in frequency in three adjacent channels in the set of communication channels to be passed through the multichannel demultiplexer/demodulator system to be tested. An attenuator is used to adjust the power of the signal in each channel. The test set then measures the bit-error rates of the signals put out by the modem, providing a characterization of both the demultiplexing and demodulation functions of the system.


In addition to the requirement of reconfigurability for testing different systems, two important requirements in developing the test set were to keep the cost down and to complete the test set in a timely fashion. These requirements were satisfied by using, as much as possible, a combination of purchased off-the-shelf equipment and equipment already in NASA's possession.

The test set is automated to provide the capability for expedient, reliable, reproducible tests. All equipment is computer-controlled via a general-purpose interface bus (GPIB), a Versa Module Europa Bus Extensions for Instrumentation (VXI) bus, and RS-232 serial interfaces. Signals can be coupled off to a power meter and a

spectrum analyzer for continuous monitoring, without need to remove connections during calibration or debugging. All clock and local-oscillator signals are supplied by digitally synthesized signal generators. Attenuation and switching functions are provided via VXI circuit cards.

This work was done by William D. Ivancic of Lewis Research Center. For further information, write in 47 on the TSP Request Card.

Inquiries concerning rights for the commercial use of this invention should be addressed to NASA Lewis Research Center, Commercial Technology Office, Attn: Tech Brief Patent Status, Mail Stop 7-3, 21000 Brookpark Road, Cleveland, Ohio 44135. Refer to LEW-16428.

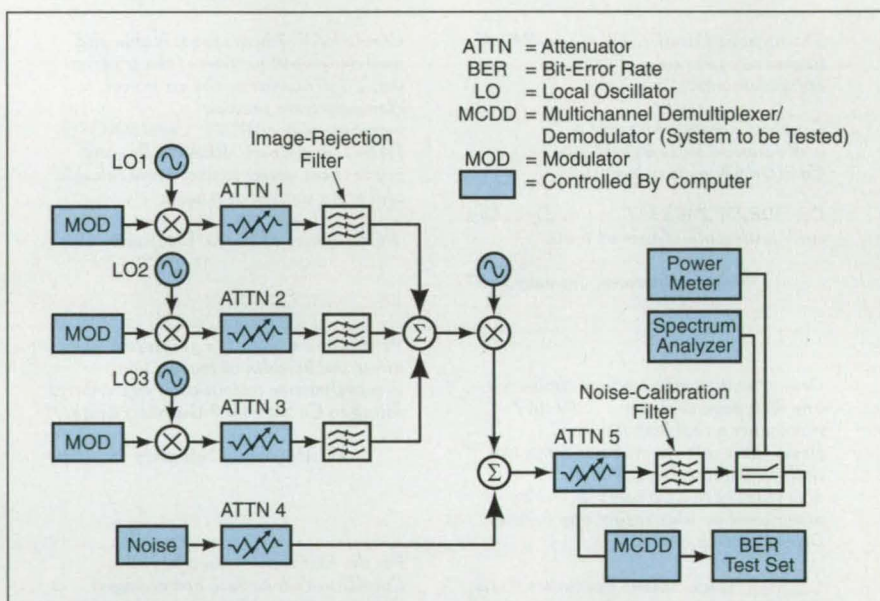

The Millennium Modem/Channelizer Special Test Equipment synthesizes 8-PSK data-communication signals for processing via the system under test, then measures the bit-error rates of the processed signals.

Portable FTIR Scatterometer Measures Surface Contaminants

Nondestructive measurements can be performed in the field.

Marshall Space Flight Center, Alabama

A rugged, portable Fourier-transform infrared (FTIR) scatterometer has been developed for use in rapidly and nondestructively identifying and measuring quantities of greasy and oily contaminants on solid surfaces. This instrument is meant to be used in conjunction with other contaminations-

measuring instruments to ensure that inspected surfaces are clean enough for subsequent coating and/or adhesive-bonding treatments.

Typical contaminants include fluorocarbons, silicones, hydrocarbons, and other organic compounds. Commercial laboratory FTIR spec-

trometers can be used to identify and measure such contaminants, but are too large and delicate to be carried into the field to inspect surfaces at all orientations in situ; thus, it is necessary to engage in destructive inspection procedures wherein one cuts small coupons out of inspected sur-

New to Finite Element Analysis ?

- Intuitive, True Windows User Interface
- Easy to Learn
- Context Sensitive, On-Line Help
- Beam, Shell and 3-D Automatic Meshing
- Extensive Model Checking

... the system you can use with confidence, even if you only use it occasionally. ☒

Experienced with Finite Element Analysis ?

- Support for twenty FEA programs including: ABAQUS, ANSYS and NASTRAN
- Supports Static, Modal, Buckling, Nonlinear, Frequency or Transient Response and Heat Transfer Analyses

... the advanced tools you need to handle the toughest jobs. ☒

Also Need an Analysis Program ?

- Consider one of these solutions bundled with FEMAP as the pre and postprocessor: ABAQUS/NT, CAEFEM, CSA/NASTRAN, MSC/NASTRAN for Windows, MTAB, STARDYNE, UAI/NASTRAN or WECAN



... ever wonder why leading FEA companies have chosen FEMAP ? ☒

Need to Use CAD Geometry ?

- Direct access to ACIS or Parasolid Models from: AutoCAD, AutoCAD Designer, SolidWorks, MicroStation Modeler, Intergraph Solid Edge, Unigraphics, Trispectives and many more
- Access other geometry thru DXF or IGES

... the system you have to try to believe ! ☒

FEMAP

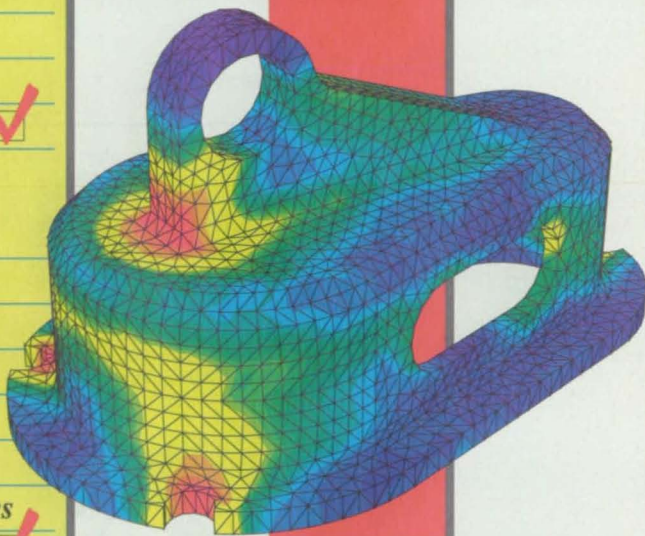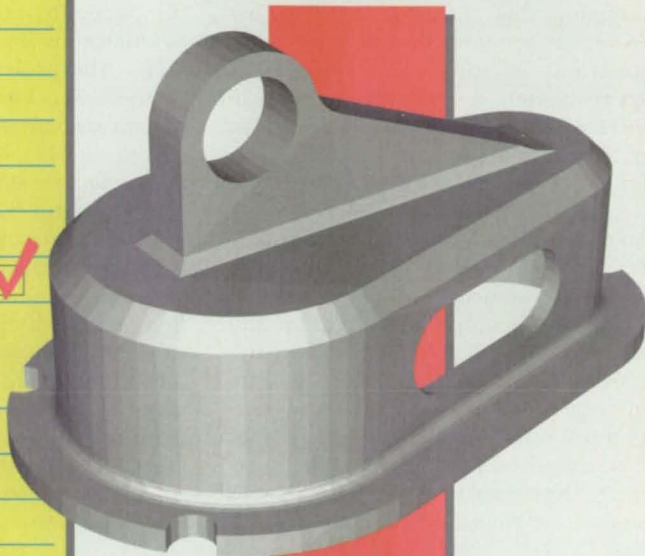

***FEA Has Never Been
This Easy Before !***

Enterprise Software Products, Inc.

P.O. Box 1172 • Exton, Pennsylvania • 19341

Phone: 610-458-3660

E-Mail: femap@entsoft.com

FAX: 610-458-3665

Web: <http://www.entsoft.com>

FEMAP Advanced Meshing Modules utilize ACIS software by SPATIAL TECHNOLOGY INC. or Parasolid software by Electronic Data Systems, Inc. All product names are trademarks or registered trademarks of their respective owners.

**Contact us
today for a
FREE DEMO** ☒

faces and brings them to the laboratory instruments.

FTIR spectroscopy is a powerful tool for chemical analysis and is a mature discipline that has made excellent use of recent progress in computer hardware and software. In a typical FTIR spectrometer, a collimated beam of infrared light in the wavelength range of 2 to 25 μm (the predominant wavelength range of black-body radiation at a temperature of about 1,600 K) is modulated by a Michelson interferometer, focused onto or through a specimen, and refocused onto a detector. The detector outputs are digitized and the resulting data are Fast-Fourier-transformed into a spectrum of beam intensity, in arbitrary units, as a function of wavelength or wave number (reciprocal of wavelength). The spectrum gives data on the identities and amounts of chemical functional groups.


In a given application, FTIR spectroscopy involves measurement of either transmittance, diffuse reflectance, or specular reflectance. Each of the three types of measurement is advantageous for some kinds of specimens. The present instrument utilizes diffuse reflectance, which is preferable for measurements on rough and/or curved surfaces; e.g., flat or curved surfaces that have been sandblasted.

The present instrument (see figure) is an automated, computer-controlled, high-performance FTIR spectrometer with an integral measurement head that includes a diffuse-reflectance optical measurement head, all in a compact, lightweight package that features rugged construction for use in the field. The FTIR spectrometer is a commercially available unit adapted to fit into the package. The diffuse-reflectance optical measurement head

is a half-scale version of a commercial unit that contains ellipsoidal ("barrel ellipse") and off-axis paraboloidal reflectors; the barrel-ellipse design provides for collection of scattered radiation and excludes specularly reflected radiation. The instrument weighs less than 13 lb (6 kg). The computer can be programmed to provide spectral matched filtering, enabling automated identification of spectral features.

This work was done by Bill H. Nerren of Marshall Space Flight Center, G. Louis Powell of Martin Marietta Energy Systems, Inc., and John T. Neu and R. Samuel Dummer of Surface Optics Corp. For further information, write in 22 on the TSP Request Card.

Inquiries concerning rights for the commercial use of this invention should be addressed to the Patent Counsel, Marshall Space Flight Center; (205) 544-0021. Refer to MFS-26421.

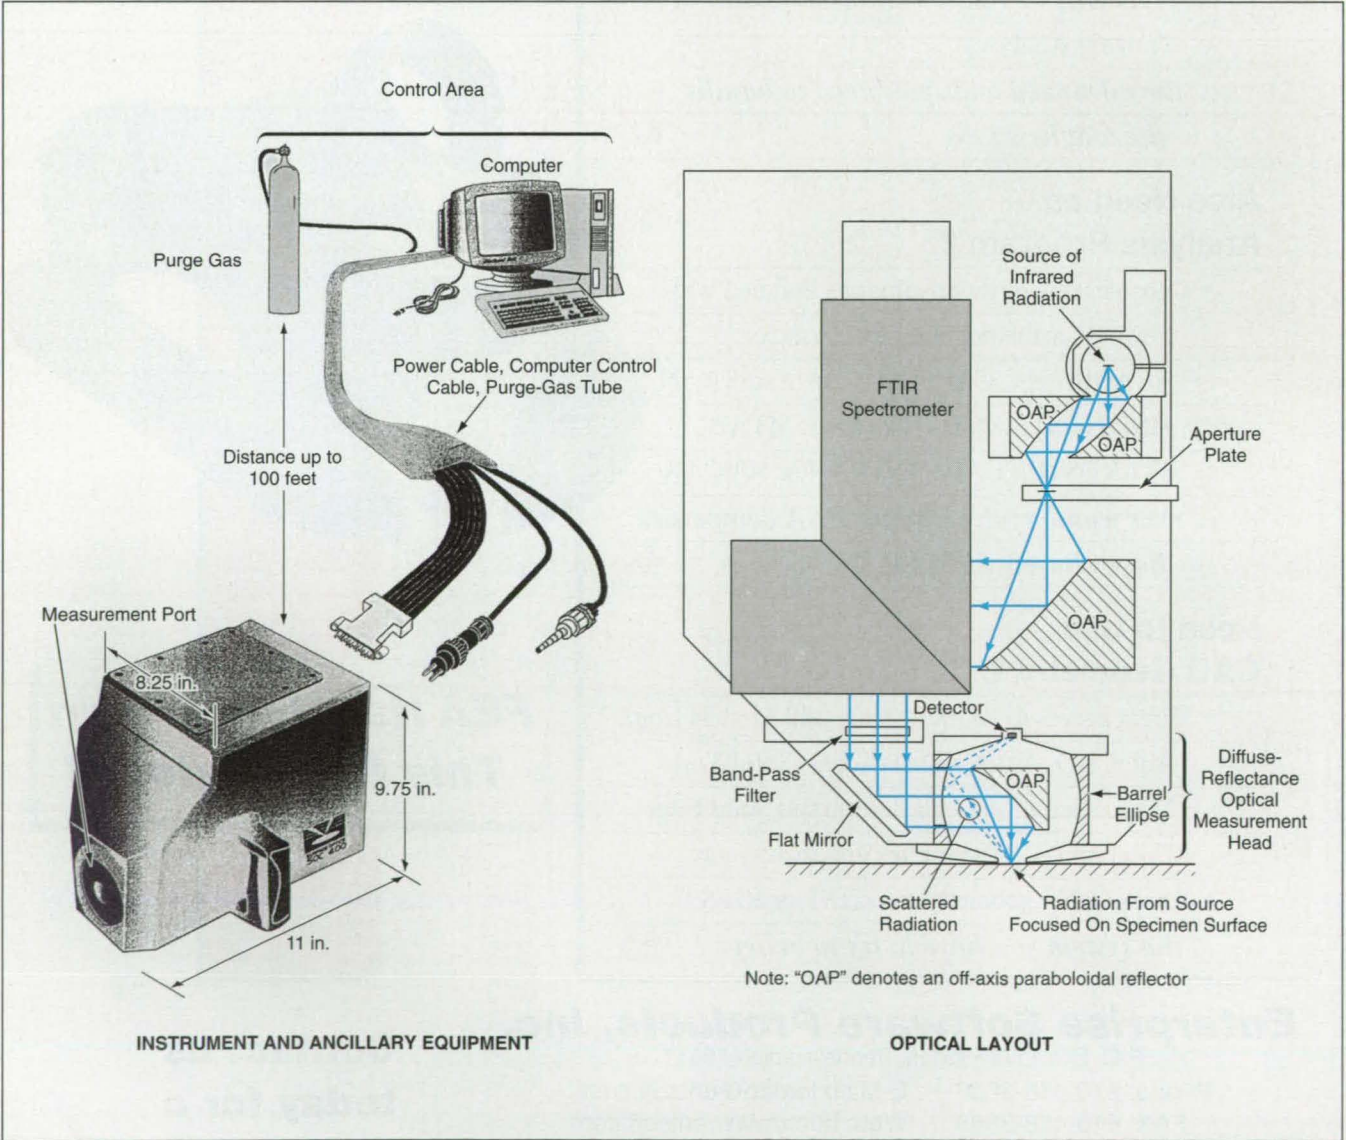

The **Portable FTIR Scatterometer** includes a scaled-down version of a commercial diffuse-reflectance optical measurement head combined with a commercial FTIR spectrometer in a compact, lightweight package. The instrument operates under computer control, is nondestructive, and can be used in any orientation.

Monkey on your back #31: How to find a UNIX[®] workstation that loves running Windows NT.[®]



*DIGITAL Personal
Workstation
for Windows NT
and UNIX*

*Choice of
433MHz, 500MHz and 600MHz
Alpha 21164 processors*

*ECC SDRAM memory
0-2MB L3 cache*

5 PCI slots (2 PCI, 3 PCI/ISA)

*DIGITAL PowerStorm[®]
3D Graphics, AccelPro Series,
Matrox Millennium Graphics*

digital[™]
Whatever it takes.[™]

Until now, purchasing a workstation required you to choose between UNIX[®] and Windows NT[®]. Thanks to the new DIGITAL Personal Workstation au-Series, that's no longer the case. It's the only RISC workstation that truly runs both UNIX and Windows NT. Which means if you're currently using UNIX, you can easily migrate to Windows NT, whether you want to do it a year from now or this afternoon. And

not only does the DIGITAL Personal Workstation dramatically reduce your purchase, support and migration costs, but at speeds up to 600MHz, it's the fastest workstation you can buy. What's more, the DIGITAL Personal Workstation runs all major UNIX and Windows NT applications today. So the choice is clear: if you want a workstation that gives you the best of both worlds, the new DIGITAL Personal Workstation is the one you're sure to love. **For more information, or to learn more about our free 2.1 GB disk offer, call 1-800-DIGITAL and**

ask for a workstation specialist or visit www.workstation.digital.com.

288
© Digital Equipment Corporation, 1997. DIGITAL and the DIGITAL logo are trademarks. PowerStorm is a registered trademark, and Whatever it takes is a service mark of the Digital Equipment Corporation. UNIX is a registered trademark in the United States and other countries, licensed exclusively through X/Open Company, Ltd. Windows NT is a registered trademark of the Microsoft Corporation in the U.S. and other countries.

For More Information Write In No. 533





Full-Flow-Field-Tracking Particle-Image Velocimetry

Velocities and accelerations can be determined over entire flow fields.

Lewis Research Center, Cleveland, Ohio

Full-flow-field-tracking (FFFT) particle-image velocimetry (PIV) is a technique for obtaining quantitative and qualitative data on flows from sequences of images of small seed particles entrained in the flows. FFFT PIV is closely related to other velocimetric methods, described in several previous articles in *NASA Tech Briefs*, that are also denoted by "PIV" and by similar names like "particle-tracking velocimetry" (PTV) and "particle-displacement tracking" (PDT).

The figure schematically illustrates a flow experiment conducted with a FFFT PIV apparatus, which is similar to the apparatuses used in the other techniques mentioned above. Illumination is supplied by a continuous-wave argon-ion laser with a power of 8 W. An assembly of cylindrical lenses forms the laser beam into a sheet of light to illuminate a plane of interest in the test section of a wind tunnel, water tunnel, oil tunnel, or other flow apparatus.

The flow is seeded with highly reflective particles with sizes up to about 10 μm . For studying flows of water or oil, a suitable particle material is MgO_2 , which is nearly neutrally

buoyant in those liquids. For studying flows of air, the selection of particle materials is more problematic; care must be taken to eliminate spurious particle motions (e.g., bouncing off surfaces of objects) in specific experimental regimes.


A low-luminosity charge-coupled-device video camera with a resolution of 756 horizontal pixels by 581 vertical pixels is focused on the illuminated plane. The camera is equipped with long-distance-microscope optics that can magnify a selected portion of the plane by a factor as large as 100 to reveal details of the flow field. The output of the camera can be either digitized and stored directly in a computer memory or else recorded on video tape and subsequently digitized for processing by the computer.

The camera operates at a frame rate of 30 Hz; this frame rate is adequate as long as the flow under observation is not so fast that images of particles become continuous streaks across the field of view. To provide stroboscopy for viewing such rapid flows, the optical system includes a rotating laser-beam-chopping disk. The speed of rotation can be chosen to obtain strob-

ing frequencies at integer multiples of 30 Hz, up to a maximum of several kilohertz.

Sequences of images are processed by a computer integrated image-quantification (CIIQ) method, which is a partly manual, partly automated method for identifying images of individual particles and tracing their motions across the flow field during a chosen observation interval. The CIIQ method involves three computer programs called "FACT," "SNAP," and "VADT." Using calibration images obtained by focusing the video camera on graph paper, FACT generates magnification factors for the recorded images. Then by use of a digitizing puck (similar to a mouse) and pad along with SNAP, a technician visually identifies and digitizes the position of each particle of interest in the succession of strobe or frame intervals that, collectively, constitute the observation interval. The technician continues this process until the digitized particle trajectories are sufficiently numerous to represent the flow field to the desired level of detail.

The digitized trajectory data are fed to VADT, which fits the sequence of

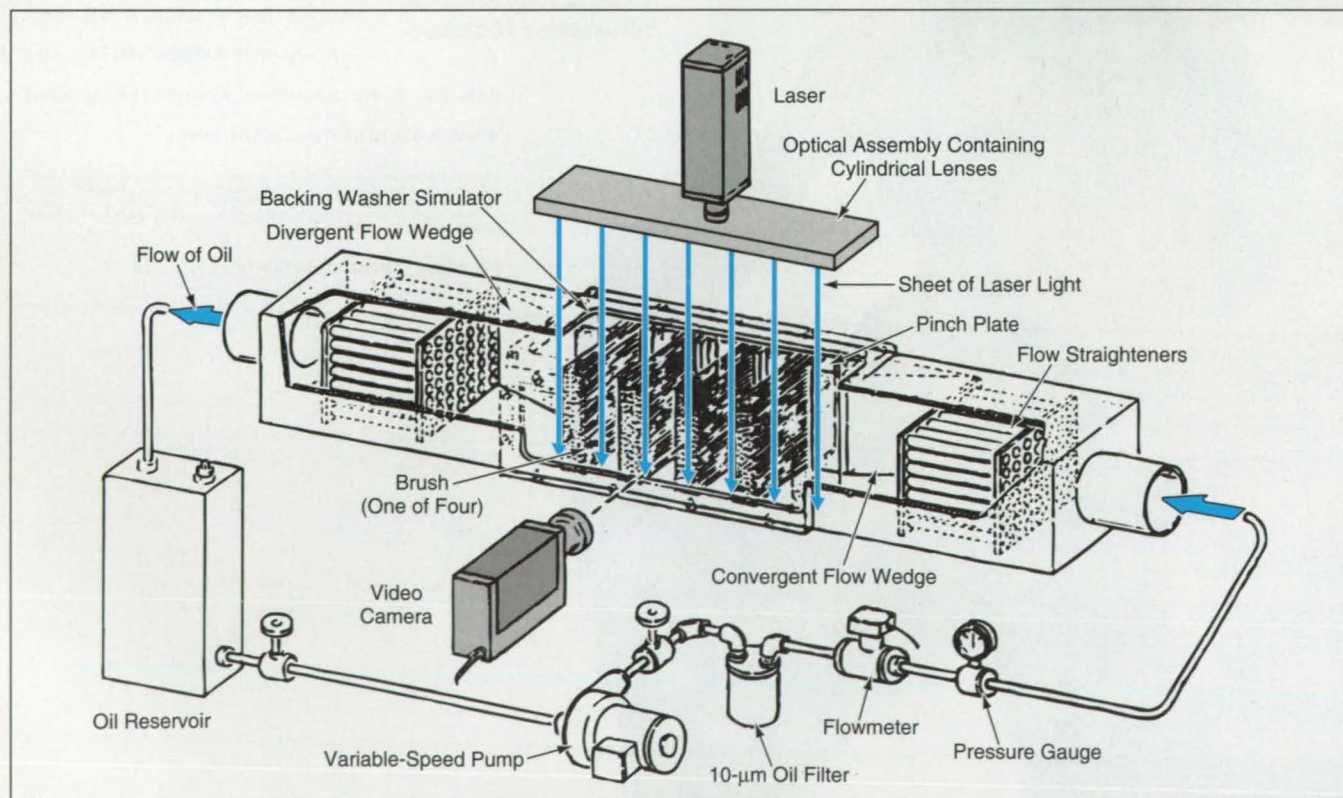

An Oil Tunnel Is Instrumented with an FFFT PIV apparatus to study flows through brushes that represent brush seals in turbomachines. The FFFT PIV apparatus has also been used to study flows of water past cylinders, airfoils, and other objects, and flows of air past an array of pins in staggered rows.

positions of each particle to a polynomial (up to ninth order) function of time. Velocities and accelerations are computed as the first and second derivatives, respectively, of the polynomials. The resulting velocity and acceleration data from the magnified small areas of the plane of interest are then computa-

tionally assembled to obtain a representation of the flow field throughout the plane.

This work was done by Victor A. Canacci and M. Jack Braun of the University of Akron for Lewis Research Center. For further information, write in 94 on the TSP Request Card.

Inquiries concerning rights for the commercial use of this invention should be addressed to NASA Lewis Research Center, Commercial Technology Office, Attn: Tech Brief Patent Status, Mail Stop 7-3, 21000 Brookpark Rd., Cleveland, OH 44135. Refer to LEW-16309.

Optimization of Particle-in-Cell Codes on RISC Processors

A combination of strategies yields appreciable speedup.

NASA's Jet Propulsion Laboratory, Pasadena, California

Several strategies for maximizing the speed of execution of particle-in-cell (PIC) codes on reduced-instruction-set-computer (RISC) processors have been developed. PIC codes have long been used in plasma physics to compute motions of charged particles in electric and magnetic fields generated by themselves. Algorithms for efficient execution of PIC codes on parallel processors were available prior to the development of the present strategies, but these algorithms do not address the efficient implementation of the codes on individual processors. The present strategies are intended to fill this gap.

The strategies were evaluated in computational experiments, using an established and previously well-tested Fortran electrostatic-field/charged-particle PIC code. The particular code was chosen because it is conceptually simple yet adequate for demonstrating the strategies. The time step in an electrostatic PIC code comprises three main parts: deposit, field solve, and push. In the deposit step, charge is deposited from the particles onto a grid to find the charge distribution. Each particle deposits charge to several nearby grid points and many particles deposit charge to each grid point. In the field-solve step, a Poisson equation is solved on the grid to find the electric field. In the push step, the electric field is interpolated to the particles to find their accel-

erations. Each particle reads the electric field from several nearby grid points and each grid point is read by many particles. These three main parts are repeated for as many time steps as desired. The deposit and push steps are characterized by memory references that are effectively random and change from one time step to the next, making these steps challenging for computer-

memory systems that are optimized for regular reference patterns.


The optimization strategies fall into two categories, one of which involves reorganization of data to improve utilization of cache memory. This category includes strategies for storing data on particles, or on both particles and fields, at contiguous memory locations. Also included in this category is a strategy for improving reuse of

cache memory by occasional sorting of particles (see figure).

The second category involves reorganization of code to increase the efficiency of pipelined arithmetic. Strategies in this category include removing "IF" statements, reordering calculations, precalculating integer conversions, using one-dimensional addressing, and separation of "load" and "store" operations in the deposit step.

The results of the tests showed that no single strategy made a huge difference when applied alone, but that substantial improvements in performance (in terms of increases in processing speed) were achieved by aggregating the strategies. The amounts of improvement differed among processors and ranged between factors of 1.38 and 3.43.

This work was done by Viktor Decyk, Steve R. Karmesin, and Paulett C. Liewer of Caltech and Aejnt de Boer of UCLA for NASA's Jet Propulsion Laboratory. For further information, write in 12 on the TSP Request Card. NPO-19866

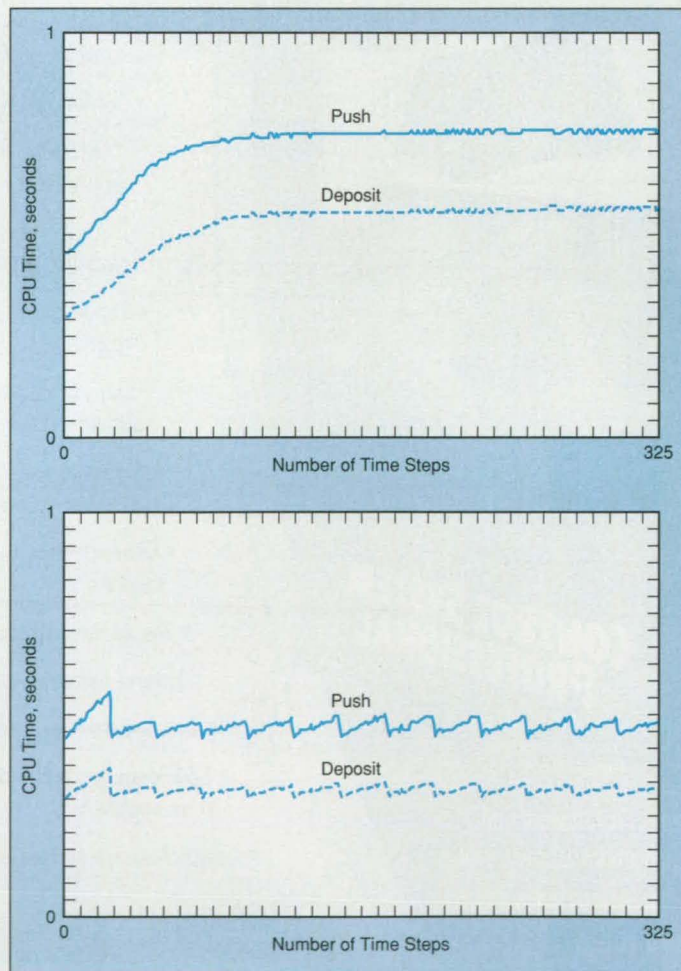

Central-Processing-Unit (CPU) Time for the push and deposit steps in a test case involving 327,680 particles tended to increase, in the absence of sorting, as particles became randomized by the computation. A simple bin sorting routine applied every 25 time steps proved effective in limiting the increase in CPU time without incurring excessive sorting overhead.

Call GMR
or visit our web site
for information
on how we can take
your career into the 21st Century.

Which Global Integrator Will Take Your Enterprise Into The 21st Century?

Software Engineering
Services

Groupware/Internet
Solutions

Contract
Manufacturing

Calendar Year 2000
Solutions & Services

Integrated
Telecommunications
Solutions (CTI)



Government

Contract Specialists:

— GSA Schedules:

70 A, B/C, 58

— GWAC

FEDSIM

Dept. of Justice

NASA SEWP II

— Agency Specific

Contracts

Integration &

Maintenance Provider

— Commercial

— Government

— Subcontracting

Acquisition, Operations,

Resource Services

Assistance Available

800-232-4671
www.gmri.com

We're Government Micro Resources, Inc. (GMR), but there's nothing micro about us.

Leading edge solutions, complete services, and best-of-breed products are hallmarks of our success. For fifteen years, GMR has been addressing customer's Information Technology needs. From laptop to mainframe and everything in between, around the beltway or around the world, GMR is the integrator with global vision.

Call us today for more information on how we can take your enterprise into the 21st Century.



NASA Langley - NAS1-97101
NASA Ames - NAS2-14352

GSA Schedule B/C - GS-35F-4566G
GSA Schedule A - GS-35F-0097D
GSA Schedule 58 - GS-35F-1083D

GMR



Government Micro Resources, Inc.

Sunnyvale, CA • Norfolk, VA • Mannington, WV • San Antonio, TX • Denver, CO

7203 Gateway Court • Manassas, VA 20109

(703) 330-1199 • (703) 330-1722 Fax

For More Information Write In No. 660



SEWP II - NAS5-32898

Digitized X-Radiographs Indicate Densities in Ice Samples

Modern image-processing techniques are used.

Lewis Research Center, Cleveland, Ohio

An improved method for measuring the local and total densities of ice accreted on airfoils incorporates contact x-radiography, along with modern image-acquisition and image-processing techniques (see Figure 1). The method was developed to facilitate

a more detailed study of internal characteristics of ice formed on airfoils in wind-tunnel experiments under conditions that resemble those encountered in flight. Measurements of density, like those provided by this method, are needed to study the structure and formation of ice and to improve density values employed in computer programs that mathematically model the accretion of ice.

The improved method was derived partly by extending an older contact-x-radiographic technique for measuring the densities of ice in hailstones. In the improved method, the first step is to remove samples of accreted ice from a test airfoil and store them in a freezer. Next, while maintaining a temperature of 0 °F (-18 °C), the samples are sliced on a band saw to a thickness of about 10 mm, then further cut on a microtome to obtain samples with parallel sides and with a thickness of 3 mm. Each sample is placed on polyethylene terephthalate film on top of a sealed packet of x-ray film. Also placed on the film is a 3-mm-thick reference sample of clear ice. The samples and film are then exposed to x rays. Typical exposure conditions are a source potential of 25 kV, source current of 1 mA, and exposure time of 30 seconds.

To extract fine detail, the radiographs are scanned by a high-resolution film scanner with a resolution of 1,100 pixels per inch (433 pixels per centimeter). Then the digitized image data is processed to convert local image-intensity values into local ice-density values, using the image intensities and the known density of the reference samples as calibration data.

This method affords several advantages. The radiographs reveal interior

density variations that would ordinarily be concealed from the naked eye. Digitization of the images makes it possible to use image-processing techniques to determine the positions of image features with high repeatability and accuracy. Image-processing techniques can be used to evaluate ice formation and morphological anomalies or to reveal features (see Figure 2) or characteristics that might otherwise go unnoticed. Digitization also makes it convenient to store and retrieve image data, and eliminates the need to handle original radiographs for each analysis.

Variability in the results obtained by this method can be attributed to two sources: (1) quantization error and (2) nonuniformity in the thicknesses of ice samples. Quantization error can be reduced by digitizing the images to greater numbers of bits. Thicknesses of samples can be made more nearly uniform by taking smaller slices to reduce flexing of the microtome blade.

This work was done by Mario Vargas of Lewis Research Center and Howard Broughton and James Sims of Cortez III Service Corp. For further

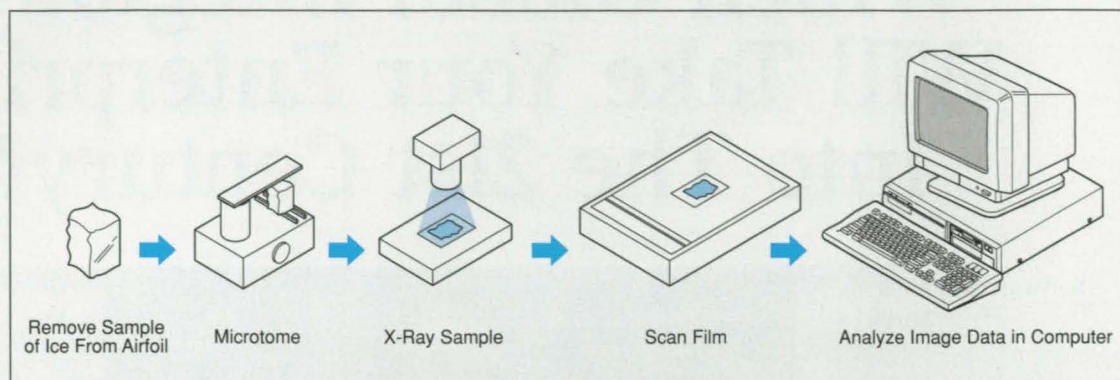


Figure 1. A Sample of Ice From an Airfoil is sliced thin on a microtome and used to make an x-radiograph. The radiographic image is digitized and processed to determine the local density of ice throughout the sample.

information, write in 48 on the TSP Request Card.

Inquiries concerning rights for the commercial use of this invention should be addressed to NASA Lewis Research Center, Commercial Technology Office, Attn: Tech Brief Patent Status, Mail Stop 7-3, 21000 Brookpark Road, Cleveland, Ohio 44135. Refer to LEW-16430.


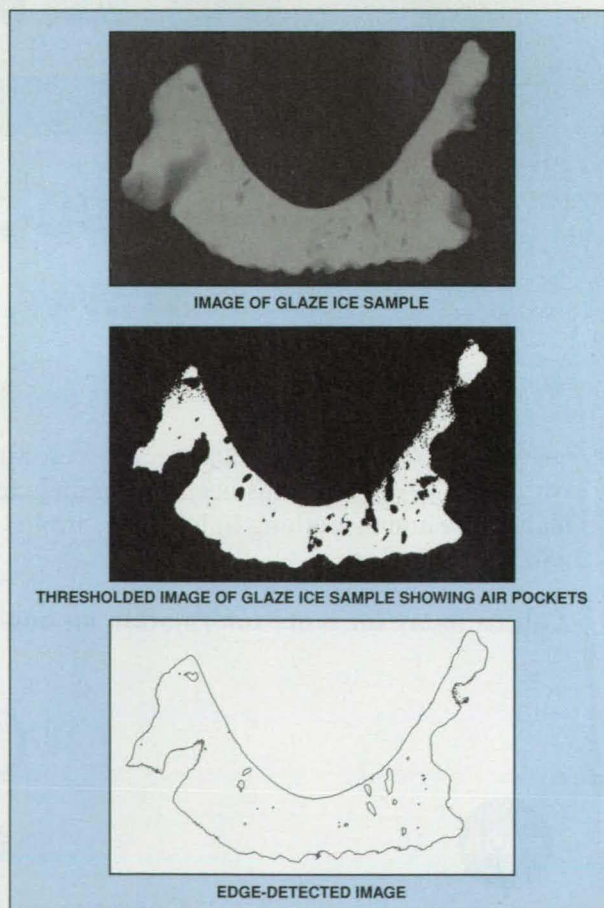


Figure 2. These Images Were Obtained by Digital Processing of an x-radiograph of a sample of glaze ice. Note how thresholding of density levels and the application of an edge-detection algorithm reveal different aspects of pockets of air trapped in the ice.

What Is Boundless Innovation?

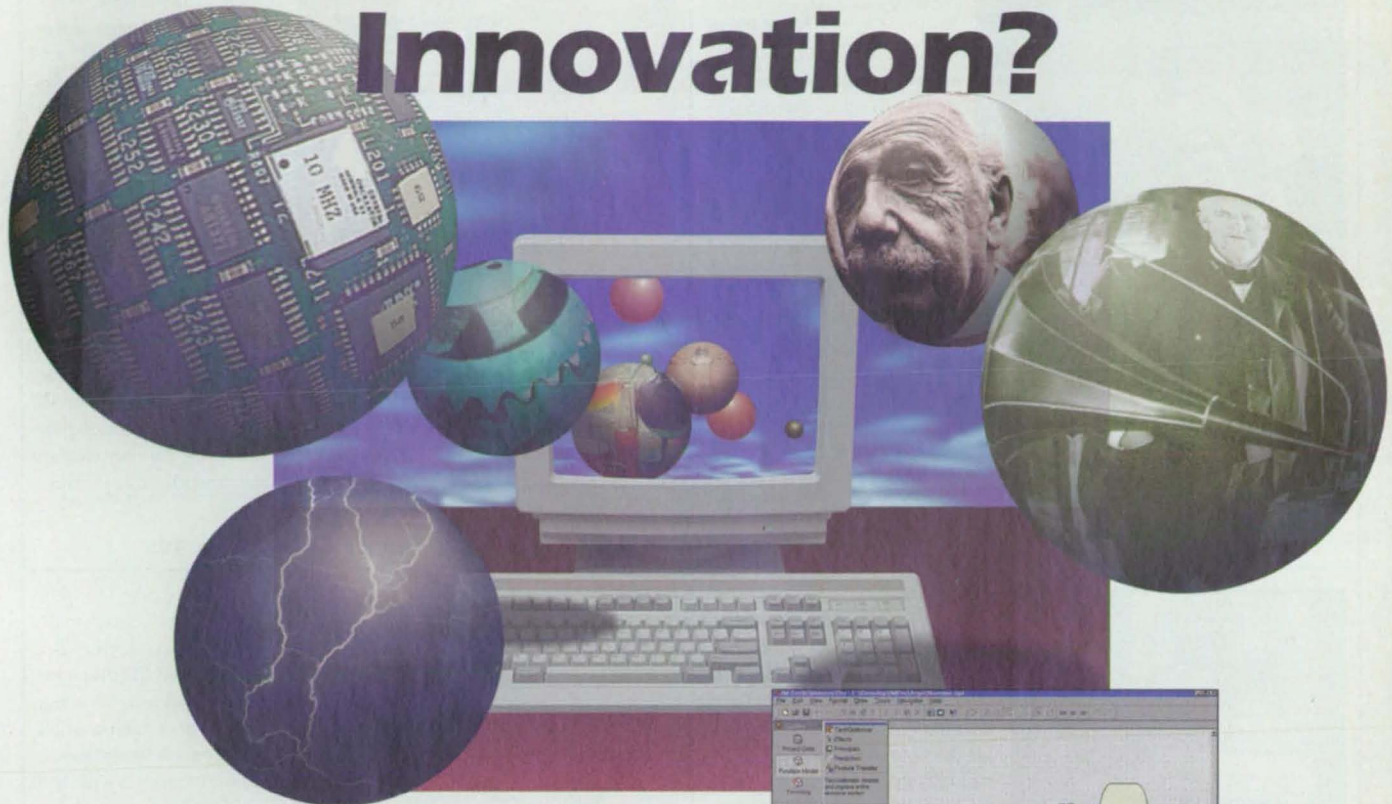


TechOptimizer™ PROFESSIONAL EDITION

TechOptimizer Professional Edition is the only software product that assists you in the conceptual stage of design. This product offers you a systematic approach for thinking outside the box and generating new solutions without compromise.

TechOptimizer Professional Edition helps you out-think your competition by guiding your thought process. This unique software tool helps you to correctly state and solve your problems across many fields of engineering.

TechOptimizer Professional Edition allows you to:

- Speed the development of new products/processes
- Avoid expensive errors in the early stages of design
- Enhance inventive ideas by expanding your knowledge-base

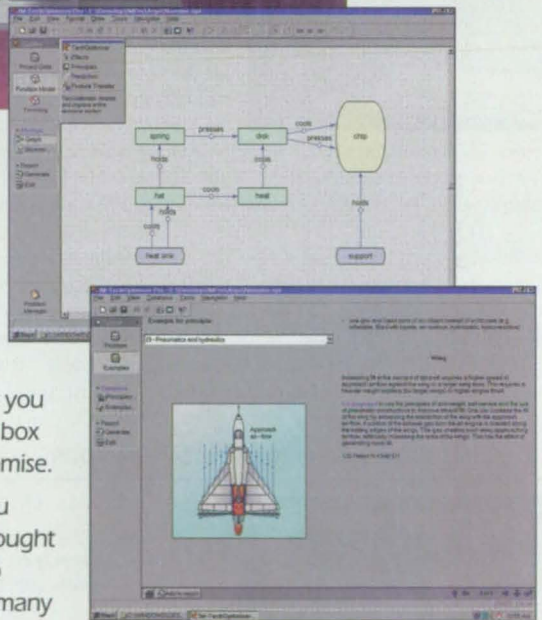

Invention
Machine®


Software That Invents™

Call about our FREE seminars and FREE Demo Disk!

800-595-5500 www.invention-machine.com

Trademarks and registered trademarks include Invention Machine, Software That Invents, and TechOptimizer.

For More Information Write In No. 639

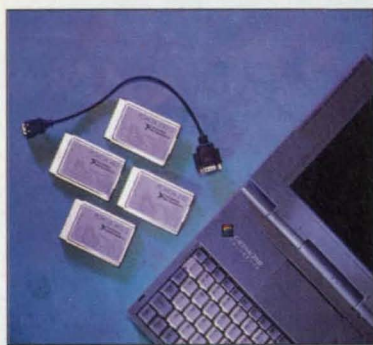

sion rate of more than 115 kb/s.

Both interfaces include a COM driver for Windows 95 and are compatible with standard PC COM ports. The PC operating system performs all board configuration. Users can connect with most serial devices by sending strings to, and reading from, the COM port. Application software packages and development environments can access the interfaces using standard serial I/O functions.

For More Information Write In No. 703



Intergraph Computer Systems, Huntsville, AL, has announced the TD Series of Windows/Windows NT-based **3D personal computers** powered by Intel Pentium® processors with MMX™ media enhancement technology. Users can perform 3D Web content creation, view

Web sites in 3D with a VRML viewer, CAD, or animation with the Intense 3D graphics accelerators — the Intense 3D Pro 1000 for workstation-class 3D graphics, or the Intense 3D 100 for general-purpose 2D/3D applications.

The TD-22 system features a single 133, 166, or 200 MHz Pentium processor; and 16-64 Mb RAM. The TD-25 features a single 166 or 200 MHz Pentium processor with MMX technology and 16-64 Mb RAM; and the TD-220 offers a single 180 or 200 MHz Pentium Pro processor with 16-256 Mb RAM. All systems are equipped with 3D sound technology, and come with Microsoft Office 97 and Intergraph DMI-compliant InterSite software.

For More Information Write In No. 709




Contrast screen utilizes glass with a low transmission rate and features anti-glare ARAG® screen treatment.

OnView® controls allow users to make screen adjustments such as pincushion, contrast, degauss, moire, and brightness via an on-screen menu. ViewMatch® enables accurate matching of colors on the screen with a color output from a printer. The monitor, with Plug & Play+, supports the Windows 95 standard for automatic monitor configuration and installation.

For More Information Write In No. 711

National Instruments, Austin, TX, offers the PCM-CIA-232 and PCMCIA-485 **serial interfaces** that connect to RS-232 and RS-485 devices, respectively. They give notebook computers control of serial devices for portable or remote applications. The asynchronous interfaces are Windows 95 Plug and Play compatible and feature serial transmission

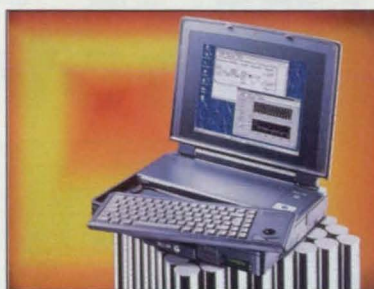

Kontron Elektronik, Newport Beach, CA, has introduced an enhanced version of the IN Lite P series of rugged **notebook computers**, which is equipped with a 166-MHz Intel Pentium® processor with MMX™ technology. The computer includes a full-length slot and two PCM-

CIA slots, and is enclosed in a sealed magnesium case. A universal AC/DC power supply, internal battery operation, and a 2 GB hard disk also are included.

The computer is available with 32 Mb RAM, expandable to 64 Mb, and features a 10.4" TFT VGA display, 2 Mb graphics controller for all color resolutions, and optional 512K cache. A 12.1" TFT XGA display with 1024 x 768 resolution also is available. The unit can be used in environments exposed to dust, moisture, shock, and vibration. Prices start at less than \$10,000.

For More Information Write In No. 705



Spacotec IMC Corp., Lowell, MA, offers the Spaceball® 3003™ **3D input device** for workstation-based 3D mechanical design and engineering applications. It enables users to simultaneously pan, zoom, and rotate 3D models with six-degree-of-freedom control. To move or rotate a 3D model,

the user grasps the ball around its equator and pushes, pulls, or twists the ball. The model then moves in the direction of the force or twist applied. The device is used in conjunction with a mouse, which is used for picking, pointing, and menu selection.

A SoftButton user interface incorporates functions such as Translation On/Off, Rotations On/Off, Sensitivity Controls, Single Axis Filter, and Reset View. SpaceWare®, a proprietary software module, is integrated with and supported by CAD/CAM/CAE applications such as Catia, EUCLID, MSC/PATRAN, Pro/ENGINEER, and CADD5.

For More Information Write In No. 707



National Hybrid, Ronkonkoma, NY, has introduced the NHI-15164 PCET handheld **test and development instrument** that enables a PC or laptop computer with an enhanced parallel port to function as a bus controller, bus monitor, remote terminal, or concurrently as a re-

mote terminal and bus monitor.

Weighing one pound, and in conjunction with a laptop, the interface can be used for field servicing applications. It comes with a 9V rechargeable battery for 2-1/2 hours of minimum operation before charging. A 9Vdc power adapter allows continuous operation while recharging the battery. The instrument kit includes menu-driven software, battery and charger, 3' parallel port interface cable, and carrying case.

For More Information Write In No. 708

These won't save you time or money...


$$\nabla \times H = J + \epsilon \frac{\partial E}{\partial t} \quad \nabla \times E = -\mu \frac{\partial H}{\partial t} \quad \nabla \cdot E = \frac{\rho}{\epsilon} \quad \nabla \cdot H = 0$$

THESE WILL.



A CAE package that provides immediate productivity and saves prototyping dollars is very hard to find. With our line of fully integrated BEM electromagnetic simulation software, we can help.

Each of our packages is designed around three basic principles: advanced technology, productivity and exceptional customer service.

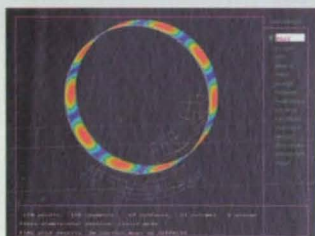


B-Field Bands: Periodic condition on a magnetic clutch for arbitrary rotor position.

Advanced Technology

"I have analyzed literally hundreds of linear and non-linear electromechanical devices with IES software. It has become an invaluable tool to me, as it's so much easier to work with than FEM software. Unlike FEM, BEM software does not necessitate any re-gridding of the problem when one medium is being rotated or translated with respect to another, which results in a significant time saving."

Dr. Kent Davey
American Maglev

Progressive features like our automatic/adaptive boundary element refinement, relative error detection, 3D symmetry conditions and a consistent graphic interface give you the most advanced programs available anywhere.

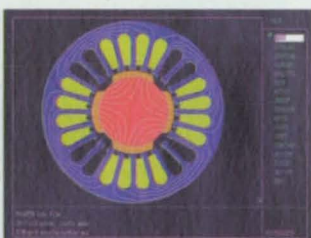

Torque vs. position curves for optimal motor design are readily calculated.

Productivity

"IES BEM programs have consistently outperformed the seven FEM packages I have evaluated in the past few years. The operator interface of IES programs allows for immediate productivity, where

there is a significant learning curve involved in all FEM packages."

Nicholas F. Campagna
Consultant

We have set up sample problems for you to work through along with databases of solved problems comparable to conventional industry-specific needs. Shorten the steps to your solution with IGES or DXF geometry translators and parametric definitions.

Customer Service


"IES has consistently impressed us with their speed of

response and strong commitment to work with us on unique problems."

Jim Aydelotte
Dynacast Magnetics

On-line help, full technical support and two complete program enhancements each year keep you on the cutting edge of CAE design and analysis.

Load a single diskette or tape onto your PC or workstation. Within one day you will begin working on your own problems. In just a week, even the most sophisticated 3D design solutions are yours. We give you our word. And so have our customers.

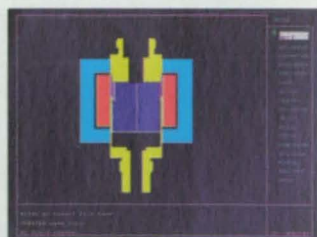

Use BEM to solve non-linear eddy current problems.

Call today for your 30-day no-charge software evaluation.



INTEGRATED
ENGINEERING SOFTWARE

TEL: (204) 632-5636 FAX: (204) 633-7780
e-mail: info@integrated.mb.ca




Computer Hardware & Peripherals



The ICC-7000™ NEMA 4-rated **flat-panel computer** from Nematron Corp., Ann Arbor, MI, features a 14" color TFT display with resolution of 1024 x 768 pixels for Windows NT applications and hard drive capabilities up to 6 Gb. Options such as an integrated CD-ROM accessible from the front of the PC and a removable hard drive are available.

The computer features a hinged rear chassis design that swings open for easy access, back-lighting that can be changed in less than five minutes, and an electrical chassis that can be exchanged without tools. Options include up to 512 Mb RAM; a choice of 100, 135, 166, or 200 MHz Intel Pentium processors; a 200 MHz Intel Pentium Pro processor; pre-installed industrial network cards; and Microsoft Windows NT operating system pre-loaded.

For More Information Write In No. 710

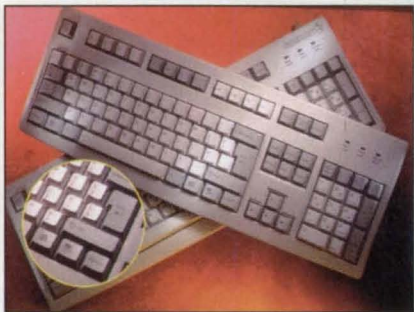

Cherry Electrical Products, Waukegan, IL, offers the Cherry 6000 **keyboard** that is compatible with PS/2 and AT systems. The 104-key, low-profile keyboard features a large L-shaped "enter" key and comes with five- or six-pin mini-DIN AT or PS/2 connectors. The

housing is available in beige matte; matte-finish beige/gray or white/gray keycaps are wear-resistant. All keys retain the standard 3/4" spacing.

The keyboard features a small internal printed circuit board and uses an injection-molded rubber dome/mat for tactile feel and laser printing for clearly printed keycaps. The Windows® 95 version bears the "Apps" key near the spacebar, as well as two keys bearing the Windows flag for quick access to Windows applications.

For More Information Write In No. 700




Aydin Corp., Fort Washington, PA, has released a series of high-definition small-screen **monitors** that are microprocessor-controlled and available in sizes from 10" to 17". The Auto-sync® capability provides 15 to 40 KHz or 30 to 64 KHz with either BNC or D connectors. Digital operation and security dis-

able are provided as standard features.

Also available are VGA, SVGA, and 1024 x 768 monitors in a fixed frequency format. All monitors are designed for industrial environments operating to 55°C. Optional touchscreens and magnetic shielding are available.

For More Information Write In No. 702

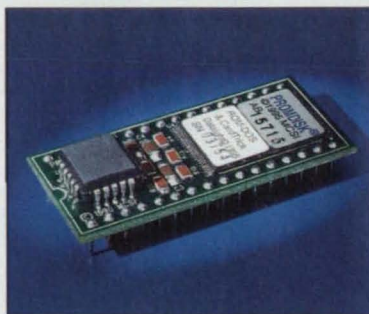

Micro Computer Specialists, Vista, CA, offers the PROMDISK-Chip **disk emulator chip** that plugs into any standard 32-pin EPROM socket in the BIOS extension address space of a personal computer. It is bootable as a fixed disk ranging from 2 Mb to 4 Mb by utilizing non-volatile NOR flash

memory. It is DOS and Windows compatible, allowing users to copy and erase files using standard DOS commands.

The chip replaces mechanical disk drives in systems designed to operate in environments where temperature, shock, vibration, or reliability are concerns. It operates at bus speeds and features no mechanical parts and low-power CMOS technology. The chip comes with the onboard Datalight VBF Flash File System, Datalight ROM-DOS v.6.22 disk operating system, and utility diskette.

For More Information Write In No. 701



Mercury Computer Systems, Chelmsford, MA, has introduced RACE® scalable **multicomputing systems** based on the 200 MHz PowerPC 603e microprocessor from Motorola. The processor delivers up to 4.4 GFLOPs on a single 9U VME motherboard and 1.1 GFLOPs on a 6U motherboard.

The systems' RACE heterogeneous architecture features a building-block approach designed for embedded multicomputing requirements with power- and space-constrained applications.

Systems can be configured with hundreds of PowerPC processors connected with the RACEway switched-fabric interconnect. Programming is simplified by the heterogeneous single-system model, allowing users to optimize their system configuration for a target application.

For More Information Write In No. 704




The Model 121 industrial/ruggedized **keyboard** from Cortron, Methuen, MA, features a sealed pointing device and is resistant to dust, shock, explosions, and spills. Available features include interfaces for IBM, SUN, Digital Equipment, NCD, RS-232, and RS-422; back-lighting with a brightness-control knob; rack-

mount or tabletop configurations; and conformal coating.

A force sensor or touch-pad pointing device; 1-3/8" or 2" sealed trackballs; EMI/RFI protection; custom colors, protocols, codes, and durable key legends; and keyboard options including slides and wrist rests are available. It can be customized to meet specific requirements and meets MIL-STD-461, 810, 167, 108, and 901 standards.

For More Information Write In No. 706

Crank up the **volume** of your 2D CAD with **SOLID EDGE™**

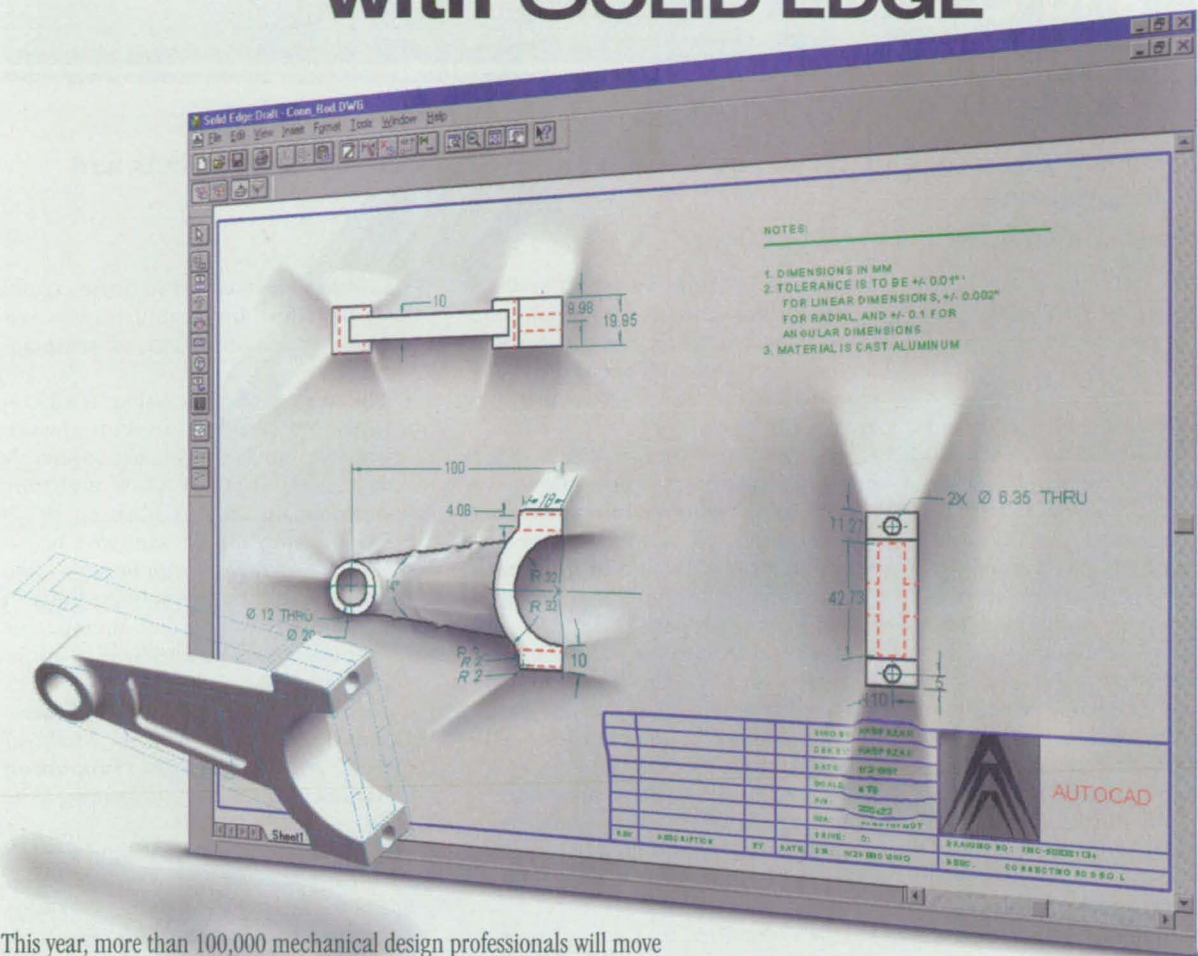

This year, more than 100,000 mechanical design professionals will move from 2D to 3D CAD. With Solid Edge™, you can be among the first to reap the benefits of 3D solid modeling design techniques.

3D solids from 2D CAD drawings

Solid Edge gives you the shortest route from 2D to 3D — you can create solid models directly from your 2D CAD drawings! If you use AutoCAD or MicroStation®, 3D modeling begins with a simple copy-and-paste that puts your 2D CAD geometry to work with Solid Edge's feature-based solid modeling tools.

Learn solid modeling in record time

With Solid Edge you can implement 3D CAD without long learning curves and expensive training. You can quickly master part and assembly modeling using a clear, uncluttered, straightforward user interface and built-in multimedia tutorials. And Solid Edge is Microsoft Office 97 Compatible, so it looks and works just like your Windows® office automation software.

Risk-free 3D!

Solid Edge is a risk-free way to move to 3D. You can continue with familiar 2D drafting as you learn solid modeling. You'll even increase your drafting output with the most streamlined, intuitive, and powerful mechanical drafting system available. One of the industry's toughest critics calls Solid Edge's drafting functions "... outstanding, possibly the best we've ever seen. The controls are excellent and make drawing creation almost fun."¹



INTERGRAPH
SOLID EDGE™

Call to get your **FREE** Solid Edge multimedia demonstration on CD-ROM:

800-807-2200

Fax: 205-730-1053

E-mail: solidedge@ingr.com

www.intergraph.com/solidedge

INTERGRAPH
SOFTWARE SOLUTIONS



¹Computer Aided Design Report, Vol. 16, No. 6, June 1996

Intergraph and the Intergraph logo are registered trademarks and Solid Edge and the Solid Edge logo are trademarks of Intergraph Corporation. Microsoft, Windows, and the Microsoft logos are registered trademarks of Microsoft Corporation. MicroStation is a registered trademark of Bentley Systems Inc. Copyright 1997 Intergraph Corporation, Huntsville, AL 35894-0001. MC970111

For More Information Write In No. 630



► Diffusion Barriers for GaAs and InP Devices

Amorphous ternary alloys for gate metal and ohmic-contact diffusion barriers in GaAs and InP devices are proposed.

NASA's Jet Propulsion Laboratory, Pasadena, California

Thin films of ternary, amorphous refractory compounds have been proposed for use as gate metals and ohmic contact diffusion barriers to improve the reliability of GaAs- and InP-based devices. The proposed gate metals and diffusion barriers would be of general composition $M_xSi_yN_z$, where M denotes Ta, W, or Mo; such diffusion barriers have proven effective in Si-based devices, as described, for example, in "Amorphous Ta-Si-N thin film alloys as diffusion barriers in Al/Si metallizations," J. Vac. Sci. Technol. Vol. A8, No. 3, p 3006 (1990).

In GaAs- and InP-based electronic devices, diffusion of metal and semiconductor materials is especially problematic at the high processing temperatures encountered during fabrication, and in some cases can continue at significant rates during use of devices at lower temperatures. Such diffusion alters semiconductor channel thicknesses and other Schottky gate parameters and, in so doing, degrades performances and operational lifetimes. During operation of devices in atmospheres that contain hydrogen, diffusion of hydrogen can also degrade performances and lifetimes. This degradation has been associated with Pt and Pd, which are constituents of typical gate-metal alloys used heretofore. It has

been hypothesized that the Pt or Pd in a metallic gate contact catalytically converts hydrogen molecules to hydrogen atoms, which then diffuse into the gate channel, where they compensate free charge carriers.

The proposed use of $M_xSi_yN_z$ layers offers several potential advantages over the use of conventional metal contacts without diffusion-barrier layers:

- Elimination of Pd and Pt from metal gate contacts would eliminate degradation by hydrogen.
 - $M_xSi_yN_z$ alloys are thermodynamically stable with respect to GaAs; this characteristic would help prevent chemical reactions between the semiconductor and other layers.
 - Because of the amorphous nature of the $M_xSi_yN_z$ layers, there would be no grain boundaries and thus no paths for rapid diffusion into or out of GaAs substrates.
 - The crystallization temperatures of $M_xSi_yN_z$ are so high (800 to 1,000 °C) that during fabrication heat treatments, amorphous structures of diffusion-barrier layers would persist and microstructures of the gates would remain unchanged.
 - Because of the amorphous nature of $M_xSi_yN_z$, it would be possible to deposit uniform, continuous layers with thicknesses as low as 10 nm.
- Contact electrical resistivities could be kept low and would remain stable over a wide range of temperatures.
 - The range of processing temperatures that could be used in fabricating contacts would be relatively wide, so that temperature and time controls would not have to be as strict as they might otherwise be.
 - Contact surfaces would be smoother.
 - There would be greater flexibility in the choice of contact metals; for example, Au, Al, and/or Cu could be used.

This work was done by Elzbieta Kolawa, Sammy Kayali, and Marc A. Nicolet of Caltech for NASA's Jet Propulsion Laboratory. For further information, write in 53 on the TSP Request Card.

In accordance with Public Law 96-517, the contractor has elected to retain title to this invention. Inquiries concerning rights for its commercial use should be addressed to

*Larry Gilbert, Director
Technology Transfer
California Institute of Technology
Mail Code 315-6
Pasadena, CA 91125
(818) 395-3288*

Refer to NPO-19892, volume and number of this NASA Tech Briefs issue, and the page number.

► Au/Ge/Au Contacts for Shallow-Junction InP Solar Cells

These contacts exhibit low electrical resistivity and high thermal stability.

Lewis Research Center, Cleveland, Ohio


Au/Ge/Au contacts on InP semiconductor devices have been found to exhibit extremely low electrical resistivities. They have also been found to be highly thermally stable in the sense that the interdiffusion of metal and semiconductor materials during the sintering step of the fabrication process is retarded, relative to such interdiffusion that occurs during the

sintering of devices made with other contact materials. The nature of this retardation of interdiffusion is such that sintering can be completed before the adverse effects of interdiffusion degrade the underlying semiconductor devices.

The development of Au/Ge/Au contacts is one achievement of a continuing program of research on fabri-

cating electrical contacts for InP semiconductor devices, both with and without sintering. Some other achievements of this program were reported in previous articles in *NASA Tech Briefs*, namely: "Sinterless Fabrication of Contact Pads on InP Devices" (LEW-15863), Vol. 19, No. 10 (October 1995), page 90; "Sinterless Formation of Contacts on Indium Phosphide"

How to stay out of the rough in surface mount technology.

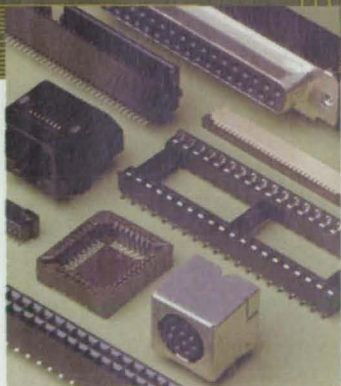

Surface mount interconnection is a demanding game. Advice from the pros helps.

Each surface mount application presents complex challenges. Our experience can show you options in integrating SMT into existing or new products.

We'll show you the variations in form – from through-whole compatibles to ultra fine pitch products. We'll make sure your contact configuration and leg geometry are physically right. We'll help determine optimum hold-down type, based on assembly and use. And we'll show you how to answer design needs *and* fit successfully into production.

We also offer options for manufacturability: Automated pick-and-place or robotic application, tape and reel packages (including EIA-481), tubes, and trays. In fact, our packaging, tooling, and feeder modules can all be tailored for you.

We'll also simplify and advance your design efforts and keep you current on improvements. Full technical information, catalog sheets, and 2D and 3D models of many product lines are available on CD-ROM to shorten design cycles. Call today to learn more.

AMP is a trademark.

Connecting
at a
HIGHER
level.™

Product Information Center: 1-800-522-6752 (fax 717-986-7575). AMP Incorporated, Harrisburg, PA 17105-3608. In Canada, call 905-470-4425. On the Internet: <http://www.amp.com>.

For More Information Write In No. 604

AMP

(LEW-15814), Vol. 19, No. 10 (October 1995), page 45; "Sinterless Formation of Contacts on Indium Phosphide: Part 2 (LEW-15815), Vol. 21, No. 4 (April 1997), page 45; and "Ultra-Low-Resistance Metal Contacts on InP" (LEW-15816), Vol. 21, No. 4 (April 1997), page 45.

The need for sintering and the desire to avoid sintering if possible can be explained as follows: To make a low-resistance electrical contact to an InP semiconductor device according to the standard approach, one must deposit contact metal on the semiconductor, then sinter the contact metal at a suit-

ably high temperature. Although sintering desirably reduces contact resistance, it also undesirably induces substantial interdiffusion between the metal and the underlying InP. Unless limited by imposition of one or more diffusion barrier(s) or by use of such techniques as rapid annealing, this interdiffusion can quickly degrade or destroy the device. Such shallow-junction devices as junction field-effect transistors and solar cells are particularly susceptible to damage during sintering to form contacts.

The desirable properties of Au/Ge/Au contacts were observed in

experiments on InP n/p diodes with (100)-oriented substrates doped with Zn to a density of $8 \times 10^{16} \text{ cm}^{-3}$ and 2,000-Å-thick epitaxially deposited emitters doped with Si to a density of $1.7 \times 10^{18} \text{ cm}^{-3}$. By use of electron-beam evaporation, contact layers were deposited on InP in the following sequence: Au 400 Å thick, Ge 200 Å thick, and Au 1,600 Å thick. After deposition of contacts, the devices were sintered in a nitrogen atmosphere at a temperature of 350 °C.

Figure 1 shows the evolution of contact resistivities of these devices and of similar devices with Au (only) contacts tested in previous experiments. Whereas the resistivity of the Au (only) contacts remained above $10^{-3} \Omega\text{-cm}^2$ for tens of minutes at the sintering temperature, only 1 minute at that temperature was necessary to bring the resistivity of the Au/Ge/Au contacts down to about $10^{-7} \Omega\text{-cm}^2$. The resistivities of these Au/Ge/Au contacts were among the lowest resistivities of any contacts on InP tested up to the time when these experiments were performed.

One measure of the interdiffusion of Au and InP is the fraction of outer-sur-

DIAGNOSTICS/ACQUISITION SYSTEM

Up to 16 Real and Virtual Measurements

Data Evaluations ■ FFT ■ Diverse Sensors

NEW

Graphtec again reduces the weight, size and cost of data diagnostics and acquisition instrumentation. With the most portable and versatile system available anywhere.

The **WR9000** is available for 4, 8 or 16 channels. Multi-input amplifiers measure voltage, J/K/T thermocouples, or RMS level. Mix or match them with others to extend your inputs to bridge and frequency transducers. And use its math utilities and interchannel analysis capabilities to create *virtual channels* that greatly improve your real-time diagnostic capabilities.

Store sound, vibration and other dynamic phenomena for immediate FFT and correlation analysis.



Scroll through your data and define segments for instant calculation of area, max/min/rms values, standard deviation, and rise/fall times.

Use SMART triggering and available 16-

channel TTL logic to analyze transients, evaluate cyclical operations, summarize process variables, or interface with external controls. All in real time. With a system you can carry under your arm.

Use the **WR9000's** file conversion software to merge your data on-the-spot with programs such as Microsoft Excel, Lotus 1-2-3 and DADISP. Take advantage of a bright 8.9-inch EL display that is easy to read from any angle and under

any lighting condition. Use the A-4 thermal array chart for local printout. Use 512K of memory per channel, or reallocate to expand selected measurements. Standard 3.5" floppy drive or optional magneto-optical drive provides additional storage.

Control amplifier parameters and chart operation from a menu screen or GUI. Or by panel keys that you can reset *even during operation*.

The **WR9000's** small footprint and low profile suit it ideally to field measurements.

And to portable use in the laboratory or on the factory floor. It measures less than 15" x 12" x 5" and weighs only 17.5 lbs (8-channel), and operates on AC or available 12 VDC.

Don't settle for tape recorders or multiple instruments. Make your evaluations and decisions on-the-spot. With the world's smallest and most versatile diagnostics and acquisition system.

Call (800) 854-8385 today for full information and to receive your copy of our new application brochure.



WESTERN GRAPHTEC, INC.

11 Vanderbilt ■ Irvine, CA 92718-2067

(714) 770-6010 ■ (800) 854-8385

FAX (714) 855-0895

any lighting condition. Use the A-4 thermal array chart for local printout. Use 512K of memory per channel, or reallocate to expand selected measurements. Standard 3.5" floppy drive or optional magneto-optical drive provides additional storage.

Control amplifier parameters and chart operation from a menu screen or GUI. Or by panel keys that you can reset *even during operation*.

The **WR9000's** small footprint and low profile suit it ideally to field measurements.

And to portable use in the laboratory or on the factory floor. It measures less than 15" x 12" x 5" and weighs only 17.5 lbs (8-channel), and operates on AC or available 12 VDC.

Don't settle for tape recorders or multiple instruments. Make your evaluations and decisions on-the-spot. With the world's smallest and most versatile diagnostics and acquisition system.

Call (800) 854-8385 today for full information and to receive your copy of our new application brochure.




WESTERN GRAPHTEC, INC.

11 Vanderbilt ■ Irvine, CA 92718-2067

(714) 770-6010 ■ (800) 854-8385

FAX (714) 855-0895

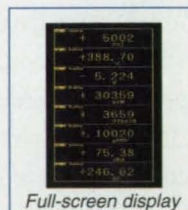

Full-screen display

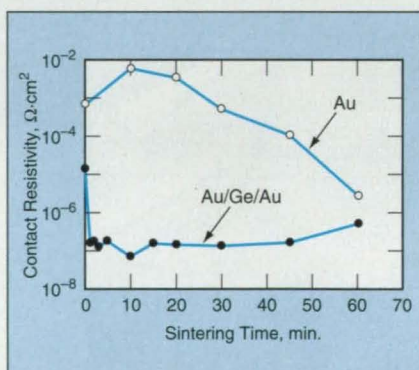


Figure 1. The Resistivities of Au/Ge/Au Contacts reached values much lower than those of Au (only) contacts after sintering for only 1 minute at 350 °C.

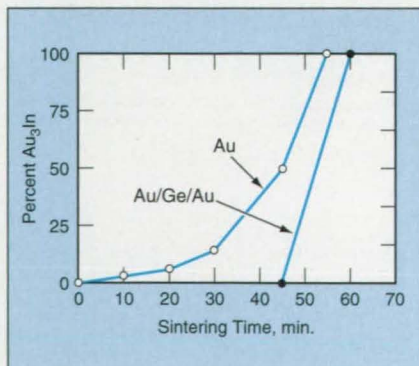


Figure 2. Conversion of Surface Au to Au₃In during sintering at 350 °C began immediately in Au (only) contacts but was delayed by 45 minutes in Au/Ge/Au contacts.

face Au converted to Au_3In as a function of time during sintering at 350 °C. Using this measure, Figure 2 illustrates the retardation of interdiffusion in the Au/Ge/Au contacts as compared to the Au (only) contacts: whereas the formation of Au_3In was observed immediately on Au (only) contacts, it was not

observed on Au/Ge/Au contacts until 45 minutes into the sintering process.

This work was done by V. G. Weizer of Lewis Research Center; N. S. Fatemi of Sverdrup Technology, Inc.; and A. L. Korenyi-Both of Calspan Corp. For further information, write in 28 on the TSP Request Card.

Inquiries concerning rights for the commercial use of this invention should be addressed to NASA Lewis Research Center, Commercial Technology Office, Attn: Tech Brief Patent Status, Mail Stop 7-3, 21000 Brookpark Rd., Cleveland, OH 44135. Refer to LEW-16280.

Ag/Zn Contacts on Shallow-Junction p-Doped InP Devices

Low-resistance contacts can be formed without substantial metal/semiconductor interdiffusion.

Lewis Research Center, Cleveland, Ohio

Ag/Zn contacts on p-doped InP semiconductor electronic devices have been found to exhibit electrical resistivities as low as $10^{-4} \Omega\text{-cm}^2$. The contacts are formed by deposition of a combination of Ag and Zn on the InP surfaces, then sintering. Unlike in the fabrication of contacts from some other materials, the sintering step in the fabrication of Ag/Zn contacts does not cause so much interdiffusion of metal and semiconductor materials as to degrade or destroy the underlying devices.

The development of Ag/Zn contacts is one achievement of a continuing

program of research on fabricating electrical contacts for InP semiconductor devices, as noted in the preceding article. The role of sintering in the fabrication of contacts is also discussed in the preceding article.

Zn apparently exerts two major effects in the fabrication of Ag/Zn contacts. One effect is substantial retardation of the interdiffusion of the metal contact and underlying semiconductor materials; the interdiffusion is suppressed to such an extent that contacts can be formed directly on very-shallow-junction devices with-

out damaging them. The other major effect of Zn is a significant reduction in contact resistivity.

This work was done by Victor G. Weizer of Lewis Research Center and David S. Fatemi of Essential Research, Inc. No further documentation is available.

Inquiries concerning rights for the commercial use of this invention should be addressed to NASA Lewis Research Center, Commercial Technology Office, Attn: Tech Brief Patent Status, Mail Stop 7-3, 21000 Brookpark Rd., Cleveland, OH 44135. Refer to LEW-16037.

Mechanical Solutions Within Your Budget


GENIUS® LT95

Automated 2-D/Parametric Design for AutoCAD LT95

- Over 100,000 standard parts/fasteners and powerful parametrics.

NEW for Windows 95:

- Power Tools - to select objects for automatic edit, copy, move, change.
- Steel Shapes - Structural steel beams, angles and plates.
- User-definable weld, surface and tolerance symbols - allow you to create and save any symbol configuration for later recall.
- Enhanced BOM functions - automatically add and delete items from a BOM list generated right on the drawing as you design. GENIUS LT95 tracks the part's item number and entry in the BOM list. Export the BOM to an ASCII file for external use.
- Compass Rose - easily move and copy items at precise angles and distances in any UCS.

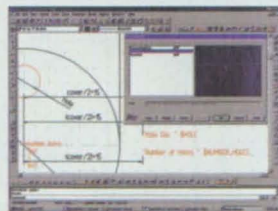

GENIUS LT95


\$495.00

LT W95 + GENIUS LT95
\$849.00

hyperWORK®

Complete CAM Functionality for Professional 2-axis Machining in AutoCAD LT or Release 13

- Superior CAM application for 2.5-axis machining for perfect, reproducible results.
- Full functionality including Contour Milling, Pocketing with varying Z-levels and island recognition, Drilling, Wire-cutting and Turning.
- An Integrated Tool Library - create, revise, or delete any tool from your library. Define parameters for each tool including maximum speed, feed rate, and coolant flow. Change or recall tools with the click of a mouse.
- hyperWORK takes you from CAD to CAM in six easy steps:
 - Enter the desired machining function in the joblist
 - Select the tool from the library
 - Define the machining parameters
 - Review the results and run the post-processor
 - Start the toolpath calculation
 - Select the machining contours in your AutoCAD drawing
- Post Processor Toolkit to design CNC output for virtually any mill.

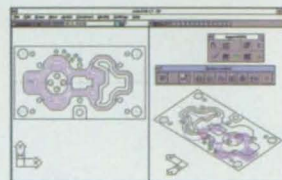

hyperWORK

\$1,950.00

LT W95 + hyperWORK
\$2,199.00

Call Now! 800-598-0119

www.manmachine.com

1220 S. Park Lane, Suite 4, Tempe, AZ 85281

Man & Machine

CAD Solutions, Inc.

"The Leading Provider of LT Solutions"

GENIUS LT95 is a trademark of Genies CAD Software GmbH, Munich Germany. hyperWORK is a trademark of OPEN MIND Software Technologies, Amberg, Germany. AutoCAD, AutoCAD LT and AutoSketch are trademarks or registered trademarks of Autodesk, Inc., San Rafael, CA. Windows is a trademark of Microsoft Corp., Redmond, WA.

Planar Quad-Bridge-Diode Frequency Doubler

Input and output circuits are isolated without complicated filter structures.

NASA's Jet Propulsion Laboratory, Pasadena, California

A quad-bridge varactor-diode 10-to-20-GHz frequency-doubling circuit features integrated planar construction on a quartz substrate, with quasi-optical input and output coupling via fully open antenna substructures. The design of this frequency doubler exploits electrical and geometrical symmetries to achieve a simple, compact overall structure with inherent isolation between input and output ports. This frequency doubler is a frequency-scaled prototype of proposed frequency multipliers that would operate at frequencies of the order of 1 THz and that would offer attractive alternatives to conventional waveguide-construction microwave and millimeter-wave frequency multipliers.

The quad-bridge circuit configuration (see Figure 1) results in balanced frequency-doubling action and provides frequency isolation between input and output ports, without need for complicated filter structures; this is because diodes in a quad-bridge configuration inherently reject even harmonics at the input port and reject odd harmonics at the output port. In comparison with the design of a single-

diode frequency multiplier, the design of this multiplier maintains the same optimum conversion gain and optimum input and output load impedances but quadruples the power-handling capability.

Input and output couplings are implemented with two pairs of double-slot antennas that are polarized perpendicularly to each other (see Figure 2) to enhance input/output isolation. Compact coplanar transmission-line matching circuits are placed between the antennas and the diodes to maximize input coupling at the fundamen-

tal frequency and output coupling at the second harmonic, thus helping to maximize frequency-conversion efficiency. The circuit can be mounted on a dielectric lens or on the flat outer surface of a dielectric (quartz)-filled paraboloidal reflector to obtain the desired input/output radiation patterns.

This work was done by Moonil Kim, Jean Bruston, R. Peter Smith, Suzanne C. Martin, and Peter H. Siegel of Caltech for NASA's Jet Propulsion Laboratory. For further information, write in 100 on the TSP Request Card. NPO-19724

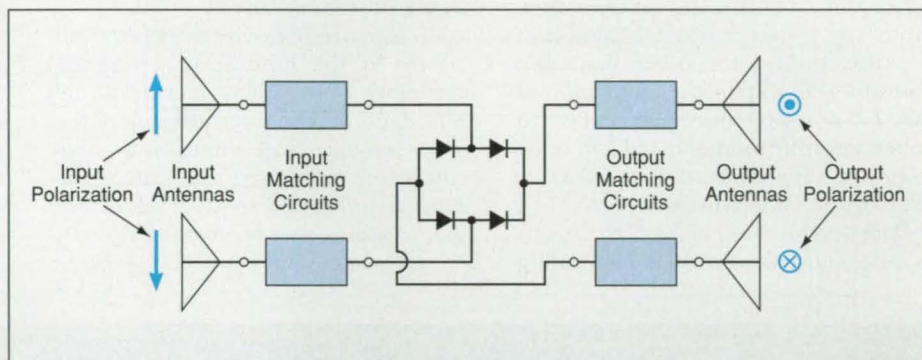


Figure 1. The Diodes in a Quad-Bridge Configuration provide frequency isolation between the input and output antennas.

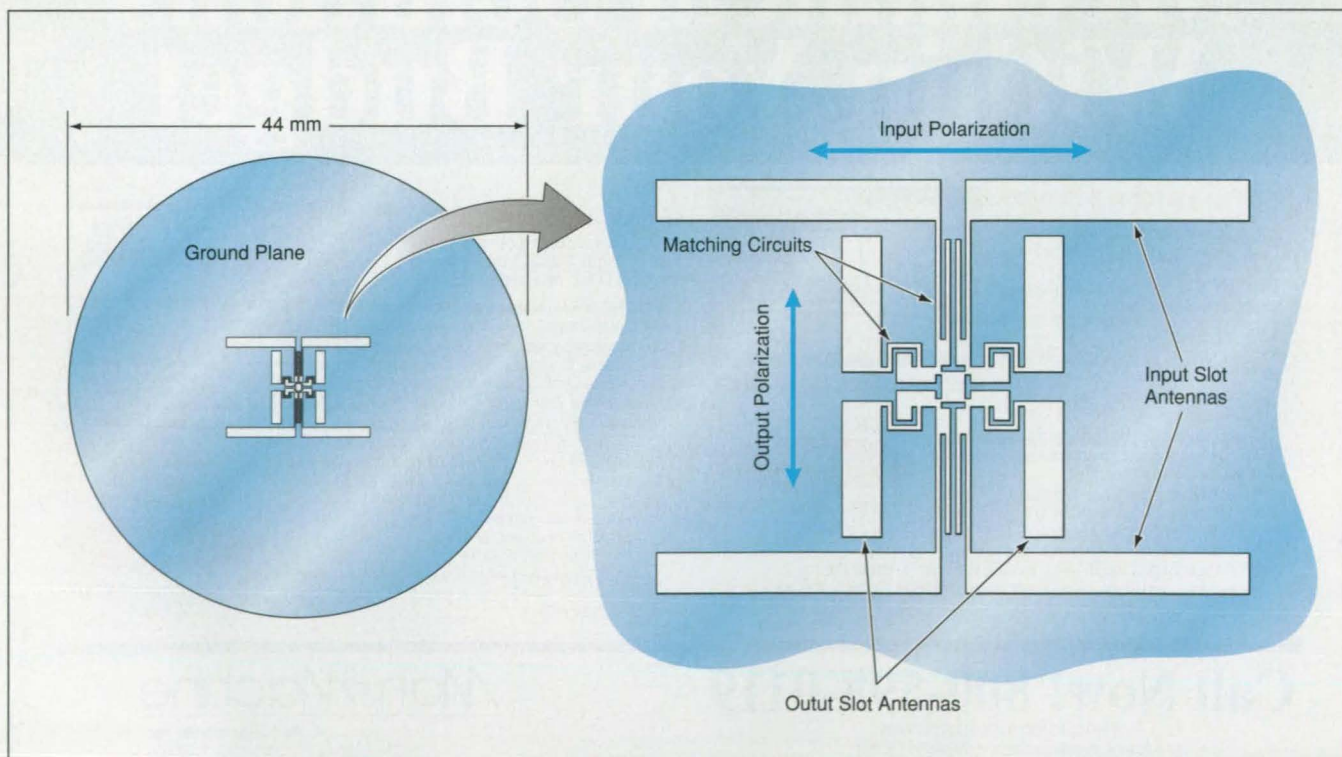


Figure 2. Orthogonal Input and Output Slot Antennas provide orthogonal input and output polarizations and thus polarization isolation between input and output antennas. A commercial quad-bridge diode chip is bonded to the center of the circuit.

CONFIDENT SOLUTIONS

DuPont Vertrel® has more answers for your precision cleaning needs.

The DuPont Vertrel® family of solvents offers the versatility and performance you've been looking for. A broad range of Vertrel® cleaning and defluxing alternatives provide you with the solution that best fits your application.

More than just cleaning

Vertrel® is the best and only solution for all your needs. It uses advanced HFC (hydrofluorocarbon) technology to bring solutions to rinsing and drying applications. It's also an outstanding carrier fluid for fluorolubricants and silicone.

All formulations are environmentally acceptable as alternatives to ozone-depleting substances. And low toxicity and nonflammability make Vertrel® safe to use.

To learn more about confident solutions from DuPont Vertrel®, call 1-800-441-9281.



Vertrel®
Only by DuPont

Vertrel® is a registered trademark of DuPont.

For More Information Write In No. 552



Concept for a Wide-Area Differential GPS Navigation System

Total user error would be reduced by an order of magnitude.

NASA's Jet Propulsion Laboratory, Pasadena, California

A proposed improved navigation system for civil aviation would exploit the signals broadcast by the Global Positioning System (GPS) and would incorporate a number of recent and anticipated advances in GPS technology to achieve decimeter real-time positioning accuracy. The underlying concept is that of a real-time wide-area differential (WAD) GPS navigation system that could be incorporated into the Federal Aviation Agency's Wide Area Augmentation System (WAAS). The proposed system is required to provide an increase, over prior GPS-based systems, in the accuracy with which a user's equipment can determine its real-time position ("user position accuracy," for short); this entails a requirement to (1) estimate GPS satellite orbits and clock offsets in real time with accuracies greater than those broadcast by the GPS itself and (2) estimate ionospheric GPS-signal-propagation delays with high accuracy to provide further corrections to improve user position accuracy.

The system would satisfy the accuracy requirements via a combination of (1) long-arc dynamic orbit estimation by means of a real-time Kalman filter, (2) rapid clock estimation, and (3) the use of the same Kalman filter in generating a dynamic global map of ionospheric delay (see Figure 1). This would be the first WAD GPS-based system to feature tuned dynamic (rather than geometric) determination of the GPS satellite orbits, enabling complete separation of orbit and clock corrections and reducing GPS orbit error (which is usually dominant) to insignificance. Moreover, the accuracies of the ionospheric-delay corrections in the proposed system would be at least 3 times those of the best known alternative system.

The system would utilize an extensively modified version of the GPS-Inferred Positioning System/Orbit Analysis and Simulation Software (GPSY/OASIS II), which was described briefly in "Software for Precise GPS Calculations" (NPO-19636), NASA Tech Briefs, Vol. 20, No. 12 (December 1996), page 84. To recapitulate: GPSY/OASIS II accepts data

collected by a permanent worldwide network of more than 60 Global Positioning System (GPS) reference receivers and continuously processes these data (see Figure 2), along with a network reference time, into precise three-dimensional position data on the orbits of GPS satellites, plus satellite and ground-station clock offsets. GPSY/OASIS II incorporates the most precise available mathematical models of the dynamics of spacecraft, geophysical quantities, and propagation of radio signals and relativistic effects. The GPSY estimator is formulated as a Kalman-type square-root information filter; this avoids matrix inversions and greatly enhances numerical stability. Any parameter estimated through the GPSY Kalman filter/smoothing can be modeled as a deterministic or stochastic process, or a com-

bination of the two. The filter routinely solves simultaneously for thousands of parameters with data from dozens of receivers while maintaining submillimeter numerical precision globally.

GPSY/OASIS II is highly modular in a way that makes it flexible and adaptable to almost any satellite-tracking estimation problem through simple modification of Unix script. In adapting GPSY/OASIS II to the WAAS, different master-station functions to be performed by GPSY could be performed in parallel, perhaps on several workstations, each directed by a different script designed to run the software optimally for its given task. These functions would include: (1) estimation of orbits and long-term satellite clock parameters, and computation of the associated slow corrections and their estimated errors;



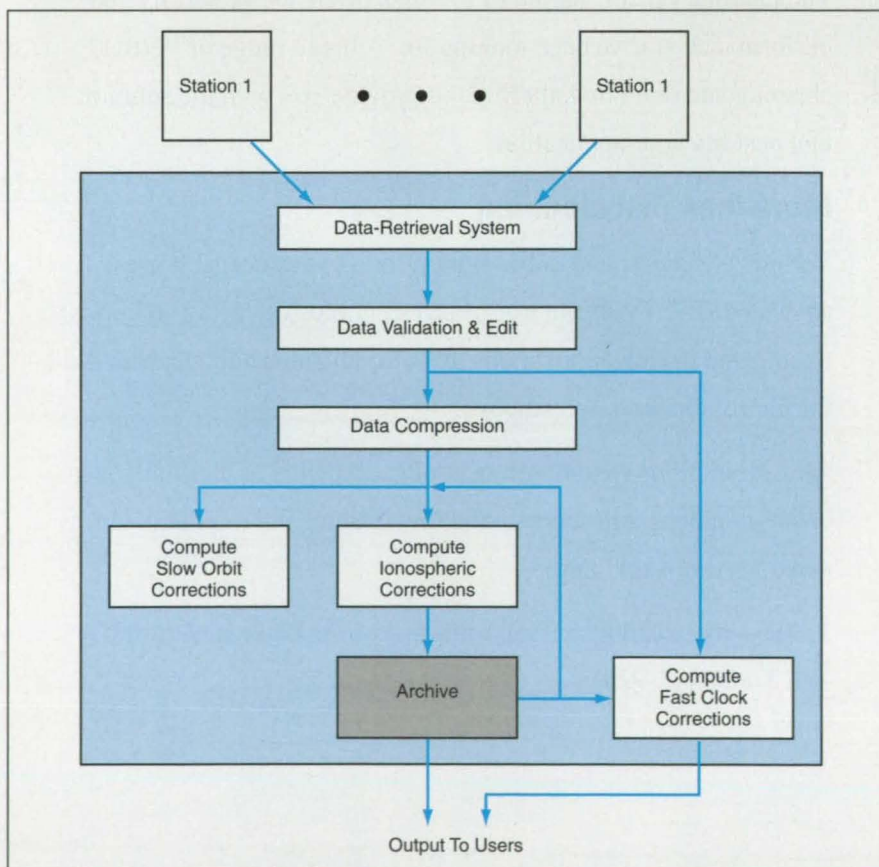


Figure 1. This Flow Diagram shows the sequence of computations in JPL's wide-area differential GPS navigation system.

Satellite Tool Kit Introduces: The Coverage Module

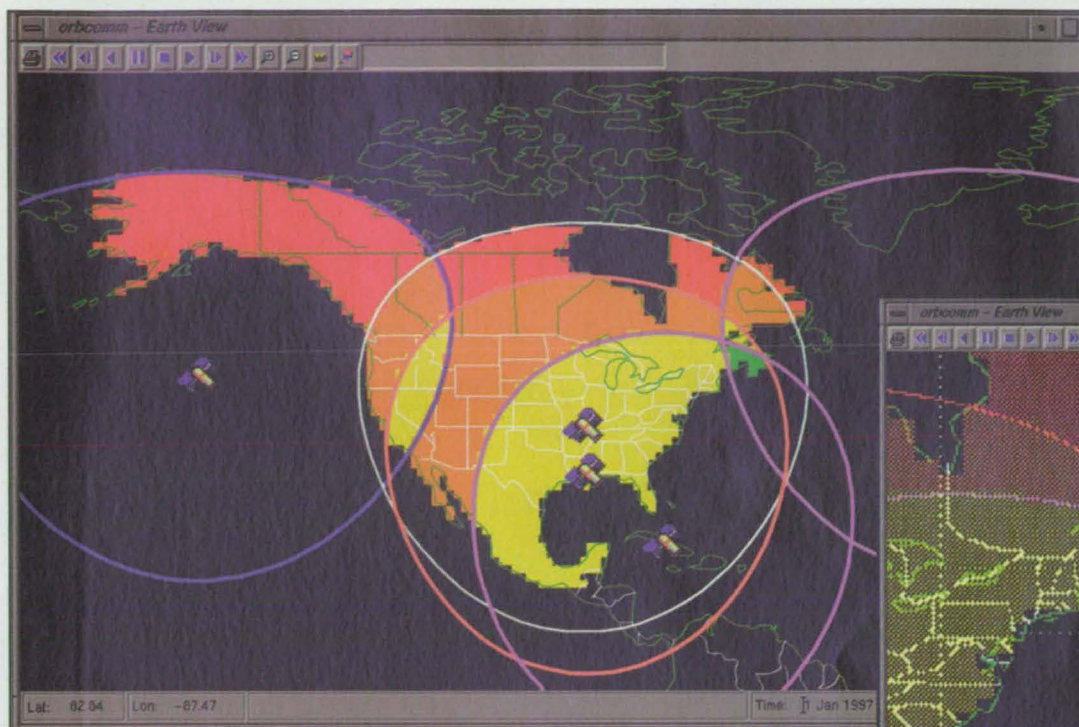

These two screens analyze the number of simultaneous accesses (ranging from one to five vehicles) to North America from the 26 vehicles in the Orbcomm constellation.

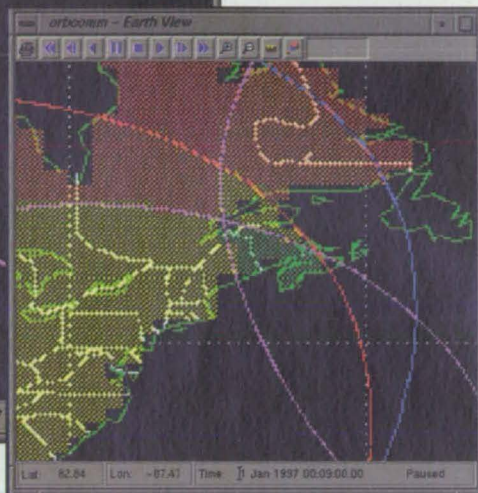

STK, the world's leading software suite for satellite systems analysis, now includes the Coverage Module. This powerful tool allows STK users to determine the quality and quantity of coverage provided by satellites, sensors, chains and constellations to user-specified geographic regions over particular time periods. Users can:

- Specify the coverage area and resolution
- Apply all existing access constraints to refine the definition of coverage
- Further leverage licensed add-on modules such as Comm and Chains
- Define coverage quality based on Figures of Merit
- Create animation depicting variations in coverage quality over time
- Generate customized coverage statistics for specific reporting needs

The Coverage Module allows the user to define quality by selecting from nine Figure of Merit definitions. The GPS edition of Coverage includes *N* Asset and Dilution of Precision Figures of Merit. Results may be further focused through the use of the Satisfaction capability, which allows the user to apply quality oriented acceptance criteria to the analysis.

Your Best Solution to Satellite Coverage Analysis



ANALYTICAL GRAPHICS

660 American Avenue • King of Prussia, PA 19406

Voice: (610) 337-3055 • Fax: (610) 337-3058 • request@stk.com • www.stk.com

CALL for a FREE DEMO: 1-800-220-4785

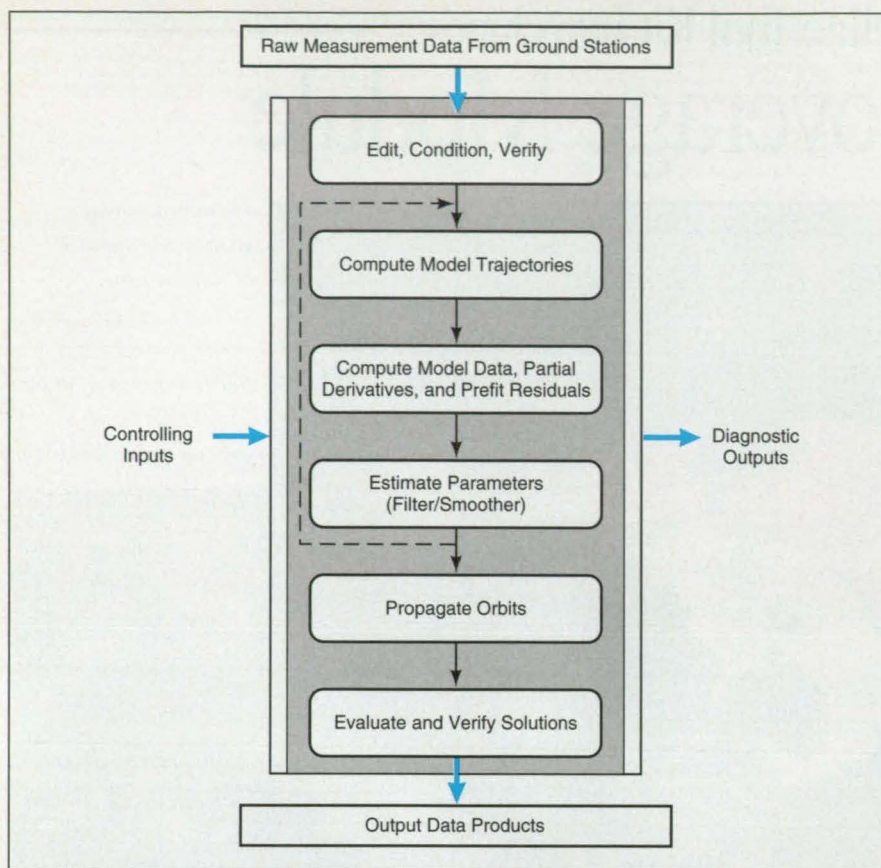


Figure 2. This Flow Diagram shows the sequence of computations effected by the GIPSY/OASIS II software.

(2) computation of the predicted or a priori high-rate (1-second) GPS measurements in preparation for computing the fast corrections; (3) calculation of the fast clock corrections, together with their estimated errors, from the predicted and measured observables; (4) generation of ionospheric maps with high spatial and temporal resolution and computation of associated grid-point corrections; (5) computation of satellite integrity indicators; and (6) pre- and post-transmission independent validation of all data products. Each of these processes could be individually tuned for the job at hand without the need for a monolithic software package designed to perform all functions.

This work was done by Thomas P. Yunck, Willy I. Bertiger, Stephen M. Lichten, Anthony J. Mannucci, Ronald J. Muelerschoen, and Sien-Chong Wu of Caltech for NASA's Jet Propulsion Laboratory. For further information, write in 67 on the TSP Request Card.

This invention is owned by NASA, and a patent application has been filed. Inquiries concerning nonexclusive or exclusive license for its commercial development should be addressed to the Patent Counsel, NASA Resident Office-JPL; (818) 354-5179. Refer to NPO-19625.

STUNNING PERFORMANCE

Our Electromagnetic Design Software is a long running success, based on over 20 years continuous development at the forefront of finite element technology. For the design of the smallest micro motor to the largest accelerator, the latest OPERA software has star quality. With legendary modules like TOSCA and ELEKTRA, the experts agree, the OPERA suite gives a stunning performance.



VF VECTOR FIELDS

SOFTWARE FOR ELECTROMAGNETIC DESIGN

Vector Fields Inc.
1700 North Farnsworth Avenue, Aurora, IL 60505, USA
Tel: (630) 851 1734 Fax: (630) 851 2106
Email: info@vectorfields.com
Web: <http://www.vectorfields.com>

what drives your design?

Is it a sensor? Maybe a transformer or a motor. How about a permanent magnet or actuator?

Applications vary, but the need to account for electromagnetic effects remains a critical factor in design performance. Today more than ever before, the demand for high-yield, high-performance, and smaller devices compel engineers to understand electromagnetic fields.




Not every engineer is an expert in electromagnetics - Ansoft knows this. Our easy-to-use and understand software puts the power of Maxwell's equations at your fingertips.

With features like adaptive meshing, parametric analysis, and system-level simulation, it's not difficult to see why Ansoft is the world leader in electromagnetic design tools. Our EM product family provides a wide range of solutions for your particular design needs.




**Desktop solutions for
what drives design.**

Telephone: 412.261.3200
Facsimile: 412.471.9427
Internet: EMinfo@ansoft.com
World Wide Web: www.ansoft.com

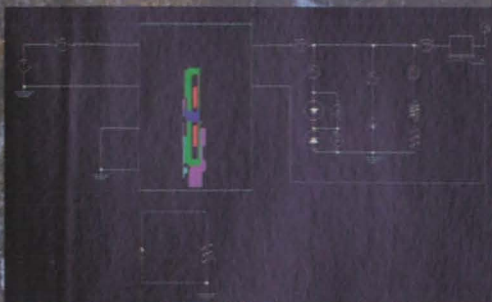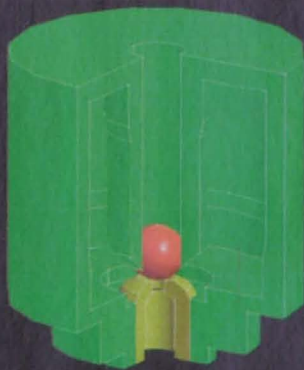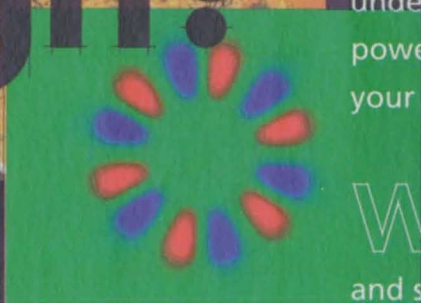



When making a
long term
commitment,
compatibility is
everything.

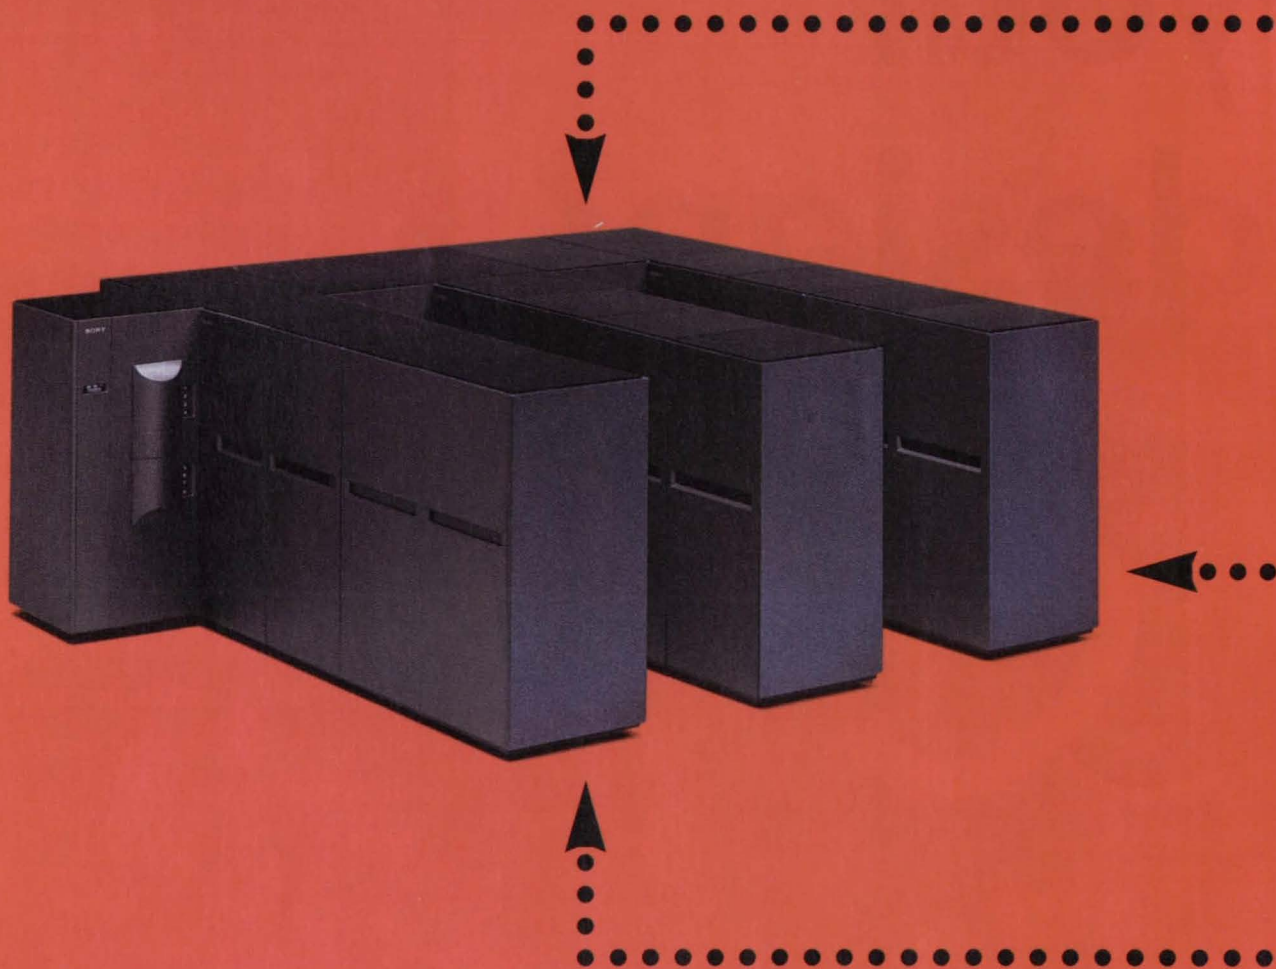

PETASITE MASS STORAGE LIBRARY

The flagship of the Sony Data Storage Tape Drive Family. This modular based tape library provides mass storage of data up to 3 Petabytes (3,000 Terabytes) in capacity. Like the entire storage family of products, this unit is designed to grow with your needs. PetaServe™ Hierarchical Storage Management Software is also available from Sony to further support your data intensive requirements. Best of all, the PetaSite library is compatible with our full line of Sony Data Storage Drives.

SONY'S DATA STORAGE FAMILY

So, it's time to take the plunge. Tie the knot. Make the big commitment. In other words, choose a data storage system. But, have you really, truly considered the importance of compatibility? Well, Sony has. When we built our data storage family, we saw to it that every product had one thing in common. Compatibility with our PetaSite™ modular based mass storage library. Whether you choose from the DIR-1000 Series, the DTF™ half inch tape drive, or the new ADI-1150 digital data recorder, Sony is committed to your high performance data storage and data acquisition needs. In addition, Sony has mapped a planned migration path for each drive series. Because in any good relationship, growing together is essential. So before you make a decision you might soon regret, consider Sony. The first name in magnetic tape technology and the reputation to prove it. Call 1-800-635-SONY, ext. FAMILY.

High
Performance
Data
Acquisition

Archiving

DIR-1000 SERIES

One of the world's fastest commercially available ID-1 ANSI format tape drives. This high end series just got better with the addition of the DIR-1000H, with transfer rates of up to 512 Mb per second and storage of 770 Gb per tape cassette. With over 7 years of field deployment and 700 units installed worldwide, this series has built a reputation for compatibility, reliability, and performance. It's also compatible with our PetaSite Mass Storage Library.



Large Scale
Database
Backup

ADI-1150 DIGITAL DATA RECORDER

One of the newest members of the Sony family, this unit delivers a sustained data rate of 15 MB per second over SCSI-2 Fast and Wide interface, combined with a maximum capacity of up to 52 GB of uncompressed data per cassette. The ADI-1150's impressive performance and favorable cost/performance ratio makes it the perfect fit for applications that range between our DIR and DTF drives. Also compatible with the PetaSite Mass Storage Library.



Digital Image
Storage

DTF HALF INCH TAPE DRIVE

Our next generation DTF high performance computer peripheral tape drive is rich in family heritage, based on Sony's highly successful Digital Betacam® professional recording technology. The GY-2120 (pictured here) features a sustained transfer rate of 12 MB per second (up to 20 MB per second with compression) and storage capacity of up to 108 GB compressed on a single cassette. It has the ability to backup 100 GB of data in approximately an hour and a half, and is already setting the standard for high performance and reliability in a SCSI attached tape storage peripheral. It's also compatible with the PetaSite Mass Storage Library.



Automated Tape
Libraries for Mass
Storage

Remote Sensing

For More Information Write In No. 542

SONY



Window Units for Solar-Assisted Heating and Cooling

Spaces between inner and outer panes would be connected to inside or outside circulation paths.

Marshall Space Flight Center, Alabama

Window units containing inner and outer (storm) windows plus solar screens and mechanisms to control the circulation of air have been proposed. In the presence of sunlight, these window units would contribute some solar assistance for heating and cooling. At night or in cloudy weather, these units would act like ordinary inner-window/storm-window assemblies, suppressing the conduction and radiation of heat between the inside and outside to minimize undesired heating in hot weather or cooling in cold weather.

A typical proposed unit (see Figure 1) would include two window assemblies separated by a bay. Inlets and outlets through which air could enter and leave the space between the window panes would be located at the bottom and top, respectively, on both the outside and the inside. The bay would contain part of a mechanism that would open and close the inlets and outlets to control the circulation of air in the space between the window panes.

Each window assembly would contain a removable solar screen stretched across the space between the panes. In a conventional window equipped with a solar screen, the radiant solar energy intercepted by the screen heats the air trapped between the panes. In cold weather, this trapped hot air is wasted, though it could potentially be used for heating. In hot weather, some of the heat in the trapped air inevitably leaks into the building by conduction through the inner pane. The proposed window unit would utilize the trapped solar-heated air for heating the building in cold weather, and it would suppress leakage of solar heat into the building during hot weather. This would be accomplished by use of dampers at the top and bottom to control the flow of air through the inlets and outlets (see Figure 2), in response to the temperatures of the outside air and the air between the panes.

The mechanism for controlling the dampers would include levers and cams actuated by two hydraulic cylinders filled with temperature-sensitive material and opposed by springs. One of the hydraulic

cylinders would be exposed to the outside air through louvers in the outer wall of the bay. The other cylinder would be exposed to the air between the panes through a hole between this space and the interior of the bay.

In the absence of appreciable solar heating (at night or in cloudy weather), the dampers would be positioned to close all inlets and outlets, so that the air between the panes would remain trapped as in an ordinary window assembly. In the presence of solar heating and cold outside air, the outside inlets and outlets would be closed, while the inside inlets

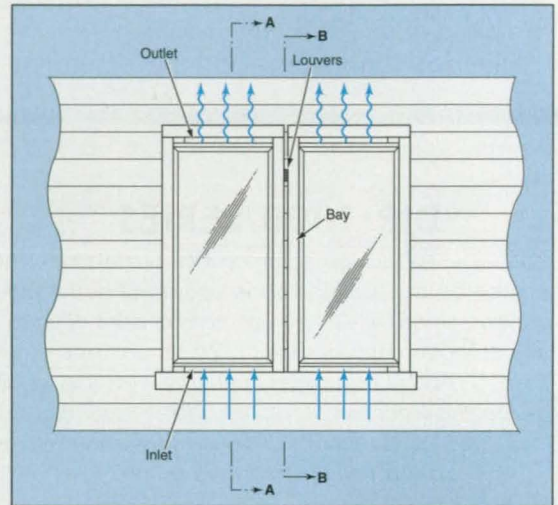


Figure 1. A Thermally Efficient Window Unit of the type described in the text would superficially resemble an ordinary window assembly in most respects, except that inlets, outlets, and louvers would be visible on closer inspection.

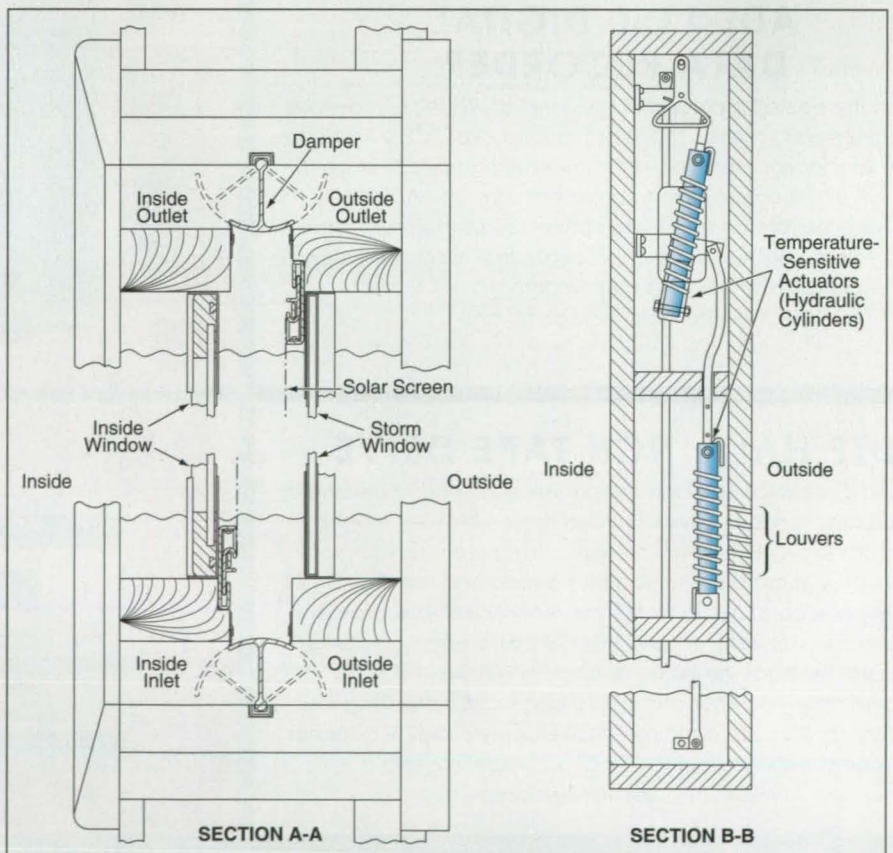


Figure 2. These Enlarged Views of the Cross Sections indicated in Figure 1 illustrate the major components of the air-circulation-control mechanisms of the window units.

Form Following Function...

The best designs...

**Silicon Graphics®
Workstations
and Altair's
award-winning
software gets
you there.**


**HyperMesh®,
OptiStruct®,
and MotionView®**

Altair's powerful suite of CAE software is targeted at mechanical engineers needing the highest performing and most productive tools for analysis and simulation.


The award-winning OptiStruct is an innovative first, driving product design from functional requirement and helping ensure a better design the first time.

For *finite element modeling, mechanical systems simulation, or optimization*, Altair delivers maximum customer value. All Altair software products run on the entire Silicon Graphics family of workstations and are tuned for top performance on O2™, Indigo2 IMPACT™, and OCTANE™ workstations.

If you seek to increase CAE productivity, make better design decisions driven by CAE, or make more strategic use of your CAE tools, contact us. See why major companies that depend on CAE are switching to Altair and Silicon Graphics Computer Systems.

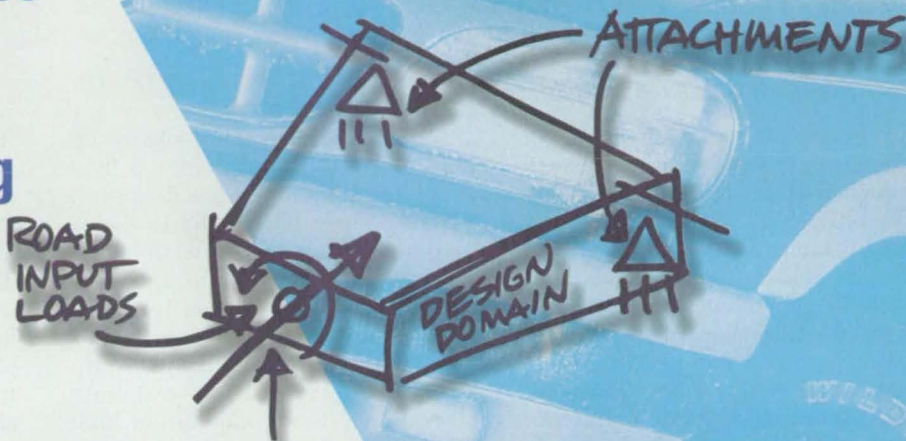

Right from the start

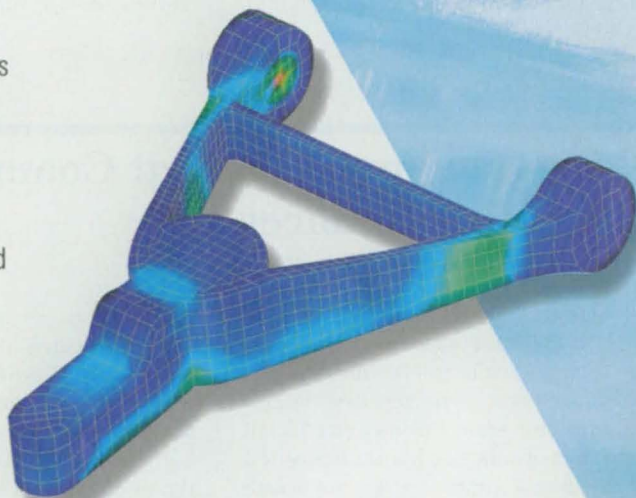

<http://www.sgi.com>



Altair Computing, Inc.
1757 Maplelawn Drive
Troy, Michigan 48084
Tel. 248.614.2400
Fax. 248.614.2411
E-mail: info@altair.com
<http://www.altair.com>

For More Information Write In No. 524

HyperMesh, OptiStruct, and MotionView are registered trademarks of Altair Computing, Inc. Silicon Graphics, Indigo2 IMPACT, OCTANE, and O2 are trademarks of Silicon Graphics, Inc. Silicon Graphics and the Silicon Graphics logo are registered trademarks of Silicon Graphics, Inc.

and outlets would be opened to allow the solar-heated air to circulate from the window to the inside of the building. In the presence of solar heating and hot outside air, the inside outlets would be closed and

the outside outlets would be opened, so that circulation of the solar-heated air to the outside would dissipate most of the solar heat from the window, reducing leakage of heat into the building.

This work was done by W. Neill Myers of Marshall Space Flight Center. For further information, write in 89 on the TSP Request Card. MFS-31088

Improved Data-Reduction Algorithm for Doppler Radar Wind Profilers

Wind profiles are generated more frequently.

John F. Kennedy Space Center, Florida

An improved data-reduction algorithm has been developed to enhance the availability, accuracy, and reliability of wind data extracted from outputs of Doppler radar wind profilers. The reduction of data from Doppler wind measurements includes, among other things, the extraction of weak wind-related spectral signatures from noisy signals that are contaminated with side lobes. The noise and side lobes contribute to errors and unreliability of wind data.

The original application for the present algorithm is in a 50-MHz Doppler radar wind profiler at Kennedy Space Center. Previously, a "consensus" algorithm was used to separate wind spectral signatures from noise and side lobes. The consensus algorithm involved extensive averaging, which took excessive time; only two wind profiles could be generated in an hour. Moreover, the averaging did not adequately suppress errors in that frequently, the consensus algorithm locked onto side lobes.

The present algorithm looks for the wind spectral signature within a "first-guess" spectral window based on previous valid data. Within the first-guess window, a median-filter technique is used to extract the current wind spectral signature for processing. Side lobes are usually rejected because they tend to fall outside the first-guess window. The median-filter technique takes much less computation time than does averaging in the consensus algorithm.

The major conceptual problems encountered in developing the present algorithm were selecting the width of the first-guess window and the parameters of the median filter to maximize the rejection of side lobes and noise while ensuring detection of the correct signal. In tests, the algorithm performed reliably and accurately, and was found to be capable of generating twelve wind profiles per hour. The root-mean-square wind-speed error of the present algorithm is of the same order of magnitude (1 m/s) as

that of the consensus algorithm. Also in comparison with the consensus algorithm, the present algorithm produces large (> 5 ms) wind-speed errors less frequently, and produces wind data that are more reliable in the sense that they are valid a greater fraction of the time. The major weakness of the present algorithm is that the first-guess window occasionally fails to eliminate strong side lobe signals that are close to the true wind signal, and manual intervention is required to recognize and correct the situation.

This work was done by Robin Schumann of ENSCO, Inc., Timothy Wilfong of the University Space Research Association, and Steve Smith of Marshall Space Flight Center for Kennedy Space Center. For further information, write in 69 on the TSP Request Card.

Inquiries concerning rights for the commercial use of this invention should be addressed to the Patent Counsel, Kennedy Space Center; (407) 867-2544. Refer to KSC-11860.

Using Langmuir-Blodgett Coatings To Calibrate Mass Microbalances

John F. Kennedy Space Center, Florida

Langmuir-Blodgett coatings can be used to calibrate mass microbalances like quartz-crystal microbalances and surface-acoustic-wave sensors. Microbalances are used to measure small quantities of solids or liquids deposited on surfaces. Calibration of a microbalance involves measurement of the response of the microbalance to a deposited surface film of known mass density. In comparison with other techniques for depositing a calibration film, the Langmuir-Blodgett coating tech-

nique offers advantages of less difficulty and repeatability without the use of an expensive surface tensiometer. In this technique, one prepares a monolayer of a suitable coating material in a Langmuir-Blodgett trough, then dips the microbalance in the trough to coat its sensory surface with the monolayer film. If necessary, the process can be repeated with different coating materials for a series of calibration measurements to determine the linearity of the response of the microbalance. The only


major limitation on this technique is that one must select coating materials that do not chemically attack any part of the microbalance.

This work was done by Paul A. Mogan of Kennedy Space Center and Lee Chow and Isaiah O. Oladeji of the University of Central Florida. For further information, write in 76 on the TSP Request Card.


Inquiries concerning rights for the commercial use of this invention should be addressed to the Patent Counsel, Kennedy Space Center; (407) 867-2544. Refer to KSC-11863.

The All New Dash 8 Field Recorder From Astro-Med...

Big **COLOR** Monitor! Big Memory! Small Package!

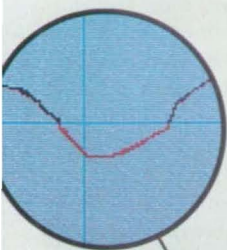

When signal exceeds pre-set limits, waveform automatically changes color.

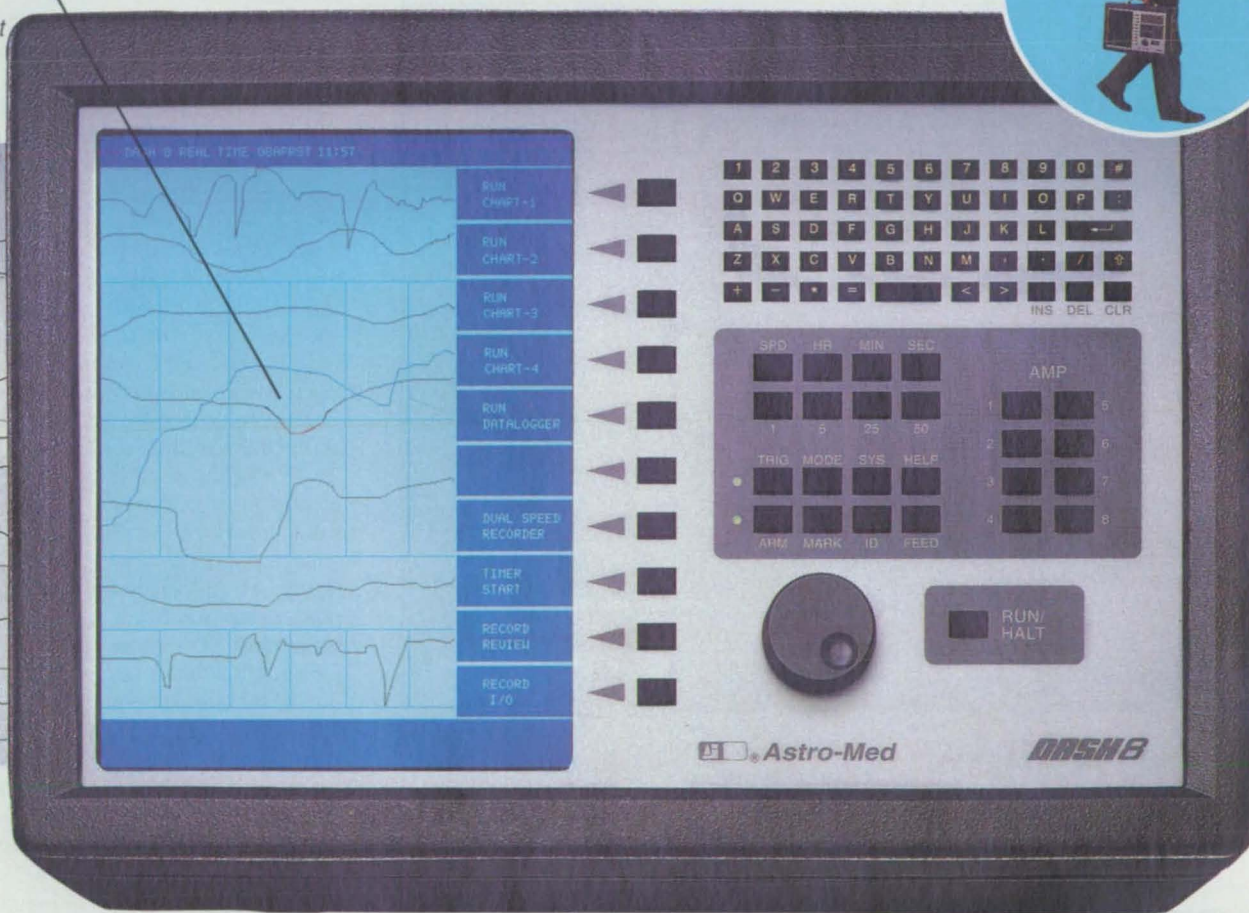

- 10.4 Inch Active Color LCD Monitor – Color Code Each Waveform for Quick Analysis
- 1 GB Internal Hard Drive & 100 MB Zip® Drive
- 8 Channels – 2 kHz Response
- Isolated Input Range – 50 mV to 500 V FS
- DSP for Filtering, RMS, Integration, and Derivative
- Handy Z-Fold Chart
- Rugged, Compact – Less than 20 lbs

Astro-Med's *all new* Dash 8 is the third generation model in its line of truly portable 8-channel field recorders. With increased power, ruggedness and compactness, it's always ready to take on any tough trouble-shooting job in

the lab or in the field. Look at data in real time on the color monitor and chart, or record data to the big internal hard drive for playback and review later on the big, bright color monitor. Or, transfer data to the built-in removable Zip drive and use your computer for further analysis or archiving. The *all new* Dash 8 – truly a remarkable recorder and data acquisition instrument you can take anywhere.

Call, E-mail, Fax, or write to us today for all the details.

Astro-Med, Inc.

Astro-Med Industrial Park, West Warwick,
Rhode Island 02893 • Telephone: (401) 828-4000
Toll Free: 800-343-4039 • Fax: (401) 822-2430
In Canada 1-800-565-2216

E-mail: astro-med@astro-med.com • Web Site: www.astro-med.com

Sales and Service Centers throughout the U.S., Canada and Europe. Dealers located throughout the world • Astro-Med is System Certified to ISO 9001

For More Information Write In No. 657



Electrokinetic Evaluation of Surface Coatings

Measurements yield data on surface chemistries.

Marshall Space Flight Center, Alabama

An improved method has been devised for electrokinetic evaluation of surface chemistries of polymeric and other coating materials that are typically biocompatible and intended for use in suppressing, enhancing, and/or utilizing a variety of phenomena that could include wetting, adsorption of proteins, and/or electrophoresis. The method overcomes some of the limita-


tions of conventional electrokinetic evaluation in terms of the zeta potential (the electric potential across the interface between a solid and a liquid).

Because the zeta potential of a chemical system can be related to a number of other properties of the system (e.g., agglutination, electrophoretic mobility, and surface charge density), it is widely used in industry and medicine to char-

acterize particles in suspension and the surfaces of fixed apparatuses. However, it has been very difficult to use the zeta potential to derive such useful information as the densities of surface chemical groups, whether those groups are reactive, whether they have reacted with a coating polymer, and how long the coating has stayed attached. The improved method makes it possible to obtain such information.

The method involves measurements of the pH dependence of electroosmotic flow in an electrophoresis chamber in which the flow channel is typically a quartz capillary tube coated with a suitable polymeric material, which could be, for example, poly(ethylene glycol) (PEG). The measurement data are analyzed via a site-dissociation mathematical model of pH-dependent electroosmotic flow: the model, adopted from the classical theory of electrokinetics, is used to relate electroosmosis to surface chemistry. In the model, surface charge is represented in terms of acid/base site dissociation of ionizable surface groups. The distribution of electrostatic potential at the liquid/solid interface is related to surface charge by use of the Gouy-Chapman theory of the electrical double layer, plus exact solutions of the Poisson-Boltzmann equation. Electroosmotic mobility is related to zeta potential via the Smoluchowski equation.

In preparation for initial experiments according to this method, terminally activated derivatives of PEG were grafted onto the inner surfaces of quartz capillary tubes that had been functionally activated, variously, with 3-aminopropyltriethoxysilane, 3-mercaptopropyltrimethoxysilane, or poly(ethylene imine). For each experiment, the capillary tube was inserted in a modified microelectrophoresis apparatus and the electrophoresis chamber (including the tube) was filled with an aqueous solution of 7.5 mM NaCl. To make the electroosmotic flow visible, the solution was formulated with a suspension of 1.02- μ m-diameter sulfated polystyrene latex spheres at a concentration of < 0.01 percent solids. In the experiments, grafts and activated surfaces were electrokinetically characterized by measuring the pH dependence of induced electroosmotic flow. The figure illustrates the apparatus and the results of some of the measurements.

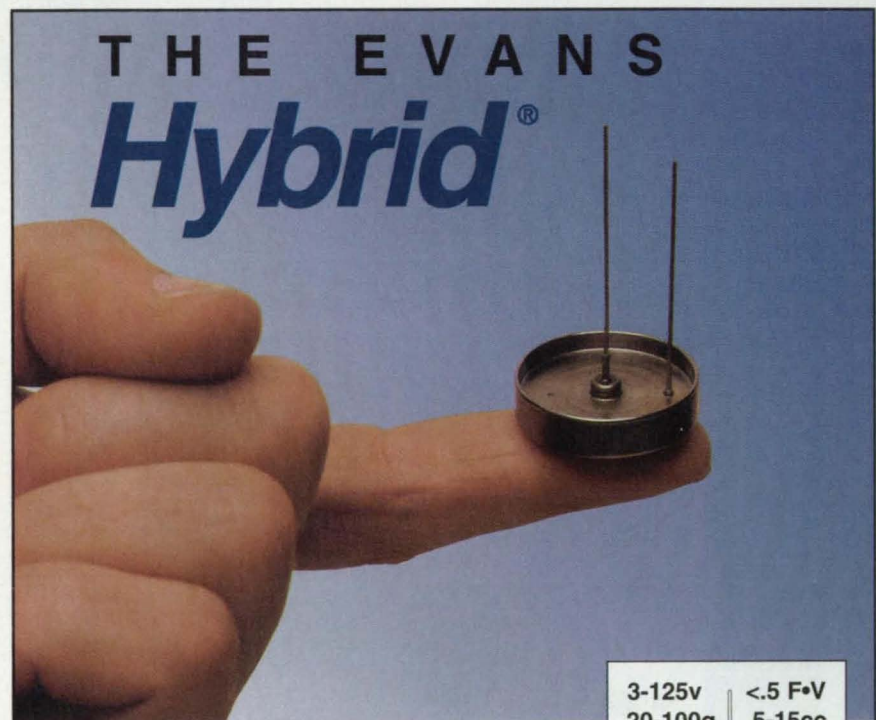

**A smaller,
lighter,
and more
powerful
capacitor.**

EVANS

The Evans Capacitor Company
P. O. Box 14158
East Providence, RI 02914-0158
(401) 434-5600 Fax (401) 434-6908
www.evanscap.com


The new Evans Hybrid® is an electrolytic-electrochemical capacitor with incredible properties:

- As little as 1/10 the volume of aluminum electrolytics
- 1/2 the weight of aluminum electrolytics

In two design styles, a hermetic tantalum package and a polypropylene package, Evans Hybrids are excellent for avionics, power supplies, power filtering, communications, weapons systems, medical applications, auto auxiliary systems and many very special uses.

Hybrids are designed and manufactured by the Evans Capacitor Company, known for the Capattery®, the world's leading electrochemical capacitor.

3-125v
20-100g

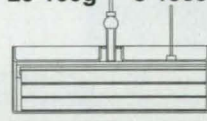

<.5 F•V
5-15cc


Kid's stuff.

SOLID EDGE
MICROSTATION
SOLID WORKS
ARTIS

Our stuff.

Which would you rather design with?

The PT/Products™ family includes a fully associative suite of mechanical design and manufacturing applications. The core module, PT/Modeler™, is a robust, 3D, parametric, feature-based, solid modeling system for part and assembly design, detailing, and documentation. Based on the proven technology of Pro/ENGINEER®, the PT/Products family is production-ready and dependable software ideally suited for manufacturing companies making the transition from 2D CAD systems to solid modeling. The U.S. list price for PT/Modeler is only \$2995. Why pay more and get less?

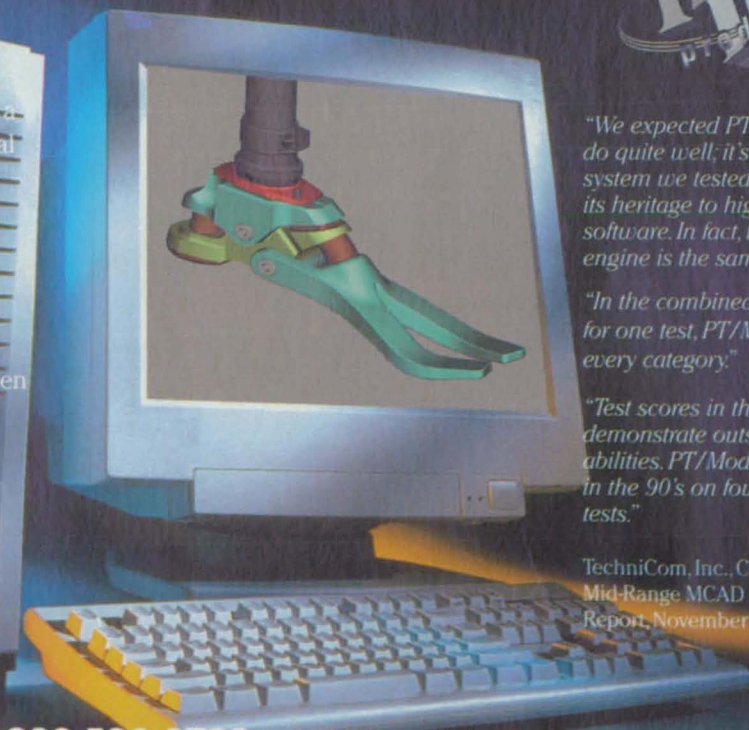

"We expected PT/Modeler to do quite well; it's the only system we tested that traces its heritage to high end software. In fact, the geometry engine is the same."

"In the combined tests, except for one test, PT/Modeler led in every category."


"Test scores in the 90's demonstrate outstanding abilities. PT/Modeler scored in the 90's on four of the five tests."

TechniCom, Inc., Clifton, NJ,
Mid-Range MCAD Benchmark
Report, November 1996

Call 1-800-596-6799 for additional information.

Visit us today at: <http://www.ptproducts.com>.

PT/Products™ and PT/Modeler™ are trademarks of Parametric Technology Corporation. All other company and product names are trademarks or registered trademarks of their respective owners.

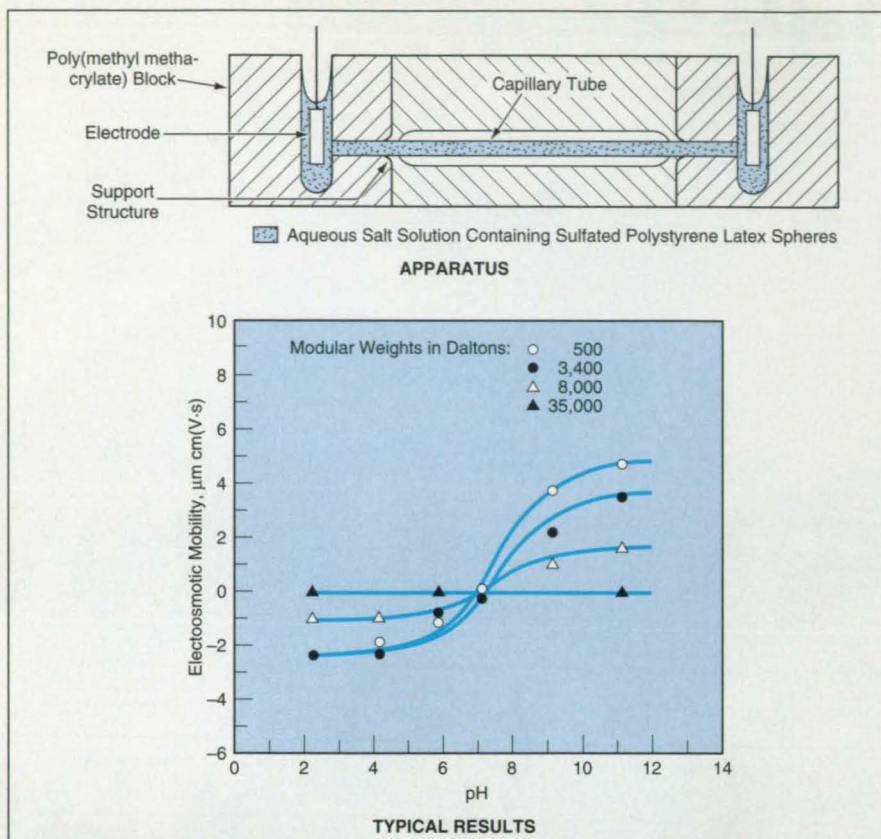

Electroosmotic Flow Was Measured in a modified microelectrophoresis apparatus. The curves were computed from measurements taken with capillary tubes coated with PEG of various molecular weights.

The mathematical model in this method provides means for quantitative determination of the densities of ionic surface molecular groups and of acidity and/or basicity in the near-surface environment. The model can also provide information on the effective coating thicknesses of adsorbed neutral polymers and, for some polymers, the relative graft densities. This information can be useful in interpreting complex chemical phenomena involved in applications of such PEG coatings as those used in preparation of nonfouling surfaces. In addition, electrokinetic characterization can provide information regarding stability of coatings, control of electroosmotic flow in analytical instrumentation, and the influences of adsorbed polymers on regulation of electric charges at aqueous/solid interfaces.

This work was done by J. M. Van Alstine, J. M. Harris, and N. L. Burns of the University of Alabama in Huntsville for Marshall Space Flight Center. For further information, write in 57 on the TSP Request Card.

Inquiries concerning rights for the commercial use of this invention should be addressed to the Patent Counsel, Marshall Space Flight Center; (205) 544-0021. Refer to MFS-26360.



THE NEW *Scan Do* ULTRA WHAT PUTS IT OUT IN FRONT? THE FEATURES BEHIND IT.

Introducing a giant step forward in broadcast-quality images. Scan Do® Ultra is everything you asked for in a workstation to video scan converter/down converter: powerful features you want, higher resolutions you need, the superior quality of the Scan Do family, and a price that's incredibly affordable. In fact, at just **\$6,495**, Scan Do Ultra offers the industry's best combination of performance and value.

So now you can create true broadcast-quality video from your high-res workstation, PC or Mac® — without creating problems for your budget!

But don't take our word for it. Call for a free demo, and we'll put a Scan Do Ultra in front of you. Then you can discover for yourself all the features behind our most powerful scan converter ever!


 **Communications
Specialties, Inc.**
...For high-performance computer video interfaces.

Phone: 516-273-0404 / Fax: 516-273-1638
E-mail: info@commspecial.com
Internet: <http://www.commspecial.com>

GSA #: GS-35F-4045D

Scan Do is a registered trademark of Communications Specialties, Inc. ©1997 Communications Specialties, Inc.
All other trademarks are property of their owners.

THE EASIEST WAY TO LEARN FEA YET: ON CD-ROM!

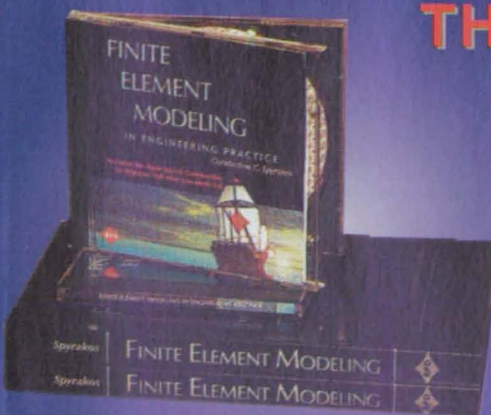



Have a question? Simply enter the keyword(s) into Algor's Search Commander, and it will take you to the answer with full color pictures, animation, FEA screen shots and sound. Directly enhanced from the 5000+ copy selling book, *Finite Element Modeling in Engineering Practice*, by Dr. Constantine Spyraikos, this CD-ROM demonstrates practical approaches to using FEA in real-world situations. It will teach you the basic and advanced skills you need to use any finite element analysis software without being bogged down in heavy theory.

Includes the Algor Search Commander
To "see what's out there" and discover the full potential of your FEA software.



Full-color 3-D graphics and animation bring FEA down to earth without all the confusing theories. Keep open as an on-screen reference guide while you work.

See a sample version at
www.algor.com/apd

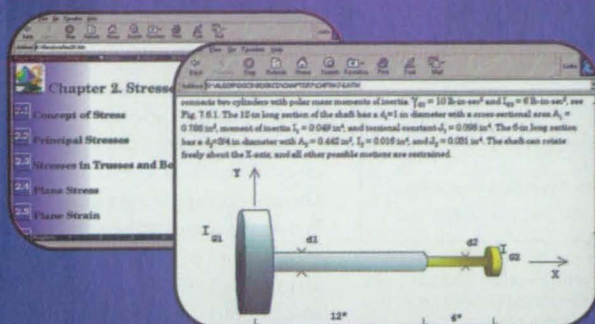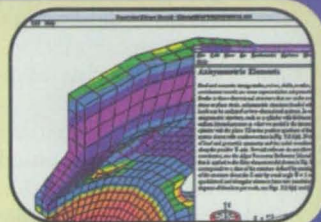

Enter a word or topic into Algor's Search Commander, and it displays a list of all relevant pages. Click on the page you want, and it takes you there instantly - far easier than flipping and hunting through pages.

Special Offer!

Buy the CD and get one softcover book for an additional \$19! Ideal for travel or home reading. See order form for details.

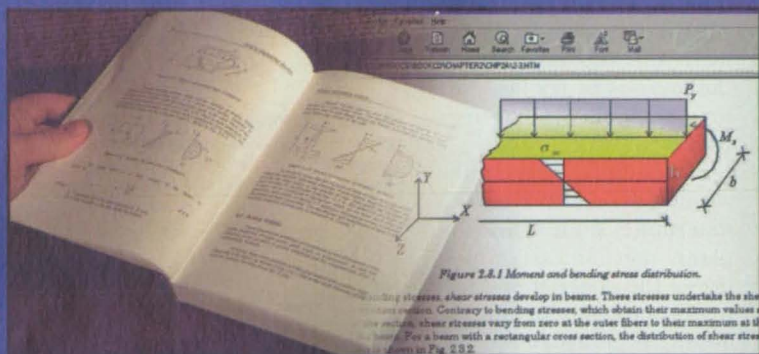


Figure 2.8.1 Moment and bending stress distribution.

All 322 pages of Dr. Spyraikos' book have been replicated onto the CD and digitally enhanced. Graphics that were once black and white and motionless now come alive with full-color, animation and sound.

Order by Phone:

North America: **1-800-48ALGOR**

Europe: +44 (1) (784) 442 246

Others: +1 (412) 967-2700

Fax: +1 (412) 967-2781

Questions answered in Dr. Spyraikos' CD-ROM and book:

- Which type of analysis is the best for my problem?
- What is the best element type for the application?
- How can I combine different types of elements?
- How do I model cracks, holes and discontinuities?
- When and where should I use a finer mesh?
- How do I identify modeling errors?
- Are my results accurate?
- How do I interpret my results?

Get more information on the Web:

WWW.ALGOR.COM/APD

Special discounts available for orders of five or more. Call for details!

Algor, Inc. Publishing Division
150 Beta Drive
Pittsburgh, PA 15238 USA

CD-ROM and books available:

Example files available for Algor, Nastran, Stardyne, Ansys, Cosmos, Patran, Abaqus and I-DEAS.*

All prices are in US Dollars	QTY	Price	Total
Interactive, Multimedia CD-ROM:		\$79.00	
Softcover Book:		\$49.00	
Special Offer: Add one Softcover Book to each CD-ROM ordered:		\$19.00	
Hardcover Book:		\$89.00	
First Printing Hardcover (limited supply):		\$149.00	
Optional example formats: (circle choices) Nastran Stardyne • Ansys • Cosmos Patran • Abaqus • I-DEAS		\$50.00* per format type	
Shipping & Handling: (see cost schedule below right)			
Order Subtotal:			
Sales Tax: (shipments to PA add 7%)			
Order Total:			

*Algor format files included at no charge.
CD-ROM runs on any Windows 95/NT or UNIX computer.
Copyright © 1997, Algor, Inc.

Ship to: (No P.O. boxes please)

Name _____ Dept. **NASA0697**

Company _____

Address _____

City _____ State _____ Zip _____ Country _____

Phone () _____ Fax () _____

E-mail _____

You Have Three Ways To Pay:

☐ Charge to Credit Card No.: _____ Date Card Expires _____

☐ American Express ☐ Master Card ☐ VISA ☐ Diner's Club ☐ Discover

Card Holder's Name _____

Authorized Signature _____ Date _____

☐ Wire transfer ABA Routing Code: 043000261
Account No.: 010-5064 Mellon Bank, Pittsburgh, PA USA

☐ Check enclosed (payable to Algor, Inc.)

Shipping & Handling Cost Schedule (Cost Per Book or CD-ROM in US Dollars)

USA Regular	USA 2-day Air	USA Next-day Air	Canada Regular	Canada (Air)	All other Countries (Air)
\$4.00	\$9.00	\$20.00	\$15.00	\$25.00	\$30.00



Testing and Analysis of Clothlike Structural Components

Nonlinear properties are characterized by a combination of experimental and theoretical techniques.

Marshall Space Flight Center, Alabama

A method of testing and analysis has been developed to enable characterization of the nonlinear mechanical properties of three-dimensional structural components made of cloth and clothlike materials. This development was prompted by the need to understand the properties of proposed spacecraft aerobrakes that would be made of tailorable advanced blanket insulation (TABI) (see Figure 1). The method is also applicable to the analysis of textile structural components for terrestrial use.

An essential part of the method is a series of tests to determine some basic in-plane mechanical properties of the material or structural component of interest. Testing is necessary because manufacturers' data on the properties of individual filaments and yarns do not include the effects of slippage between filaments and yarns woven into fabrics, nor do they account for the weakening effects of contact stresses and residual stresses generated in the weaving process. The tests include tensile stress-vs.-strain mea-

surements to obtain data on moduli of elasticity and strengths in the warp and fill directions, measurements of damping of free and forced vibrations under tension, and measurements of hystere-

sis curves under oscillating tension to obtain more complete information on the amount and type of damping. The results of initial tests of this type on TABI show that it stiffens as the applied load increases (see Figure 2) and that its in-plane damping behavior is consistent with that of a basic viscous damping mechanism for small vibration amplitudes.

Another essential part of the method is prediction of the out-of-plane dynamic behavior of a clothlike structure from the in-plane data derived from tests and/or from mathematical models that incorporate these data. This is accomplished by use of a finite-difference mathematical model of the structure and the applicable differential equations of motion.

This work was done by Michael L. Tinker of Marshall Space Flight Center and Joseph P. Clayton of Remtech, Inc. For further information, write in 88 on the TSP Request Card.

Inquiries concerning rights for the commercial use of this invention should be addressed to the Patent Counsel, Marshall Space Flight Center; (205) 544-0021. Refer to MFS-26357.

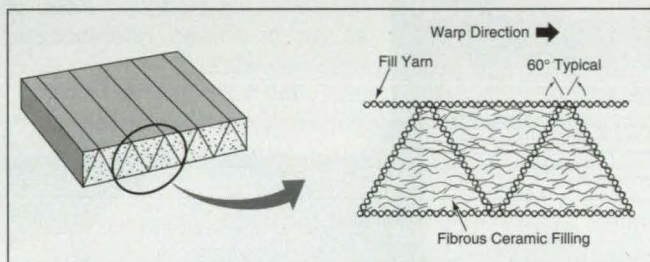


Figure 1. Tailorable Advanced Blanket Insulation can be used as a structural material. Because it has a three-dimensional configuration and complex mechanical properties, it must be analyzed by the method described in the text. Note that the fill direction is perpendicular to the page.

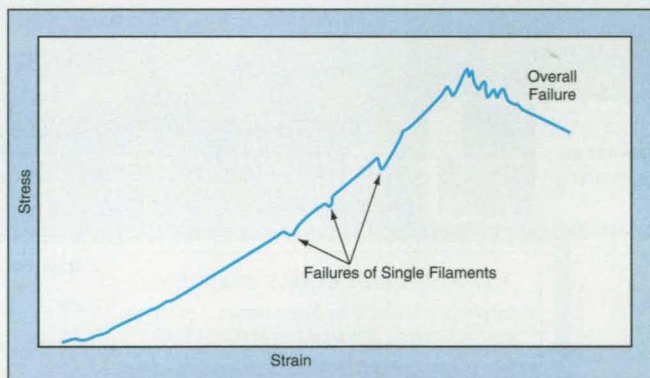


Figure 2. This Experimental Stress-vs.-Strain Curve shows the increase in stiffness with applied stress. It also shows that failure of the specimen occurred as a propagation of breakages of individual filaments rather than sudden failure of the entire specimen.

Water/Surfactant Solution as a Substitute for $\text{CCl}_2\text{F-CClF}_2$

John F. Kennedy Space Center, Florida

Commercial surfactants were tested to substitute for trichlorotrifluoroethane ($\text{CCl}_2\text{F-CClF}_2$) in special applications in which there is a need for solvent rinses to detect particulate contamination of workpieces. Deionized water without any additives has been found to dislodge fewer particles than does $\text{CCl}_2\text{F-CClF}_2$ because, it has been hypothesized, the high surface tension of pure water keeps the water from penetrating narrow pas-

sages, so that the water does not make contact with the entire surfaces of workpieces. In an experiment, water containing 25 parts per million of the commercial surfactant Zonyl FSN reduced the surface tension of the water from 72.8 dynes/cm to about 36 dynes/cm, and the water containing the surfactant was found to dislodge nearly the same amount of particulate matter as did $\text{CCl}_2\text{F-CClF}_2$. Unlike $\text{CCl}_2\text{F-CClF}_2$, the sur-

factant-treated water is nonpolluting and nontoxic. Moreover, in comparison with $\text{CCl}_2\text{F-CClF}_2$ the surfactant is inexpensive.

This work was done by Christian A. Clausen III of the University of Central Florida for Kennedy Space Center. For further information, write in 41 on the TSP Request Card.

Inquiries concerning rights for the commercial use of this invention should be addressed to the Patent Counsel, Kennedy Space Center; (407) 867-2544. Refer to KSC-11906.

Adherent and Stable Metallization of CVD Diamond

The choice of adhesion and diffusion-barrier materials is critical.

NASA's Jet Propulsion Laboratory, Pasadena, California

Experiments have shown that with the proper choice of materials, adherent and metallurgically stable metal contacts can be formed on chemical-vapor-deposited (CVD) diamond. Such contacts are needed for efficient thermal conduction and structural integrity in electronic devices designed for operation over a wide range of temperatures — especially in high-temperature electronic devices that exploit the electrically insulating and highly thermally conducting nature of diamond.

A metal contact on diamond is generally required to be both strongly adherent and stable at high temperature. The figure illustrates the material layers that are deposited in metallization of diamond, both (1) as practiced heretofore and (2) according to the present scheme for achieving adherence and metallurgical stability. To obtain strong adhesion, it is necessary to deposit a first layer of metal (the adhesion layer) that reacts chemically with diamond; to obtain high-temperature stability, it is necessary to deposit an overlayer.

Heretofore, adhesion layers have been made, variously, of Cr or Ti, while overlayers have been made, variously, of Au or Au/Sn alloy. Unfortunately, at high temperatures, Cr and Ti are soluble in Au and therefore diffuse from the adhesion layers into the overlayers, with resultant degradation of diamond/metal bonds and thus loss of adhesion. Typically, the maximum operating temperature at which minimum acceptable adhesion can be maintained is < 450 °C.

In the scheme for adherent and stable metallization of diamond, the adhesion layers and overlayers are made of the same materials as before, but in each case there are two adhesion layers separated by a diffusion-barrier layer. In this material system, a suitable diffusion-barrier layer is a film of amorphous Ti+Si+N that is reactively sputter deposited on the first adhesion layer, before depositing the overlayer. [Amorphous Ti+Si+N was previously developed for diffusion barriers between Si substrates and Cu overlayers.]

In the experiments, some CVD diamond specimens metallized variously as described above and illustrated in the figure were annealed for 30 minutes at each of a sequence of temperatures at

intervals of 100 °C up to 900 °C. Each annealed specimen was subjected to 3.2-MeV- α -particle-backscattering spectroscopy to measure interdiffusion of metal, and to a tape-pull adhesion test. In the specimen with a Cr adhesion layer but no diffusion barrier, substantial interdiffusion and delamination was observed after annealing at 300 °C. In the specimen with Cr adhesion layers

and a diffusion barrier, some interdiffusion was observed above the diffusion barrier, but the Cr adhesion layer below the diffusion barrier remained unchanged, and there was no delamination, even after annealing at 600 °C. In the specimen with Ti adhesion layer and no diffusion barrier, substantial interdiffusion was observed after annealing at 500 °C. The specimen with

We Have The Solution...



HARMONIC DRIVE COMPONENT SETS

Allows the design engineer to integrate the gearing directly into their equipment providing a compact, low weight solution.



HARMONIC DRIVE GEARHEADS

Shaft or flanged output members provides design flexibility, yet simplifies the design process by enclosing our component sets in housings with rigid output bearing support.



HARMONIC DRIVE ACTUATORS

DC or DC brushless servo motors are matched to precision gearheads to produce an actuator with optimum performance. Integral encoders are used for position or velocity feedback.



COMPLETE MOTION CONTROL SYSTEMS

DC or DC brushless servo actuators are available with matched amplifiers and controllers allowing fast prototyping of your new design.

...Reliability
...Precision
...Zero Backlash

HD Systems, Inc. 89 Cabot Court, Hauppauge, NY 11788

Tel: (516) 231-6630 • Fax: (516) 231-6803

Visit our home page at <http://www.hdsystemsinc.com>


Speak with Our Application Engineers
To Find the Solution for Your Motion Control Problem

Call Toll Free 800-231-HDSI



**WIN NT AND
PENTIUM PRO
COMPATIBLE!**

PIXCI™-SV3 PCI Image Capture

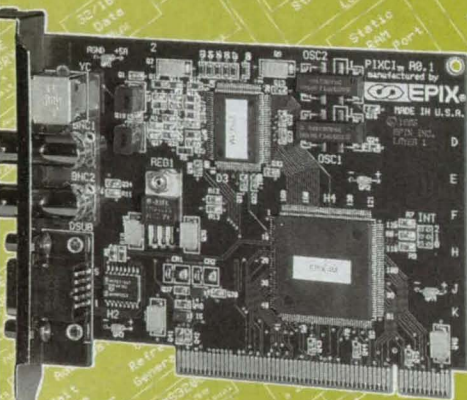

- PCI Bus Master
- S-Video, NTSC, PAL, CCIR, & RS-170 Input Capabilities
- 3 Video Inputs
- ± 2 Nanosecond Pixel Jitter
- Live S/VGA Display with Overlays
- Low Price/Simple Installation
- 8 Strobe/Trigger Signals
- Extensive Image Processing & Analysis Software Available

**Call with your
application questions**

847-465-1818


<http://www.epixinc.com/epix>



EPIX, Incorporated
381 Lexington Drive
Buffalo Grove, IL 60089 USA
Tel - 847 465 1818
Fax - 847 465 1919
epix@epixinc.com
<http://www.epixinc.com/epix>

©1997 EPIX, Inc.

For More Information Write In No. 410

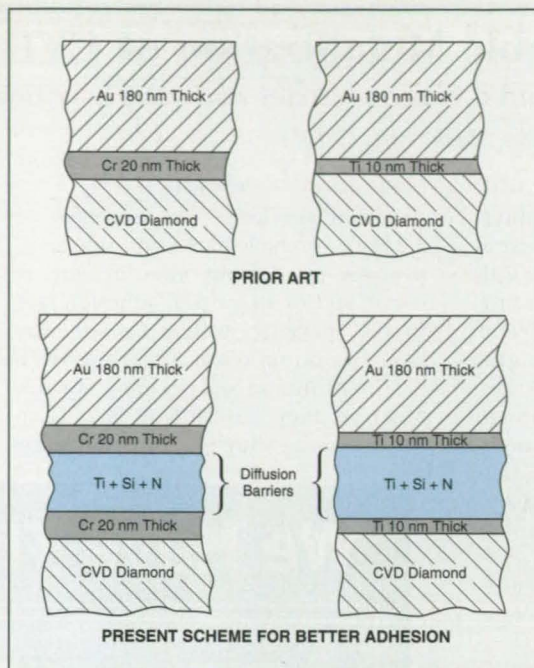

Layers of Amorphous Ti+Si+N help to preserve adhesion at high temperatures by preventing diffusion of metal from the adhesion layers to the gold overlayers.

a Ti adhesion layer and a diffusion barrier performed the best of all: it exhibited no interdiffusion or delamination

after annealing at 900 °C. In an additional test, this specimen also exhibited neither diffusion nor delamination after annealing for 100 hours at 400 °C.

This work was done by Andreas Bachli, Marc Nicolet, Elzbieta Kolawa, and Jan Vandersande of Caltech for NASA's Jet Propulsion Laboratory. For further information, write in 97 on the TSP Request Card.

In accordance with Public Law 96-517, the contractor has elected to retain title to this invention. Inquiries concerning rights for its commercial use should be addressed to

Larry Gilbert, Director
Technology Transfer
California Institute of
Technology
Mail Code 315 - 6
Pasadena, CA 91125
(818) 395-3288

Refer to NPO-19672, volume and number of this NASA Tech Briefs issue, and the page number.

Reinforced, Stretchable Elastomer for Use at Low Temperature

Knit fabric reinforcement prevents tears.


Lyndon B. Johnson Space Center, Houston, Texas

An elastomer reinforced with a knit fabric has been developed to satisfy the need for a material that remains flexible at temperatures down to -90 °F (-68 °C), can be stretched somewhat, and resists tearing. The material can be used in such diverse applications as lip seals, stretchable covers for machines, and Arctic structures.

The elastomeric matrix of this material is RTV 560 (or equivalent) silicone rubber, which remains flexible in the required temperature range, wherein most other elastomers become stiff or even brittle. However, this elastomer exhibits poor resistance to tearing. Accordingly, it is reinforced against tearing by incorporation of a knit polyester fabric (see figure).

The fabric stretches with the silicone rubber, but reaches a limit of stretchability below that of the rubber. The fabric thus stops the stretching at a predetermined tension, preventing tearing of the rubber. A knit (as distinguished from woven) reinforcing fabric was cho-

sen because it stretches readily in any direction. A woven fabric, in contrast, stretches only on the bias and its fibers could slide relative to each other, allowing the rubber to tear.

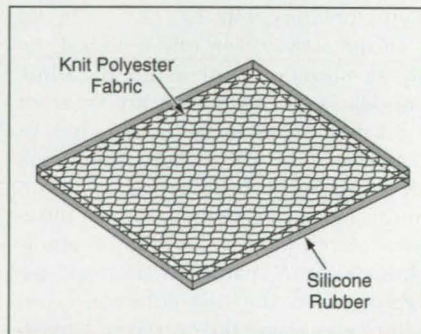

Knit Polyester Fabric reinforces silicone rubber, affording a somewhat stretchable material that resists tearing and remains flexible in extreme cold.

This work was done by Scott A. Swan, Frederic Dawn, and Ernest Murry of Johnson Space Center. No further documentation is available. MSC-22445

www.nasatech.com

NASA Tech Briefs, June 1997


UPSCA[®]

TECH BRIEFS

**Laser-
Induced
Fluorescence
Imaging**

**Joint-
Transform
Optical
Correlator**

**New
Photonics
Products —
See page 14a**

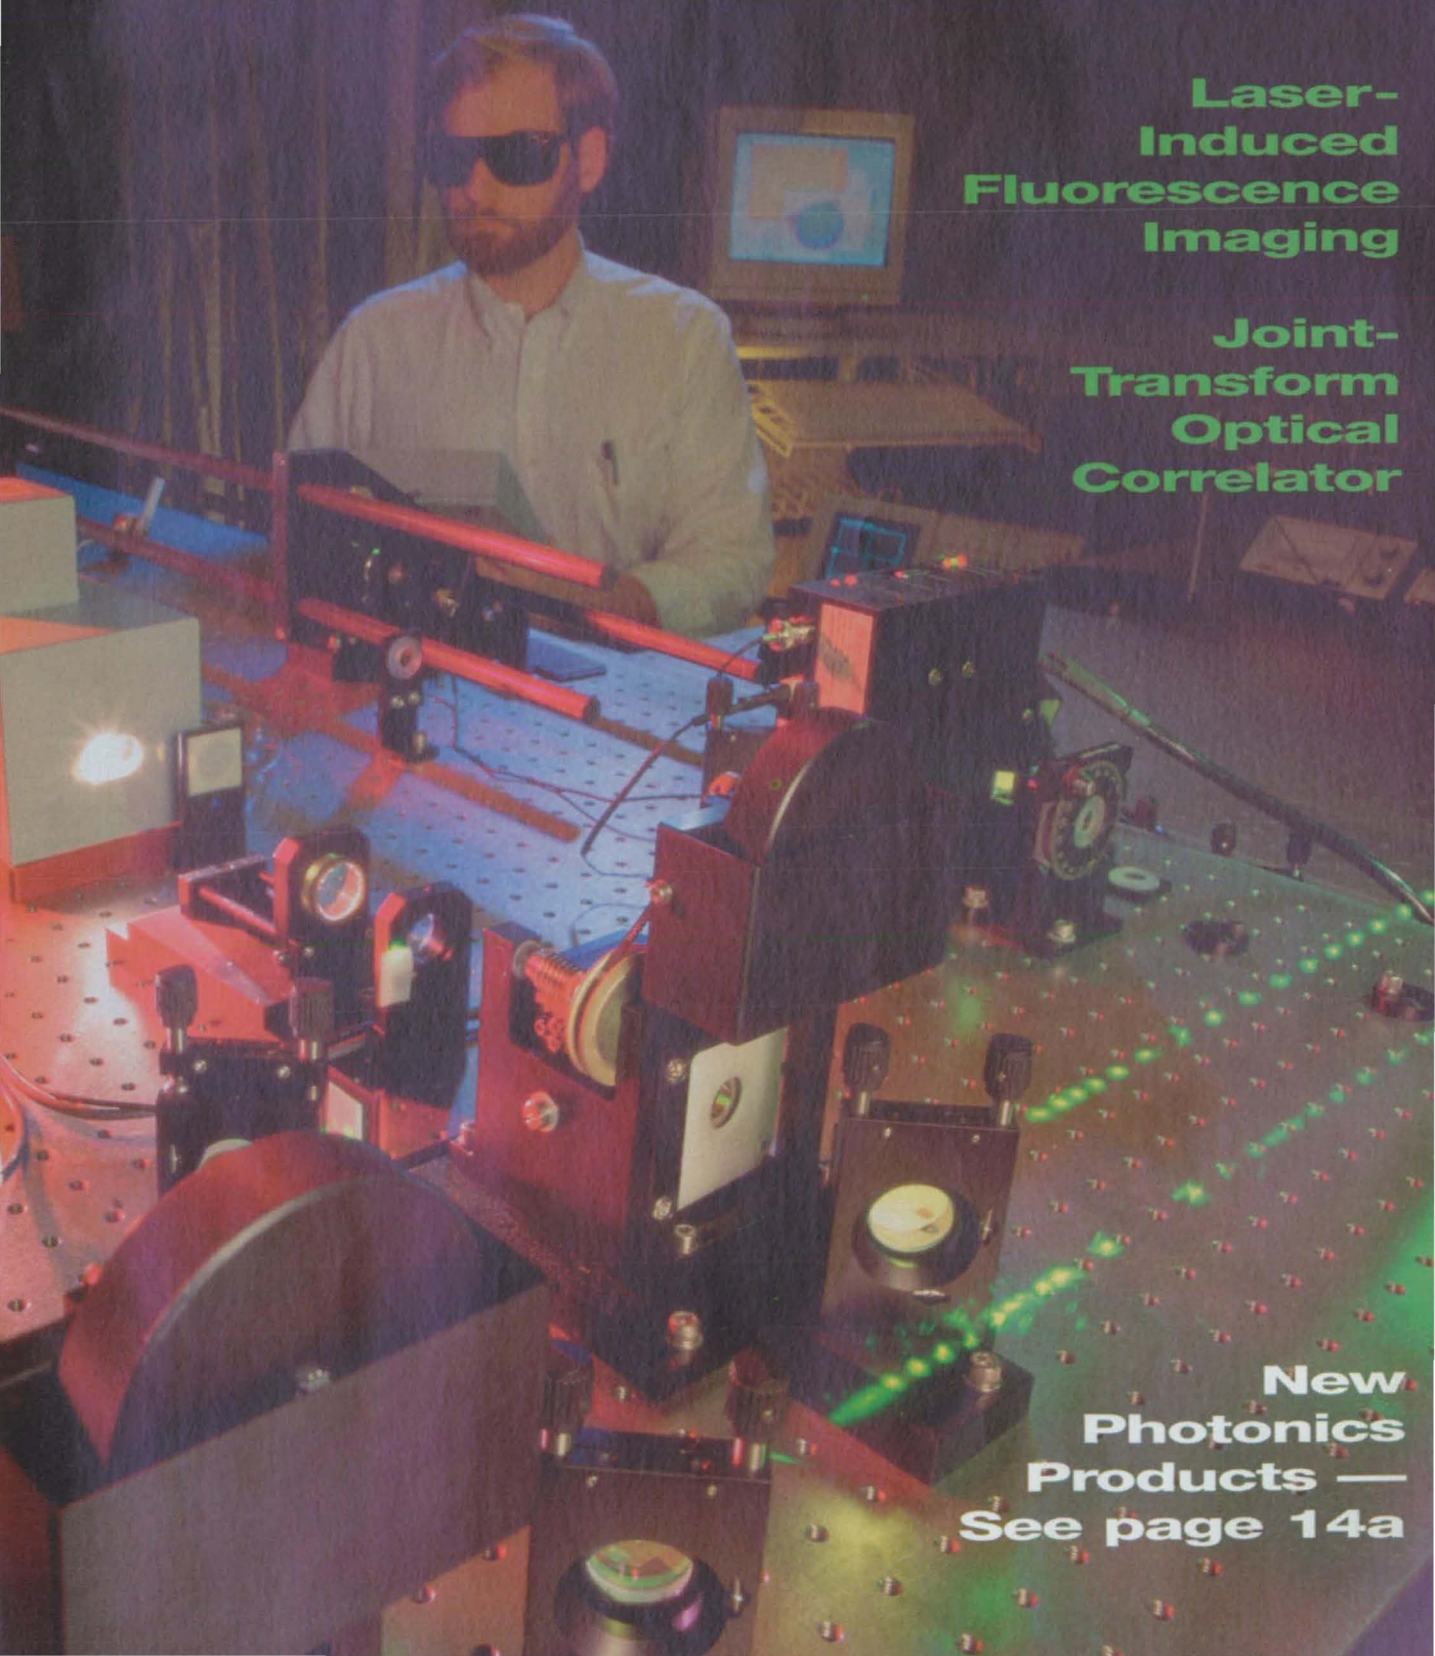

EXTREME CHILLING

NESLAB recirculating chillers provide extreme performance for the most demanding laser applications.

Extreme Temperature Control

Our chiller designs push the limits of temperature range and capability—computer interfacing, remote sensing, rapid cool-downs. Plus stability to the finest degree.

Extreme Fluid Compatibility

In the past, simply cooling with tap water was good enough. Today's applications demand the sophistication of deionized water and other fluids that demand specialized materials of construction for compatibility.

Extreme Pumping

Name your flow and pressure and we can provide a pump to meet it. We have over 50 different pumps and plumbing configurations to meet your custom fluid and circulating requirements.

Extreme Customer Support

A NESLAB chiller is at home in all parts of the world. Whether installed in Asia, Europe or North America, we have a customer service office to respond quickly to technical questions and equipment servicing.

We take chilling to the extreme.

If you want to know more about NESLAB chillers, simply phone us at **800/4NESLAB** today.



NESLAB Instruments, Inc.
PO Box 1178
Portsmouth, NH 03802-1178
BBS-603/427-2490 8-N-1



For More Information Write In No. 452

LASER TECH BRIEFS

- 4a Real-Time Fluorescence Imaging of Uranium, Polyaromatic Compounds, and Vegetation Stress
- 6a Data Protocol for Optically Powered Sensors
- 8a Insensitive Laser-Ignited Explosive Components
- 10a Multiloop Photonic/Electronic Frequency Synthesizers
- 12a Joint-Transform Optical Correlator with Holographic Memory

DEPARTMENTS

- 2a News Briefs
- 13a New Literature
- 14a New Products

On the cover:

In addition to a standard line of solid-state scientific lasers, Continuum of Santa Clara, CA, supplies custom installations such as the one pictured here in a laboratory. The company specializes in high-energy Nd:YAG, glass, and ruby systems, macro-pulse designs, and terawatt benchtop lasers.

One Stop Shopping!

A range of PCI Power Grabbers™ for all your vision applications

From the low end PCI Frame Grabbers, to the high end Imaging Boards with DSPs and Pipeline Processors, the DIPIX Power Grabber family offers the widest range of PC based vision boards.

- Analog and Digital Camera Input
- Line and Area Scan Camera Support
- General Purpose TTL and RS422 I/O
- Optional DSPs and Pipeline Processors
- Imaging Library for DOS, Win 3.x, 95, NT and QNX

XPG-1000 Power Grabber™

PCI Frame Grabber + C40 DSP + DRAM + Pipeline Processors



FPG-44 Power Grabber™

PCI Frame Grabber + C44 DSP + SRAM




LPG-132 Power Grabber™

PCI Frame Grabber



PPM-GEN Pipeline Processor™

Convolution, ALU, Histogram



PPM-APA Pipeline Processor™

Blob, Web Inspection, Target Tracking

dipix

IMAGING PRODUCTS


Email: info@dipix.com Web: www.dipix.com Toll Free: 1-800-724-5929

Dipix Technologies Inc., 1051 Baxter Road, Ottawa, ON, Canada K2C 3P1 Tel: 613-596-4942 Fax: 613-596-4914

NEWS BRIEFS

Notes from Industry and the Federal Laboratories

In what **University of Michigan** (U-M) physicists call the first experimental modification of one of the fundamental quantum states of solid matter, they have used ultrafast laser pulses to "squeeze" atoms. It has been about a decade since scientists discovered how to create the squeezed state for photons, but the U-M experiment was the first to apply the technique to phonons, which carry vibrational energy through a solid.

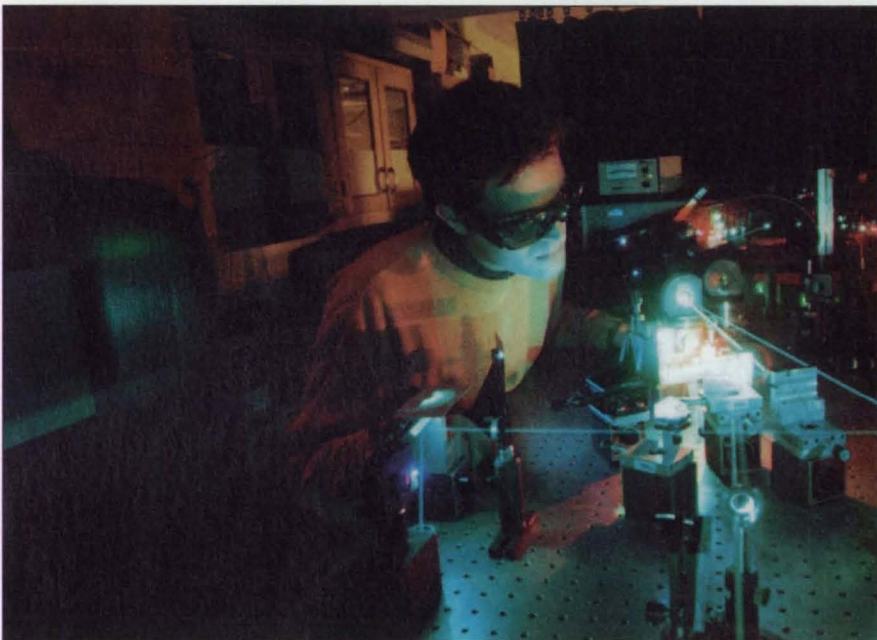

University of Michigan graduate student Gregory Garrett with the laser system used in the "quantum squeezing" experiment. Photo: Bob Kalmbach, U-M

U-M graduate student Gregory Garrett conducted the experiment, using a Ti:sapphire laser at the Center for Ultrafast Optical Science. He aimed 70-femtosecond laser pulses at a tiny spot on a potassium tantalate crystal. Splitting the laser beam, Garrett diverted one part so that it arrived at the target a few picoseconds after the initial pump pulse. When the stronger pump pulse hits the atoms, it creates pairs of phonons and makes the atomic lattice oscillate, Garrett said. The weaker probe pulse is scattered by these phonons as it later passes through the lattice. Measuring the amount of probe pulse energy that gets through the crystal gives an idea of the atomic state inside.

One of the researchers, assistant professor Alberto Rojo, described the atoms in the lattice as bouncing balls

tethered to a wall with elastic. When the initial laser pulse strikes, it stretches the spring constant of the elastic, expanding the quantum limits or the original range of the atom's movement. After the pulse passes, the elastic suddenly snaps back, reducing the atom's range of movement to a fraction of its original size. Thus for a very brief moment, equivalent to one-half its normal oscillation cycle time, the atom is "squeezed" below its quantum limit.

Along with Rojo and Garrett, other collaborators on the experiment included Roberto Merlin, professor of physics, A. K. Rood of the Indian Institute in Bangalore, and John F. Whitaker, associate research scientist at

the U-M Center. The project was funded by the National Science Foundation and the Army Research Office.

SDL Inc., of San Jose, CA, announced that the Court of Federal Claims had granted summary judgment in its favor in a case brought against it by Rockwell. The judgment declared invalid key portions of a Rockwell patent for a metal-organic chemical vapor deposition (MOCVD) process used to manufacture optoelectronic devices. Rockwell had claimed that manufacturing processes SDL used to fabricate its semiconductor lasers infringed the patent.

Argonne National Laboratory has licensed to **Spawr Industries Inc.** of Lake Havasu City, AZ, the design for a monitor that aids in improving the quality of laser welds by identifying

defects. The monitor was developed by the Dept. of Energy lab and **Delphi Energy and Engine Management Systems** of Flint, MI.

In cooperation with the Low Emissions Partnership (LEP) of the U.S. Council for Automotive Research (USCAR), Spawr changed the original design for the better by integrating the weld monitor into the focusing optics assembly, so that alignment is not necessary on the factory floor.

Designed to be rugged, low-cost, and simple to use, the system is based on a passive sensor and associated optics that measure infrared emissions related to weld penetration during processing. Thus the monitor can flag bad welds or automatically change laser power levels for a proper weld.

Spawr Industries also offers a stand-alone version of the monitor with laser aiming that is suitable for research and development applications, and another version that can be retrofitted on existing systems.

The project was funded through the Laboratory Technology Research Program in DOE's Office of Energy Research, and the Office of Transportation Technologies. One of 14 research consortia established by USCAR, which was formed by Chrysler, Ford, and General Motors, LEP explores and shares technology for reducing auto emissions.

The **U.S. Dept. of Commerce's** Economic Development Administration (EDA) has awarded the **Beckman Laser Institute** of Irvine, CA, a grant of \$1 million to build a facility housing a Photonic-Based Defense Technology Incubator for Biomedical Devices and Systems. The facility will house a public-private consortium of medical device entrepreneurs, biotechnology firms, university biomedical researchers, and clinicians who will seek ways to apply lasers, optics, and detectors developed for military purposes to the diagnosis and treatment of disease. The Photonic Incubator will occupy a 10,000-sq.-ft. building expansion at the Institute, and will include engineering development and testing labs, a clinical applications suite, and program office space.

In addition to the grant from the EDA, which is approximately half of the construction funds, the project is getting operational funding from the California State Office of Strategic Technology, UC Irvine, and the Beckman Laser Institute. Dr. Arnold Beckman of the Beckman Family Trust has issued a challenge grant to provide construction funds.



**You said you
needed ultra
high resolution
imagers.**

**We said:
"We've got a
16 million pixel
full-frame chip
off the shelf!"**

**From the reliable
source for very high
resolution imagers.**

With over 16 million pixels (4k x 4k), our full-frame *Kodak Digital Science™* KAF-16800 Image Sensor is ready for your extremely high resolution imaging requirements.

The single output amplifier eliminates the matching problems associated with parallel output amplifiers. Use the KAF-16800 for your most demanding applications – including film digitizing, industrial inspection, aerospace, and medical.

Need high resolution interline imagers with electronic shutter, anti-blooming and low smear?

Try our 1k x 1k progressive scan KAI-1001M imager.

Or call us about our 2 million pixel KAI-2090 chip.

Both have built-in microlenses for improved sensitivity and optional color filter array!

And don't forget that Kodak provides a

complete line of high resolution linear imagers including our 6000 pixel KLI-6003 and our 8000 pixel KLI-8013 tri-color linear arrays. Ideal for film and document scanning, inspection, and studio cameras.

ISO 9001 CERTIFIED

Kodak is your reliable source for high performance, full-frame, interline, linear, and IR sensors as well as support ASICs. We're setting the standards for new and emerging imaging technologies worldwide with our comprehensive capability in design, fabrication, testing and technical support.

716-722-4385, ext. 503

Call us today and talk to a Kodak engineer about your application.

We'll help you select the imager your products deserve.

**THE
SOLID STATE
OF IMAGING
AT KODAK**

Kodak *ds*
digital science™

© Eastman Kodak Company, 1995. Kodak, Digital Science, and the ds monogram symbol are trademarks.

For More Information Write In No. 451

Real-Time Fluorescence Imaging of Uranium, Polyaromatic Compounds, and Vegetation Stress

The laser-based technique maps emissions from spatially distributed materials.

Special Technologies Laboratory, Santa Barbara, CA


*Department of Energy, Assistant Secretary for Environmental Management,
Office of Science and Technology (DOE/EM/OST)*

A laser-induced fluorescence imaging (LIFI) system is being developed to aid in the detection, characterization, and monitoring of contaminants and the environment. LIFI is an optical technique based on the spatial imaging of fluorescent compounds irradiated with laser light. Initial LIFI work has focused on the detection of uranium during the decontamination and decommissioning (D&D) of buildings; the detection of polyaromatic (organic) compounds (PAHs) in water and soils; and vegetation stress as an indicator of subsurface contamination and general plant health.


Compared with passive electro-optical imaging sensors, LIFI is capable of greater spectral selectivity and sensitivity and can be used during night/low-light operations. Compared with radiological sensors (e.g., NaI and HPGe crystal-based sensors), LIFI offers better chemical speciation and greater spatial resolution for material identification and location.

Two operational versions of the LIFI system are currently being developed and evaluated: an airborne sensor for large-area surveys, and a handheld system for indoor and spot investigations. The current LIFI configurations include UV and visible laser sources (355- and 532-nm wavelengths), intensified charge-coupled device (CCD) cameras, and real-time image processing systems for instantaneous viewing. In the close-proximity systems, such as the uranium survey tool, video images are stored digitally for future display and analysis. The airborne system stores a large "cube" of imagery in multiple colors using a custom interface and disk array.

Although fluorescence spectra have been measured for decades, LIFI is truly innovative because it is an imaging system capable of mapping surfaces—a critical need for contaminant remediation in the environment. LIFI data are not simply one-dimensional fluorescence spectra, but image maps of fluorescent emissions from spatially distributed materials. In environmental terms, these image maps could represent uranium particles spread over a field or within a building, or they could be stressed trees, shrubs, and grasses that

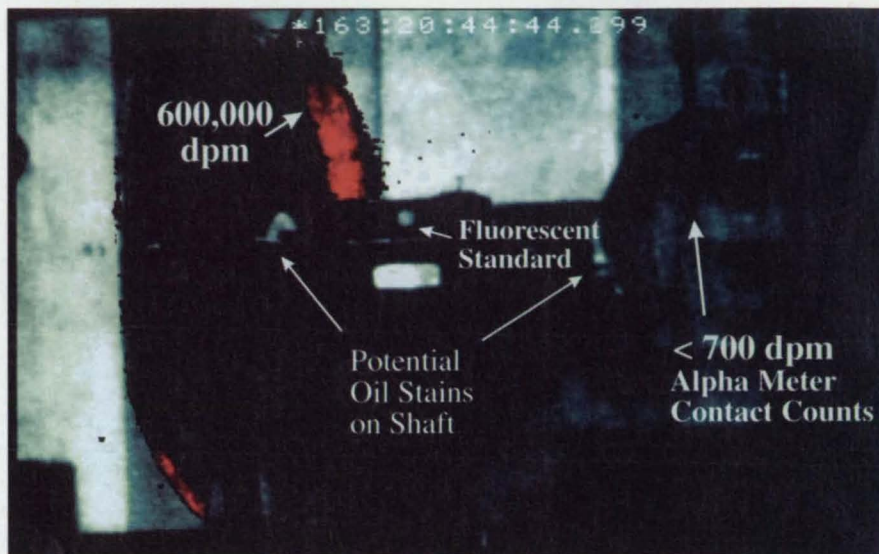

Laser-Induced Fluorescence Imagery at the K-27 Gaseous Diffusion Facility at Oak Ridge, TN. The gray areas show the prompt fluorescence, with the electro-optic shutter open during illumination. The red areas show the uranium fluorescence view, with the delayed long shutter rejecting the prompt view. Photo courtesy of USDOE Special Technologies Laboratory.

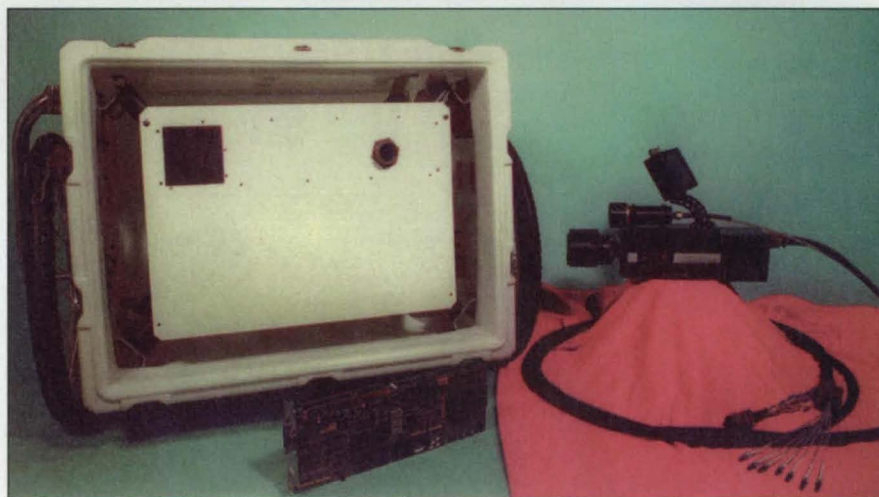


The Handheld Uranium Survey Tool. Photo courtesy of USDOE Special Technologies Laboratory.

have been affected by subsurface contaminant flow.

The spectral characteristics of material fluorescence are often a function of the excitation wavelength of the light source. This is especially true for complex materials such as plants. At a given excitation wavelength, material fluorescence can be defined by its emission spectrum and decay time. Most materials have peak-response wavelengths for excitation and emission, as well as a time period during which the emission

occurs. In other words, a specific laser wavelength will induce the maximum fluorescence response from a given material during a specific period of time. Tests of laser fluorescence techniques for the U.S. Navy showed that environmental contaminants, including organic solvents, polyaromatic hydrocarbons (PAHs), and heavy metal oxides, had relatively unique fluorescent responses, or "signatures," when illuminated by a XeCl UV excimer laser system. Further tests in the laboratory

LOOK TO CANON FOR SOLUTIONS TO ALL YOUR IMAGE CAPTURE NEEDS.

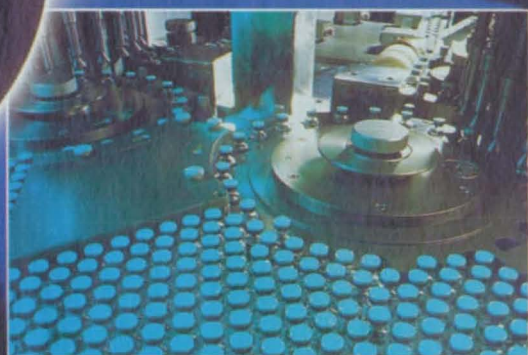

As video imaging becomes increasingly important in manufacturing, line inspection, automation, sorting, robotics, and machine vision in general, Canon continues to set the standard with superior optics that deliver unmatched quality and performance.

As the worldwide leader in broadcast television lenses, Canon is equally committed to engineering the best industrial lenses, while providing real solutions for the broad range of high quality video user needs.

Our line of multi-use industrial lenses include the H17X9.5 KTS A, the YH17X7 KTS A and the H13X7.5 KTS A. These lenses feature many

important advantages such as super close-up, 17X zoom capability (found in the YJ17 and YH17), and other benefits normally associated with Canon's world-class broadcast television lenses. The lenses can be used with most any 2/3" or 1/2" camera and offer remote control zoom, focus and iris functions available via our TCR-101F, 201F or 301F line of controllers.

Lightweight and sturdy, these lenses are also available with a simple interface for use with custom controllers.

Rely on Canon to meet and exceed the most demanding expectations. For more information, please call 1-800-321-4388.

Canon
The Number One Lens

Web site @ <http://www.usa.canon.com>

For More Information Write In No. 458

A new laser line comes to light.



LASIRIS introduces the new LC series laser line generators with fixed pattern heads and factory-set focus adjustment. Now you can get our renowned quality in a better-priced laser.

MADE TO PERFORM.

- uniform intensity distribution
- modulation up to 2 MHz
- ultra-thin line (down to 25µm)

MADE TO LAST.

- ESD-protected to more than 8,000 V
- over-temperature protected
- over-voltage protected
- CDRH and IEC compliance
- compact and rugged design

For lasting performance at the right price, call
1-800-814-9552

LASIRIS INC.

For U.S. customers, FOB NY State

3549 Ashby St., St-Laurent, Quebec, Canada H4R 2K3
Tel: (514) 335-1005 Fax: (514) 335-4576
Internet: <http://www.lasiris.com>
E-mail: sales@lasiris.com

defined a signature for uranium oxide.

The LIFI technique for uranium detection is based on the time-delayed fluorescent properties of uranium in the VI+ oxidation state. Most compounds that fluoresce, particularly such organics as chlorophyll in plants and hydrocarbon fuels, will do so promptly during excitation. When uranium is excited by a UV laser at 355 nm, however, its peak fluorescence is persistent (phosphorescent), lasting considerably longer than the laser pulse. By delaying the activation of the camera shutter after a laser pulse (on the order of nanoseconds), the prompt fluorescence of other compounds can effectively be removed, isolating the presence of uranium. Spectrally filtering with a bandpass filter decreases the total amount of ambient light that is collected during the camera's gate pulse and helps to reject any out-of-band phosphorescence associated with other materials. It also serves to increase image contrast.

In the current handheld system pic-

tured, the laser and power supply are housed in a portable cart fiber-optically cabled to the handheld (camera/laser head) unit. In operation, the user has a head-up display on the handheld unit for the instantaneous display of data. In the system currently being fabricated, the cart is being replaced by a backpack unit weighing approximately 30-40 lbs., depending on system configuration. The airborne system was designed in modular units so that it can be flown on a number of different platforms. The system is scheduled for flight tests this year on a U.S. Army Blackhawk helicopter.

This work's principal investigator is Dr. John DiBenedetto of the Department of Energy's Special Technologies Laboratory (STL). For further information, contact Dr. DiBenedetto at (805) 681-2240 or E-mail: dibeneja@nv.doe.gov.

Inquiries concerning rights for the commercial use of this invention should be directed to Charles Hudson, STL, at (805) 681-2234.


Data Protocol for Optically Powered Sensors

Data-transmission intervals would coincide with power-interception intervals.

NASA's Jet Propulsion Laboratory, Pasadena, California

A data-transmission protocol has been devised for proposed optoelectronic sensor units that would be strung in series along optical fibers and powered by pulses of light. More precisely, the sensor units would be

connected in series along two optical fibers; one fiber for distribution of power from a master unit to the sensor units, and one fiber for transmission of sensor data from the sensor units back to the master unit (see figure).

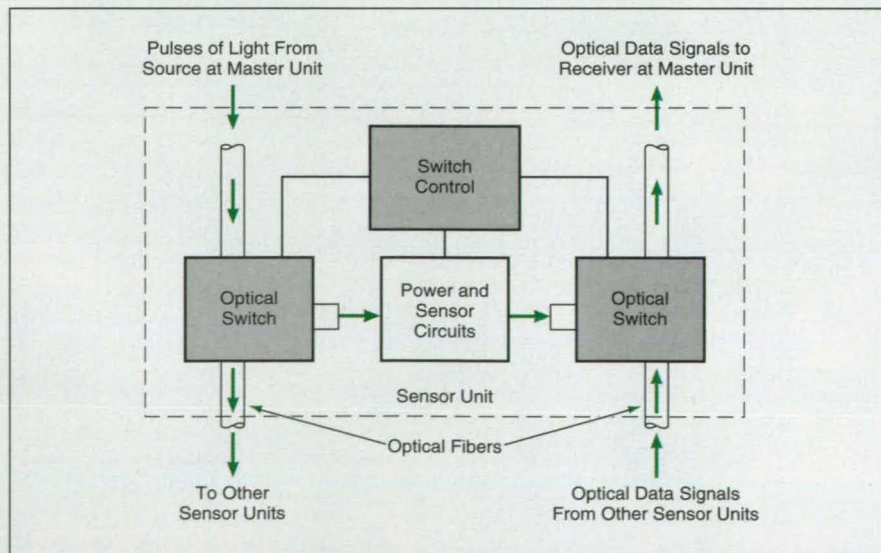

Two Optical Fibers would connect all units, as in a string of beads. Each unit, in turn, would extract power from the left optical fiber and transmit data to the master unit along the right optical fiber during part of the operating cycle.

The operation of the power-distribution subsystem was described in "Fiber-Optic Distribution of Pulsed Power to Multiple Sensors" (NPO-19420), *NASA Tech Briefs*, Vol. 20, No. 5 (May 1996), page 18a. To recapitulate: Pulses of laser light would be transmitted along an optical fiber from a power-supply unit. Each sensor unit would include an electronically controllable optical switch, which could be controlled to either (a) divert all of the optical power to a photovoltaic cell and power-conditioning circuitry to charge an energy-storage device in the sensor unit or else (b) allow the light to continue traveling along the power-distribution optical fiber to other sensor units downstream. Each sensor unit, beginning with the one nearest the laser source, would take all the optical power in the fiber for a fraction of each pulse period, and then would once again allow light to pass through to the next sensor. Thus, each sensor in turn would consume all the power for some fraction of the time of the pulse that remained after partial consumption by the preceding sensors.

The data-transmission protocol would be based on the power-distribution protocol and would be implemented with the help of a second electronically controlled optical switch in each unit. Success in building systems according to this concept would depend on the anticipated development of such optical switches with low insertion losses and the ability to operate on low control power. The data-transmission switch in each unit would be set in the pass-through state during the power-pass-through portion of the operating cycle. However, during the power-interception portion of the operating cycle, the data-transmission switch would be set to couple an optical data signal from the sensor unit into the fiber, propagating toward the master unit. This optical signal would bear sensory data stored since the previous transmission period. By relying on the power-transmission protocol for timing, one could ensure that each sensor unit, in turn, could have a clear optical channel to the master unit for optical transmission of data without interference from the other units.

This work was done by Harold Kirkham of Caltech for NASA's Jet Propulsion Laboratory. For further information, write in 6 on the TSP Request Card.
NPO-19421

Laser Diode Optics



Looking for outstanding quality, unique laser diode products, and excellent service? Think of Optima. We maintain this simple and straightforward business philosophy by creating unique products that complement the use of laser diodes in today's dynamic technological market.

Whether you need a custom assembly or just an off-the-shelf component, you'll find Optima provides personal service to meet your requirements. Please call or fax requesting our catalog covering these products:

- ☐ Laser Diode Collimating and Objective Lenses (multi-element glass and single-element glass and plastic aspheric lenses)
- ☐ Diode Laser Modules 635nm to 685nm
- ☐ Line Generating Modules and Lenses
- ☐ Mounting Kits for Laser Diodes
- ☐ Collimated Diode Lasers
- ☐ Anamorphic Prisms for Beam Shaping
- ☐ Laser Diodes from 635nm to 850nm with optical power from 3mW to 50mW




OPTIMA®

Optima Precision Inc.
775 SW Long Farm Road
West Linn, Oregon 97068

<http://www.optima-prec.com>
Phone: (800) 544-4118
Fax: (503) 638-4545

Optics & Imaging Catalog

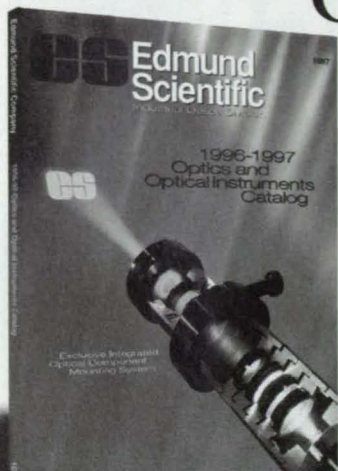

**With Over
8,000 Products
We Have Your
Solution!**

- Optical Components
- OEM Optics
- Test Equipment
- Video Systems
- Machine Vision
- Critical Measuring
- Positioning Equipment
- Lasers & Laser Optics

All items are in-stock and ready to ship. For over 50 years Edmund's has been providing technical solutions. Let us help you.

**▲ Request Your Copy Today
609-573-6250**

Edmund Scientific
INDUSTRIAL OPTICS DIVISION

Dept. B971, N948 Edscorp Bldg., Barrington, NJ 08007-1380
Phone: 609-573-6250 Fax: 609-573-6295 E-Mail: B971N948@edsci.com

For More Information Write In No. 455

Measure surface stress and retained austenite

**NONDESTRUCTIVE RESIDUAL STRESS ANALYSIS
SYSTEMS AND SERVICES.**



▼ TEC Model 1630-3 Series Stress Analyzer

Designed for use on the factory floor or in the laboratory.
X-ray diffraction technique, no destructive sectioning.

▼ TEC Stress Services Group

Fast, accurate analysis performed in our lab or at your site.
Residual stress analysis and retained austenite analysis.

TEC PRODUCTS and LAB SERVICES
10737 Lexington Drive, Knoxville, TN 37932
<http://www.tecstress.com/tec>
423-966-5856 fax: 423-675-1241

Insensitive Laser-Ignited Explosive Components


Explosive components are designed to be safe in adverse environmental conditions.

EG&G Mound Applied Technologies, Miamisburg, Ohio

Pyrotechnic and explosive components, which include ignitors, detonators, and actuators or squibs, are employed in a number of applications from the stage separation of rockets to the deployment of airbags in recent-model automobiles. Present-day devices are typically functioned by delivering an electrical signal through a metal pin or pins to the bridgewire. These pins are electrically isolated from each other and the metal shell by an insulating material, usually a ceramic, glass, or glass-ceramic. The energy obtained from the bridgewire ignites the surrounding energetic material, resulting in the component performing the required operation.

Over the years bridgewire components have been used in numerous applications despite having several inherent safety limitations. These safety concerns are based on the fact that the energetic or explosive material contained within the component is not truly isolated from the outside environment, making them susceptible to the effects of: (1) spurious levels of electromagnetic radiation (radars); (2) electrostatic discharges (lightning); and (3) temperature transients, principally fire-related, which may result in the undesired activation of the component. Therefore, these components are capable of premature ignition, which may result in catastrophic personal injury and/or property damage.

During the last several years laser-ignited explosive components which are impervious to electromagnetic radiation and electrostatic discharges have been developed. Laser-ignited explosive components utilize a combination of either a laser and optical fiber or a laser and a transparent window in place of a bridgewire and metal pins. These laser-ignited components can be initiated using a variety of rod or semiconductor lasers that produce sufficient energy through an optical fiber to ignite the energetic material. Even though these components are impervious to electromagnetic radiation and electrostatic discharges, they are still not completely environmentally safe since they are susceptible to inadvertent initiation due to bonfire or transient heating events. This fire safety concern has been the driving force in the development of insensitive bonfire-safe laser-ignited components that are equipped with safety valves.

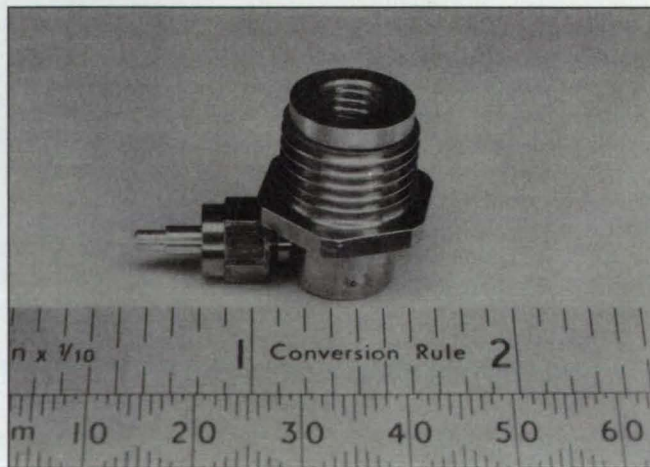

An unloaded Bonfire-safe Laser-Ignitable Right-angle Actuator designed by EG&G Mound Applied Technologies.

Most explosive components are fabricated using energetic materials that are relatively stable at typical operating temperatures. In normal stockpile conditions the temperature transients are well known and frequently controlled. However, in an uncontrolled fire situation, the energetic material within a component may ignite once the storage temperature exceeds the autoignition temperature of the material, and this may function the component. Such functioning in a munitions storage situation has catastrophic potential.

The principal concept used in the design of bonfire-safe insensitive laser-ignited components is that in most cases energetic components will not properly function if the "burning" energetic material is not confined. An example is devices that are designed to grow to detonation (DDT). When the explosive is ignited it first burns or deflagrates, and only if the reaction is physically confined can it transition to a detonation. Devices such as actuators that are designed to be deflagration-only devices also will not perform their intended function if the

gas pressure of the deflagration is allowed to escape from the burning charge cavity before sufficient pressure buildup is achieved. If the gases produced are not contained and transferred to the appropriate location then the device will not function as designed.

The photograph shows an unloaded bonfire-safe actuator that contains several important design attributes that demonstrate the adaptability of this technology. This actuator has been designed to be laser-ignitable, bonfire-resistant, and a compact right-angle component. The additional development of compact right-angle components is necessary since in many applications the amount of available space within the system of interest is minimal. Optical connections to laser-ignited components are made using optical fibers. Since the optical fibers are brittle, they have minimum bend-radius specifications that are dependent on the diameter of the fiber. In some applications these specifications would limit the use of laser-ignited components. Right-angle components such as the one shown greatly increase the application of laser-ignited

components in space-limited situations.

Right-angle laser-ignited bonfire-safe energetic components have been fabricated and tested. Prior to loading with the energetic material the components were determined to be hermetic, with helium leak rates of less than 1×10^{-8} cm²/s. The optical transmission of the unloaded component was also measured using a laser diode and a power meter, and the optical transmission was greater than 75 percent of the incident laser energy. After these tests were completed the test components were loaded with the secondary explosive HMX (autoignition temperature of ~250-300 °C), which was doped with 3 percent carbon black. Components of this design have been successfully functioned by connecting them to a laser diode via a 100/140-micron step-indexed optical fiber. Laser ignition tests were performed using ~750-mW/10-ms pulses that successfully functioned the components.

Bonfire tests on these components have been performed by placing loaded units in an oven and heating them at various ramp rates from room tempera-



Tap Into A Billion Dollar Business Resource



The federal government will award more than \$1 billion in R&D grants to small (up to 500 employees) high-tech firms this year.

How can you apply? What does it take to win? Find out this fall at:

The National Small Business Innovation Research (SBIR) Conference

Oct. 14-16, Washington, DC ☆ Oct. 27-29, Phoenix, AZ

For registration info, complete the form below, call (360) 683-5742, or visit the SBIR Home Page: www.zyn.com/sbir

Don't miss the next round of solicitations . . . plan now to attend this important, information-packed meeting.

Sponsored by the National Science Foundation, the Department of Defense, & the Small Business Administration, in cooperation with all SBIR federal agencies and departments

Yes! Rush me information on attending the Fall 1997 National SBIR Conferences.

Name _____

Company _____

Address _____

City/State/Zip _____

Phone No. _____ Fax No. _____

Mail to:

SBIR Conference Center

PO Box 2890

Sequim, WA 98382

Or fax to: (360) 683-5391

NTB697

A US Manufacturer of
LENSES



Increase your competitive edge with ESCO

Types: Spherical Lenses and Mirrors, Cylinders, Achromats, Aspheres

Quality: Condenser to 1/10 wave

Stock Sizes: 12.7mm–88.9mm diameter
12.7mm–305mm focal length

Custom Optics: Zygo® certified up to 6"

Delivery: Many lenses from stock

Coatings: All types are available

Material: Fused Silica, Optical Glass, and Sapphire



**Write or Call
for Handbook**

Call Toll Free: 1-800-922-ESCO

ESCO Precision Optics

A Division of ESCO Products, Inc.

171 Oak Ridge Road, Oak Ridge, New Jersey 07438
(201) 697-3700 FAX: 201-697-3011

For More Information Write In No. 457

Piezoelectric Sensors and Assemblies

**Whatever your sensor application,
we have the capability to produce
piezoceramic components, attach
wiring and assemble packaging.**

We've built sensor assemblies for fiber optic X-Y positioning, gas leak detectors, inertial guidance systems, commercial broadcast tape head alignment, touch screen sensors, vibration monitoring and various medical sensors including blood pressure monitors and dopplar flow.

Our assembly capability also includes a full range of testing at quality levels equivalent to mil spec standards, including environmental cycling.



Morgan Matroc Inc

Electro Ceramics Division

232 Forbes Road
Bedford, Ohio 44146 USA
(216) 232-8600
Fax: (216) 232-8731



For More Information Write In No. 459

ture to ~400 °C. Devices of the type in the photo have successfully passed bonfire tests in which the loaded components were placed within an explosion-proof oven and heated at ~8 °C/min from room temperature to ~400 °C. During the heating cycle the gases formed by the deflagration of the energetic material within the component were safely relieved without functioning the component.

It has been demonstrated that the fabrication of hermetic laser-ignited bonfire-insensitive explosive and pyrotechnic components is possible. Several types have been fabricated and tested using a variety of pyrotechnic and explosive materials. This new technology, based on a laser/optical fiber combination in place of bridgewires and pins, can readily be adapted to various engineering requirements. Several novel processing techniques have been developed for fabricating the devices that exhibit the required strength and hermeticity to ensure successful functioning. These results illustrate that there are no fundamental reasons why laser-ignited components should not be considered for future applications of pyrotechnic and explosive components in adverse environmental conditions.


This work was done at EG&G Mound Applied Technologies, which is operated for the U.S. Department of Energy under contract no. DE-AC04-88DP43495. For more information about this work, contact Dr. Daniel P. Kramer at EG&G Mound Technologies, Building 102, PO Box 3000, Miamisburg, OH 45343; (937) 865-3558; fax (937) 865-3223.

Multiloop Photonic/Electronic Frequency Synthesizers

**Advantages would include low phase
noise, wide tuning range, and high
frequency resolution.**

*NASA's Jet Propulsion Laboratory,
Pasadena, California*

Improved photonic/electronic oscillators with both optical and electrical outputs have been proposed in a continuing effort to develop frequency synthesizers with low phase noise, wide tuning range, and high resolution in frequency. A frequency synthesizer of this type would be an optoelectronic oscillator (OEO) with multiple parallel optical feedback loops and with a tunable radio-frequency (RF) filter.

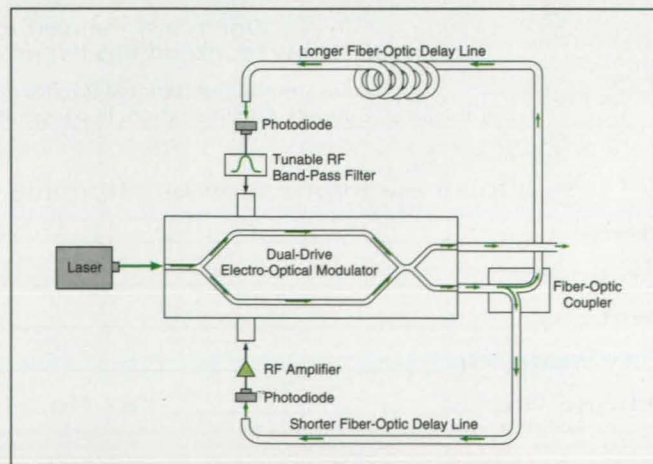

An OEO With Two Fiber-Optic Delay Lines would offer the greater phase stability of a longer feedback loop and the greater tuning range and frequency selectivity of a shorter feedback loop.

OEOs were described (though not under the name "OEO") in three previous articles in *NASA Tech Briefs*, namely, "Electro-Optical Subcarrier Modulator as Microwave Oscillator" (NPO-19440), Vol. 20, No. 9 (September 1996), page 4a; "Electro-Optical Clock- and Carrier-Signal Regenerator" (NPO-19573), Vol. 20, No. 9 (September 1996), page 6a; and "Self-Injection-Locked Electro-Optical Microwave Oscillator" (NPO-19568), Vol. 20, No. 8 (August 1996), page 17a. These prior OEOs included single optical feedback loops. The use of multiple optical feedback loops in the proposed OEOs would be essential to their improved performance, as explained below.

In a basic OEO, a single optical feedback loop is concatenated with an electrical feedback loop. By including an RF filter with narrow pass band in the electrical feedback loop, one can allow oscillations to occur in one mode while suppressing oscillations in other modes. To reduce the phase noise of the OEO, the length of the optical feedback loop must be increased; this reduces the frequency interval between modes, necessitating a reduction in the bandwidth of the RF filter to ensure the selection of only the desired modal frequency. However, at a typical frequency that one seeks to generate (of the order of 10 GHz), it is difficult to make an RF filter with pass band narrow enough to discriminate between modes. In addition, the inclusion of a narrow-band RF filter sacrifices the tunability of the oscillator.

The proposed multiple-loop OEOs are intended to satisfy the need for both (1) longer optical feedback loops to reduce phase noise and (2) shorter optical feedback loops to facilitate discrimination against unwanted modes without narrow-band RF filters, while providing broad frequency tunability. The figure illustrates one of several dual-loop versions. This OEO would include a pump laser, a longer and a shorter fiber-optic delay line (longer and shorter optical feedback loops), a photodiode followed by an amplifier at the output end of each optical fiber, and a dual-drive electro-optical modulator driven by the outputs of the amplifiers.

Suppose that the loop gains were adjusted to be more than 1/2 but less than 1 in each loop. Then oscillation could occur at and only at a radio frequency at which the signals arrive in phase at the output ends of both optical fibers; this would constrain the frequency interval between oscillation modes to be the larger interval of the shorter loop. Because of the relatively large frequency interval between oscillation

modes, an RF filter with a relatively wide pass band would suffice to ensure single-mode operation. At the same time, the phase noise would be dictated by the longer loop and would thus be relatively low.

The tuning range of the OEO would be determined by the mode spacing of the shorter loop and the tuning resolution would be determined by mode spacing of the longer loop. For a larger tuning range, a tunable RF filter could be used. The combination of the twin loop OEO and a tunable RF filter would result in a novel frequency synthesizer with wide frequency tuning range, low phase noise, and high frequency resolution.

The frequency of oscillation (f) of a basic OEO can be changed by changing the effective length (L) of the feedback loop. The fractional change in frequency is given by $\Delta f/f = -\Delta L/L$. Because a given change in length constitutes a larger fraction of L in the shorter loop of a dual-loop OEO, such an OEO could be tuned through a wider range by adjusting the length of the shorter loop. The tuning range would be determined by the frequency interval between modes of the shorter loop, while the tuning resolution would be determined by the frequency interval between modes of the longer loop. For example, if the fiber-optic delay lines in a dual-loop OEO were made of typical materials and the lengths of the loops were 20 cm and 10 km, respectively, then the tuning range would be about 1 GHz and the tuning resolution would be about 20 kHz.

A tunable RF filter could be used to widen the tuning range. The tuning of the middle frequency of the pass band of the RF filter should be synchronized with the tuning of the length of the shorter optical fiber. The incorporation of the tunable RF filter in this way should result in a frequency synthesizer with a tuning range of tens of gigahertz, low phase noise, and high frequency resolution.

This work was done by Xiaotian Steve Yao of Caltech for NASA's Jet Propulsion Laboratory. For further information, write in 40 on the TSP Request Card.

In accordance with Public Law 96-517, the contractor has elected to retain title to this invention. Inquiries concerning rights for its commercial use should be addressed to:

Larry Gilbert, Director
Technology Transfer
California Institute of Technology
Mail Code 315 - 6
Pasadena, CA 91125
(818) 395-3288

Refer to NPO-19825, volume and number of this NASA Tech Briefs issue, and the page number.



FREE CATALOG "OPTICS FOR INDUSTRY"

Free 130 page catalog from Rolyn, world's largest supplier of "Off-the-Shelf" optics. 24-hour delivery of simple or compound lenses, filters, prisms, mirrors, beamsplitters, reticles, objectives, eyepieces, plus thousands of other stock items. At off-the-shelf prices. Rolyn also supplies custom products and coatings in prototype or production quantities.

Rolyn Optics

706 Arrow Grand Circle, Covina, CA 91722-2199
Tel: 818-915-5707; Fax: 818-915-1379

For More Information Write In No. 370



PRECISION MEASUREMENT & SENSING INSTRUMENTS FOR MANUFACTURING

Advanced line of measurement and sensing instruments for the calibration and maintenance of machine tools, robots, and CMMs and for the measurement of machined parts. Includes 5-D laser measuring system, ballbars, spindle dynamic and thermal analysis system, levels, dual-axis beam steerer systems, laser trackers, and more.

Automated Precision, Inc.

Automated Precision, Inc., 7901-C Cessna Avenue,
Gaithersburg, MD 20879; (800) 537-2720; (301) 330-8100;
Fax: (301) 990-8648.

For More Information Write In No. 371



IMPROVE ANY FUZZY PROBLEM WITH APART!

• World's leading stray

light program! • Improve your signal-to-noise ratio (SNR) in any optical system. • Optimize your contrast/detection on any ground- or space-based system. • Specify your surface quality and BRDF from a full coating library. • Calculate ghost, glints, and particle problems before they happen. Breault Research Organization Inc., 6400 East Grant Rd., Ste. 350, Tucson, AZ 85715; Tel: (800) 882-5085 or (520) 721-0500; FAX: (520) 721-9630. E-mail:sales@breault.com; http://www.breault.com

Breault Research Organization Inc.

For More Information Write In No. 372



PM-1100 OPTICAL POWER METER

EXFO introduces its new high-performance optical power meter, the PM-1100. Ideal for research and development or for production testing of fiber-optic components, this power meter offers:

• Si, InGaAs, Ge high power detectors • 110-dB dynamic range • +/- 0.015-dB linearity • 0.001-dB resolution • User-friendly interface • Exceptional data storage • Standard GPIB interface. EXFO Electro-Optical Engineering, 465 Godin Ave., Vanier, Quebec, Canada G1M 3G7; (800) 663-EXFO; (418) 683-0211; Fax: (418) 683-2170.

EXFO Electro-Optical Engineering

For More Information Write In No. 373

Quality Pellicles



OVER-NIGHT!

1" to 6" I.D.
Coated/Uncoated

Overnight Delivery! No extra charge!
Pay the freight, and it's yours...tomorrow

NATIONAL PHOTOCOLOR CORPORATION

428 Waverly Avenue, P.O. Box 320
Mamaroneck, NY 10543-0320 USA

Tel: 800-698-8151

914-698-8111

Fax: 800-698-3629/914-698-3629
MasterCard and VISA accepted.

For More Information Write In No. 460

LOOKING TO INCREASE YOUR EXPORTS?

Write today for a FREE sample copy of *Exporter Insider*—the new monthly newsletter filled with expert advice and ideas to help your business penetrate international markets.



Write in no. 462 on the Information Request Form or fax your request on company letterhead to (212) 822-2028.

Joint-Transform Optical Correlator With Holographic Memory

Many correlations could be made quickly, without a large computer memory or extensive computation.

NASA's Jet Propulsion Laboratory, Pasadena, California

A joint-transform optical correlator has been demonstrated as a prototype of a class of real-time and nearly-real-time pattern-recognition systems. Like other optical correlators, its overall function is to make a correlation image, which indicates, in effect, the closeness of match between an input image and a known stored image. One of the outstanding features of this apparatus is a memory device in the form of a photorefractive crystal that stores holograms of as many as 5,000 known reference images. This optical memory device eliminates the need for a large digital computer memory to store the data on the reference images. The input image can be correlated quickly with all of the reference images by mostly optical and some relatively simple electronic means, without need for time-consuming digital computation. This joint-transform optical correlator is also shift-invariant, so that it can also track the input image. Systems of this type could be useful in such

diverse applications as recognition of military targets, identification of fingerprints, and robotic navigation.

The left side of Figure 1 illustrates schematically the recording and readout of reference-image holograms in the photorefractive crystal. A reference image to be recorded is illuminated by a plane-wave laser beam (denoted the input beam) that is projected at an angle into the photorefractive crystal. Another plane-wave laser beam (denoted the reference beam) is projected into the crystal at another angle and the hologram formed by the two beams is recorded by an appropriate exposure.

There are two methods of recording multiple reference images in the same crystal. The first method requires a tunable laser, which is set to different wavelengths to record different images. In the second method, the reference beam is made incident at different angles to record different images. These methods

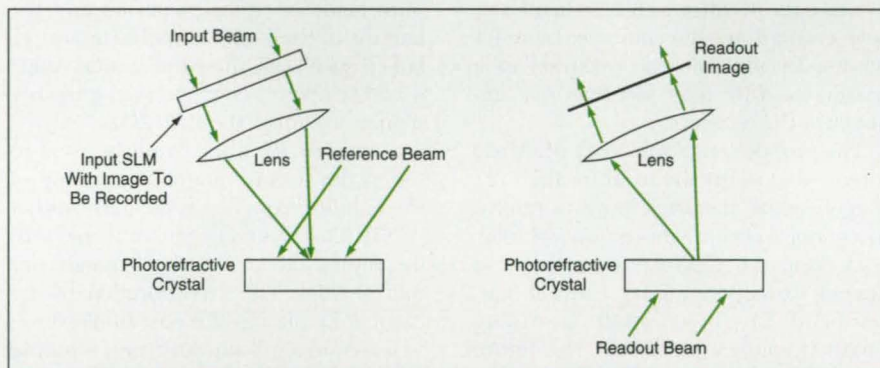


Figure 1. A Photorefractive Crystal can record multiple holograms formed at different wavelengths and different angles of incidence of the reference beam.

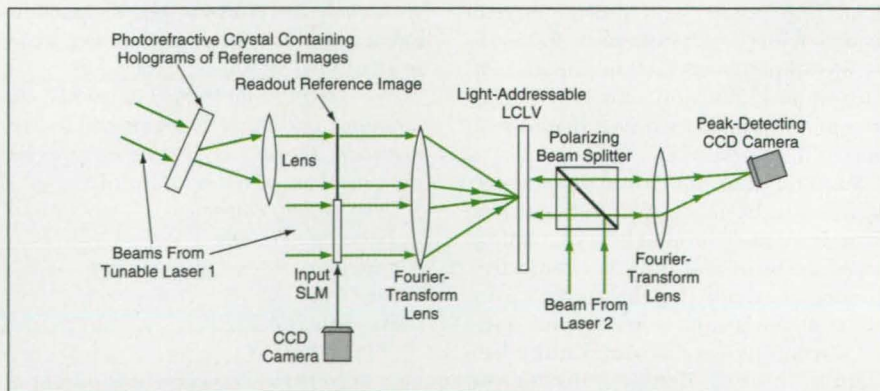


Figure 2. This Joint-Transform Optical Correlator includes a photorefractive-crystal memory device like that of Figure 1, containing thousands of reference images. The input image can be correlated with the reference images in rapid succession by varying the wavelength of the tunable laser and the angle of the laser beam incident on the photorefractive crystal.

can be combined in a wavelength- and angle-multiplexing scheme to enable the recording of thousands of reference images in a photorefractive crystal as small as a 1-cm cube. As shown on the right side of Figure 1, readout of the image previously recorded at a given angle and wavelength is effected by use of a readout laser beam that is conjugate to the reference beam used during recording; that is, a beam of the same wavelength and traveling along the same path but in the reverse direction. Thus, multiple recorded images could be addressed by varying the angle and wavelength of the readout laser beam.

Figure 2 is a schematic diagram of the joint-transform optical correlator. The beam from a tunable laser is split into two parts, one part being used to read out one of the reference images from the photorefractive crystal by the method described above. The other part of the laser beam is used to read out the real-time input image from an input spatial light modulator (SLM); this input image is fed to the input SLM from a charge-coupled-device (CCD) camera aimed at the scene or object that one seeks to recognize. The input SLM is placed alongside the reference image, in the same plane as that of the reference image.

The optical paths from the laser to the input and reference images are aligned to be within the coherence length of the laser, so that a hologram can be formed in the plane of a Fourier transform of the two images. By use of a lens, the two images are jointly Fourier-transformed, and they form an interference pattern on the Fourier-transform plane.

The input surface of a light-addressable liquid-crystal light valve (LCLV) is placed in the Fourier-transform plane. The output surface of the LCLV is illuminated with a collimated laser beam through a polarizing beam splitter. The reflected beam containing the Fourier-transform interference pattern travels through the beam splitter and through a lens, which forms the inverse Fourier transform on the focal plane of a peak-detecting CCD camera. If the input image matches the reference image, a pair of symmetric first-order correlation spots appears on the focal plane. The intensity of the correlation spots is proportional to the similarity between the images. The input image could be compared with multiple reference images in rapid succession by varying the wavelength and/or angle of the readout beam incident on the photorefractive crystal.

This work was done by Tien-Hsin Chao and Francis Yu of Caltech for NASA's Jet Propulsion Laboratory. For further information, write in 3 on the TSP Request Card. NPO-19139

NEW LITERATURE



Photonics Tools from Lasers to Mounts

New Focus Inc., Santa Clara, CA, has issued its 1997-98 catalog. Among new products in its 164 pages are innovative mirror mounts, single-frequency lasers built to the customer's specified wavelength, autobalancing photoreceivers, aspheric lenses, and optical choppers. Other products available are DC-to-60-GHz photodetectors, continuously tunable narrowlinewidth diode lasers, optical modulators, motorized positioners, polarization components, and super-stable mounts.

For More Information Write In No. 811



Noncontact Optical Profiler

WYKO Corp., Tucson, AZ, describes its new NT-2000 optical profiler in an 8-page color brochure. The booklet has details on the non-contact surface metrology system for process analysis and control, which the company says combines advanced interferometric technology with full automation for 3D surface dimensions down to 0.1 nm. Additional features are highlighted, including the system's in-line production capabilities.

For More Information Write In No. 812



Custom Solutions to Interconnect Challenges

"Advantages," distributed by AMP Inc., Harrisburg, PA, is a 6-page full-color brochure describing 18 ways the company can apply interconnection products, logistical expertise, industry knowledge, and manufacturing capabilities to make their customers more productive, efficient, and profitable. Starting with predesign involvement, simulation, and modeling, the company can ensure that tooling and equipment are available and operating as production begins, and with its forecast demand system, that a steady supply of products keeps lines up and running.


For More Information Write In No. 813



Laser and Fiber Optic Instrumentation

The 1997 short-form catalog from ILX Lightwave Corp., Bozeman, MT, supplies details about the company's laboratory benchtop instrumentation for laser diode control, laser measurement, and fiber optic test and measurement. It contains many new products, including the improved generation of LDC-3700 Series laser diode controllers with GPIB standard, the 7900 multichannel fiber optic system for applications requiring multiple fiber optic sources, and the MPS 8033/55 ASE broadband fiber optic source, among many others.

For More Information Write In No. 814

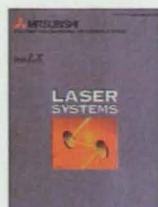

Carbon Dioxide Laser Processing Systems

Mitsubishi Electric Corp., Wood Dale, IL, makes available a 24-page full-color catalog devoted to its Series LX carbon dioxide lasers used for cutting sheet metal and other materials. Models described are the ML2512LX and LXP and the ML3015LX and LXP. Application examples are shown, and specifications of movement and control methods, workpiece size, feed rate, and stroke are given. The booklet details such features as the 3-axis cross-flow gas excitation system and the sealed resonators. Also described are the options available with the basic systems.

For More Information Write In No. 815



Laser Displacement Sensor

Kopplin Co., Jackson, MI, is distributing a 15-page catalog with details of the Wenglor line of laser displacement sensors with analogue and digital output, laser retroreflective sensors, and laser through-beam sensors. The catalog provides general technical data on the models available, and information on advantages of the different models, options, accessories, and applications.

For More Information Write In No. 816



Epoxy Preforms for Sealing/Bonding

Multi-Seals Inc., Manchester, CT, has published a 4-page full-color pamphlet describing its Uni-form epoxy preforms designed for sealing and bonding electromechanical components in the communications, fiber optic, computer, and electronics industries. Uni-forms are one-part epoxy resins that are solid at room temperature. When heated they melt and cure, sealing the component against dust, moisture, and other contaminants. The booklet outlines the shape varieties of the preforms and has tips on their usage.

For More Information Write In No. 817




Heated Vacuum Valves

A 4-page brochure from MKS Instruments, HPS Division, Boulder, CO, includes descriptions, applications, specifications, and prices on the company's VacuComp™ Series 170/180 heated vacuum valves. They are designed for use in vacuum deposition systems where production byproducts can condense and build up, interfering with the operation of conventional valves. Heating the valve elevates the internal temperature, leaving the byproducts in gaseous form. They are available in 1 1/2-in., 2-in., 3-in. and 4-in. sizes with limit switch and solenoid options.

For More Information Write In No. 818

NEW PRODUCTS

PRODUCT OF THE MONTH

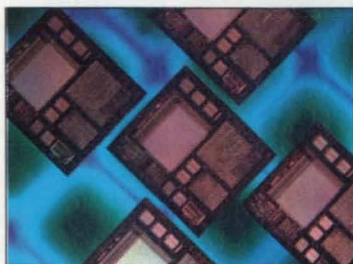

video encoder. Packaged in a standard 48-LCC, the device is suitable for lighting environments from 100k lux down to 50 lux. The chip draws about 100 mA at 5 V, which VLSI says puts its power consumption at about 20-30 percent of CCDs.

For More Information Write In No. 800

Single-Chip NTSC Color Camera

VLSI Vision Ltd., Saratoga, CA, introduces the VV6405, which it calls the world's first single-chip NTSC color camera. Using VLSI's complementary metal-oxide semiconductor (CMOS) technology, the device delivers color video with just a single external crystal and single-rail 5-V power supply. It combines on a single standard CMOS chip a 1/4-in. Color MOSTM photoplane, video timing controller, 8-bit A/D video converter, 300-MIPS color DSP engine, video D/A converter to drive a 75-ohm load, 5 video line memories, auto exposure control and control balance, and NTSC composite



Motorized Beam Expander

The new motorized beam expander from Rodenstock Precision Optics Inc., Rock-

ford, IL, is infinitely adjustable within a 2x-to-8x magnification range and designed for 1064-nm wavelengths. Maximum entrance-beam diameter is 4 mm, and maximum exit-beam diameter 31 mm. Its zoom and focus are adjustable to precise settings by remotely controlled stepper motors. Optional software for the remote controller is operated by a PC with Microsoft WindowsTM Version 3.1 or 3.11, or Microsoft WindowsTM 95.

For More Information Write In No. 802



Noncontact Pulsed Laser Rangefinder

Riegl USA, Orlando, FL, offers the LD90-

3100 EHS-GF series noncontact pulsed laser rangefinders that the company says combines a glass-fiber-coupled remote optical head with a split optics design for easy integration with two- or three-dimensional profiling systems. Available with various remote heads, the LD90-3100 has a typical range capacity of 200 m with a ± 2 -cm accuracy and 4-mm resolution. The LD90-3300 series has a 300-m range with ± 10 -cm accuracy. The split optics design has a maximum combined lens diameter of only 62 mm to fit relatively small scanning mirror systems.

For More Information Write In No. 803



Real-Time Thermal Image Analysis on a PC

FLIR Systems Inc., Portland, OR, says its TracerTM is

the first thermal imaging system capable of recording and analyzing long thermal event sequences at real-time frame rates (up to 60 Hz) on a WindowsTM PC. In a base configuration, Tracer can record 5+ minutes of thermal activity at a 60-Hz frame rate with 12-bit pixels, capturing 9.3 MB of data per second for analysis. The system senses temperature differences of <0.1 °C at 30 °C, and can measure the temperature of objects from -10 °C to 2000 °C with an accuracy of ± 2 percent or 2 °C. A complete system consists of a Prism DS infrared camera, Pentium PC, digital recording system, and software.

For More Information Write In No. 805



Single-Channel Laser Triangulation System

Aromat Corp., New Providence, NJ, offers the Nais[®] brand LM-10 series laser triangulation

system that uses a single-channel processing technology, reducing the number of circuit paths from the two of conventional systems to just one processing chip. It can be equipped with any of 9 sensor heads covering a measurement range from 40 mm to 400 mm. It offers laser spot size as small as 0.09×0.05 mm, and resolution to 1 μ m. Two types of controllers, with single and double built-in comparators, are available.

For More Information Write In No. 806



Spectral Attenuation Test System

EXFO E.O. Engineering, Quebec, Canada, says that its Model 5600 spectral

attenuation test system, based on a proven interferometric concept, ensures rapid, accurate, and highly sensitive optical attenuation measurements in both multimode and single-mode silica fibers. Measurements can be made over the 800-1700-nm wavelength region with a 30-dB dynamic range, as well as over the 650-1000-nm wavelength region for plastic optical fiber. The HeNe reference laser makes wavelength accuracy better than 0.2 nm.

For More Information Write In No. 808



Whole-Field Vibration Measurement

Polytec PI, Auburn, MA, introduces the VibraScanTM family of scanning laser

vibrometers for noncontact whole-field vibration mapping and analysis. The PSV-200-1, operating under Windows NT 4.0, brings together the laser, scanning mirrors, a video system, a high-end 2-channel FFT card, a vibration waveform generator, and a PC. It acquires and stores vibration spectra or time waveforms for each scanned point. Individual frequencies can be displayed as 2D or 3D color-coded maps that can be animated to visualize vibration shapes, concentrations, and flow.

For More Information Write In No. 809



Turnkey Optical Analysis System

WaveFront Sciences Inc., Albuquerque, NM, designed its Complete Light Analysis System-2D/portable (CLAS-2D/p) as a portable version

of its earlier system, which now makes possible phase measurement in field as well as laboratory conditions. Vibration-insensitive and rugged, the CLAS 2D/p measures both the intensity and phase of any optical source. It has an integral flat-panel display, but can also be used with separate large-screen monitors. The company says the instrument provides both a much greater dynamic range ($>100 \mu$ m) and a higher sensitivity ($<\lambda/100$ resolution) than comparable systems.

For More Information Write In No. 801



Wavefront and Image Data Analysis

United Technologies Adaptive Optics Associates, Cambridge, MA, offers WaveLabTM, a set of software

tools for the reduction and analysis of wavefront and image data. A suite of Tcl/Tk scripts presents a graphical user interface to a unified Hartmann data reduction package. The company says virtually any type of sensor data may be analyzed to yield OPD, PSF, MTF, OTF, encircled energy, Zernike components, and fringe images. Users can create customized scripts and add their own algorithms to the toolset. WaveLab includes the WaveLab Manual and the Tcl Users Guide, and is available on 4-mm and 8-mm tape or CD-ROM.

For More Information Write In No. 804



Handheld Ultraviolet Viewer

The new FIND-R-SCOPETM handheld ultraviolet viewer from FJW Optical Systems, Palatine, IL, enables users to observe the spectrum from 180-1250 nm, and optionally to 1550 nm. It can aid in examining and aligning excimer laser beams and

other UV sources. Other applications include UV lithography, photorefractive keratotomy, excimer laser micromachining and wire-stripping, annealing of LCDs, fingerprint analysis, and botanical studies. Field of view is 40° and resolution 60 lp/mm. Prices range from \$1895 for the 180-1250-nm model to \$2195 for the 180-1550-nm device.

For More Information Write In No. 807



Lens System for Low-Light/UV Photography

The new image-intensifier lens system (ILS) from NAC Visual Systems, Simi Valley, CA, allows synchronized exposures down to 20 ns with light gains up to 100,000x plus, according to the company. ILS extends


high speed imaging to the far-blue/UV spectrum down to 200 nm. NAC says ILS is compatible with virtually all 16- and 35-mm film cameras as well as video and image-converter cameras. Four models are available, including the ILS-4, or RangeCam40TM, a fully integrated high-resolution short-exposure system for ballistic ranges.

For More Information Write In No. 810

WORLD AEROSPACE LEADERS



Featuring "Europe In Space"

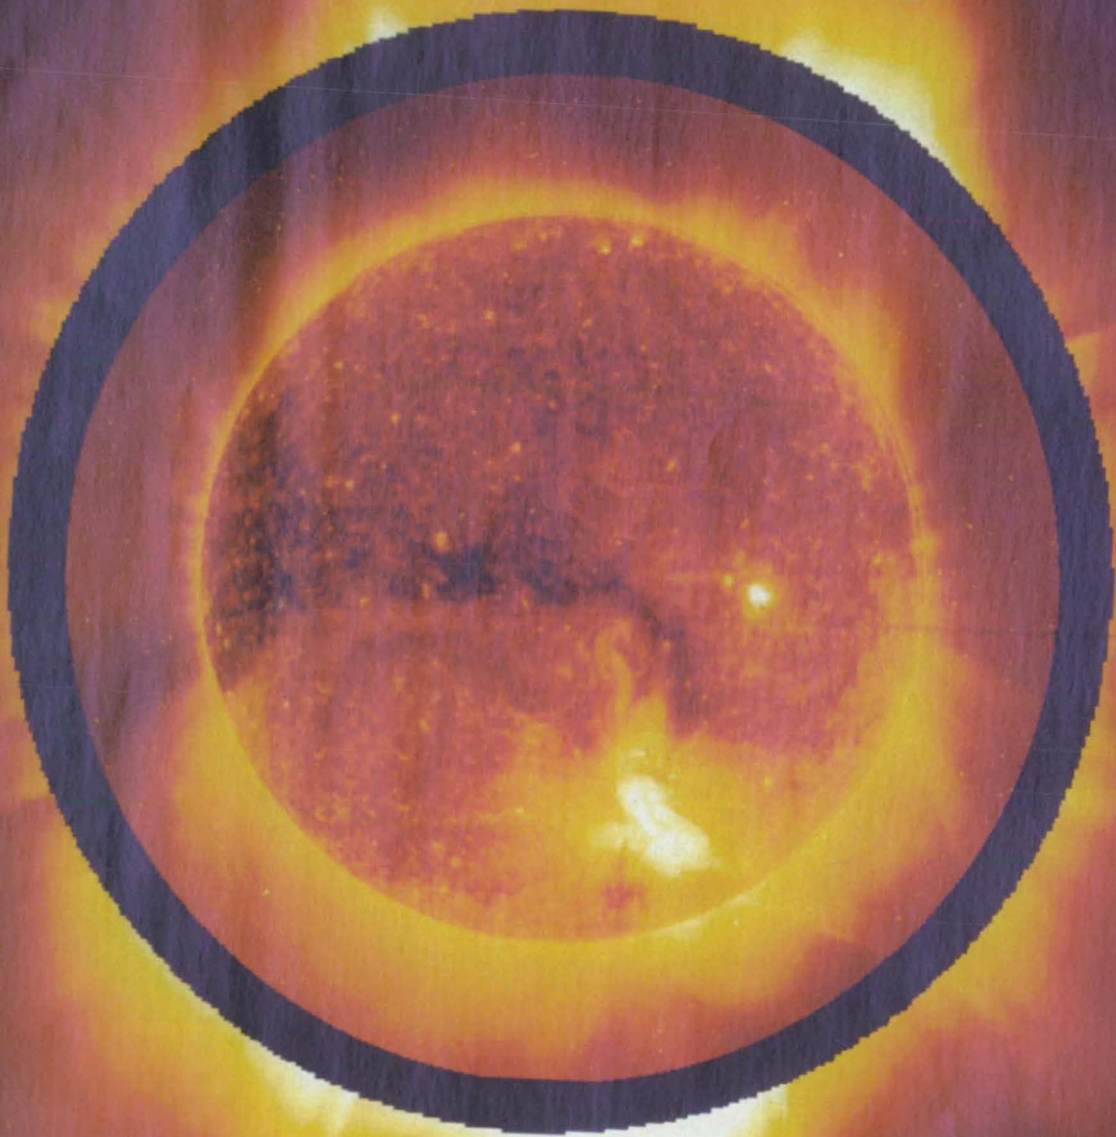

Taken by two instruments aboard the SOHO spacecraft, a cooperative European Space Agency-NASA project, this composite image shows the solar wind (outside black circle) and the disk of the sun (inside circle).

Photo courtesy ESA/NASA.

Special Advertising Supplement to NASA Tech Briefs

The European Space Agency



Artist's impression of the ESA scientific space probe Huygens, starting its descent through the thick methane atmosphere of the Saturn moon, Titan, after jettisoning its 3-meter diameter front heat shield. Huygens will be deployed by the NASA-developed orbiter Cassini. The joint ESA/NASA Cassini/Huygens mission will be launched in 1997 and will enter the Saturn planetary system in October 2004.

The idea of creating an independent space power in Europe began in the early 1960s. Believing that union meant strength, six European countries — Belgium, France, Germany, Italy, the Netherlands, and the United Kingdom — in association with Australia, joined together in 1962 to form the European Launcher Development Organisation (ELDO), a group focused on developing and building launcher systems.


Likewise in 1962, these same countries joined forces with Denmark, Spain, Sweden, and Switzerland to form the European Space Research Organisation (ESRO), which undertook satellite programs. Ten years later, these part-

ners decided to merge the activities of the two separate organizations into a single body. In July 1973, an interministerial conference of the ten European countries met in Brussels and laid down the principles of creating the European Space Agency (ESA). In 1975, Ireland applied for membership and was invited to join ESA. On October 30, 1980, the final signature ratifying the Convention gave legal existence to ESA.

Since then, the founding members have been joined by Austria, Norway, and Finland. Cooperation agreements have been signed to allow Canada to participate in certain ESA programs and to sit on the ESA Council.

WHO IN EUROPE...

...Looks to the stars ?

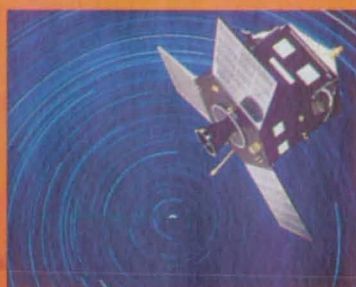

...Provides the
transport thereto ?



...Leads in
telecommunications
technology ?




...Produced the
Lynx's eye
in the sky ?



...Strives for
European unity ?



...Aids
weatherforecasts ?

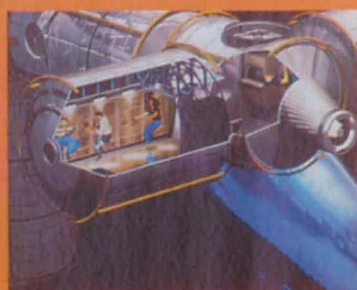

...Expands the
frontiers of
technology ?



and with all that is 35 years old !



European Space Agency

8-10 rue Mario Nikis - 75738 Paris cedex 15 - Tél. : 01 53 69 76 54 - Fax : 01 53 69 75 60

For More Information Write In No. 475

Alcatel Telecom's Space Business Line

The Space Business Line of the powerful multinational group, Alcatel Telecom, is itself an international organization of 12 European companies: Alcatel Espace, Alcatel Telspace, and SAFT (France); Alcatel Bell and ETCA (Belgium); Alcatel Espacio (Spain); Alcatel Kirk (Denmark); AME Space (Norway); Alcatel Telettra (Italy); and Alcatel SEL AG, Alcatel ANS, and Euteltracs (Germany).

The European leader in satellite systems, the Space Business Line is also the second world leader in the field of communications payloads. Last year, its workforce of 4,000 achieved global sales exceeding \$1 billion. Known as a manufacturer of electronic equipment, subsystems, and complete payloads for communications, observation, and scientific satellites, the group also manages complete communications satellite systems — including space and ground units — for both civilian and military sectors. In addition, the group participates in observation and scientific programs.

The Space Business Line is the industrial architect of complex communications satellite systems such as System Worldspace, Globalstar, and Syracuse. The international group also has demonstrated excellence in operations services through its participation in numerous space communications, observation, and scientific programs, including Intelsat, Eutelsat Telecom 2, Sinosat, Sesat, MT-Sat, Mabuhaysat, Turksat, M2A, Nilesat, Spot, Ulysses, Topex-Poseidon, Jason, and Envisat. At present, the Space Business Line is the main contractor for the worldwide


interactive multimedia satellite transmission program, Skybridge.

Alcatel Espace, with facilities in Paris and Toulouse, maintains the leading position among the Space Business Line companies with more than \$500 million in sales and a staff of over 1,600. The company oversees the development and operation of communication satellite systems, a variety of payload subsystems and equipment, and ground control and communication units. Earth stations are provided by its relative, Alcatel Telspace, Europe's largest manufacturer of standard ground stations and VSATs. SAFT, another French Space Business Line company, specializes in satellite and launcher batteries.


Alcatel Bell, a Belgium-based company, is expert in on-board and ground communications, TCR ground stations, and frequency generators and converters. Another Belgian company, Alcatel ETCA, develops power supplies and subsystems for satellites and launchers, as well as launcher test benches.

In Madrid, Alcatel Espacio designs and manufactures data processing units, while in Denmark, Alcatel Kirk's area of expertise is power conversion and distribution units. Italy's Alcatel Telettra specializes in microwave modules and Norway's AME Space is a European authority on hybrid circuits, SAW devices, I.F. filtering, and processing units. The three German members of Alcatel's Space Business Line are Alcatel SEL AG, a specialist in military satellites; Alcatel ANS, experts in air navigation satellite systems; and Euteltracs, distinguished by its work in satellite truck fleet management.

The Globalstar Satellite, a product of Alcatel's Space Business Line.

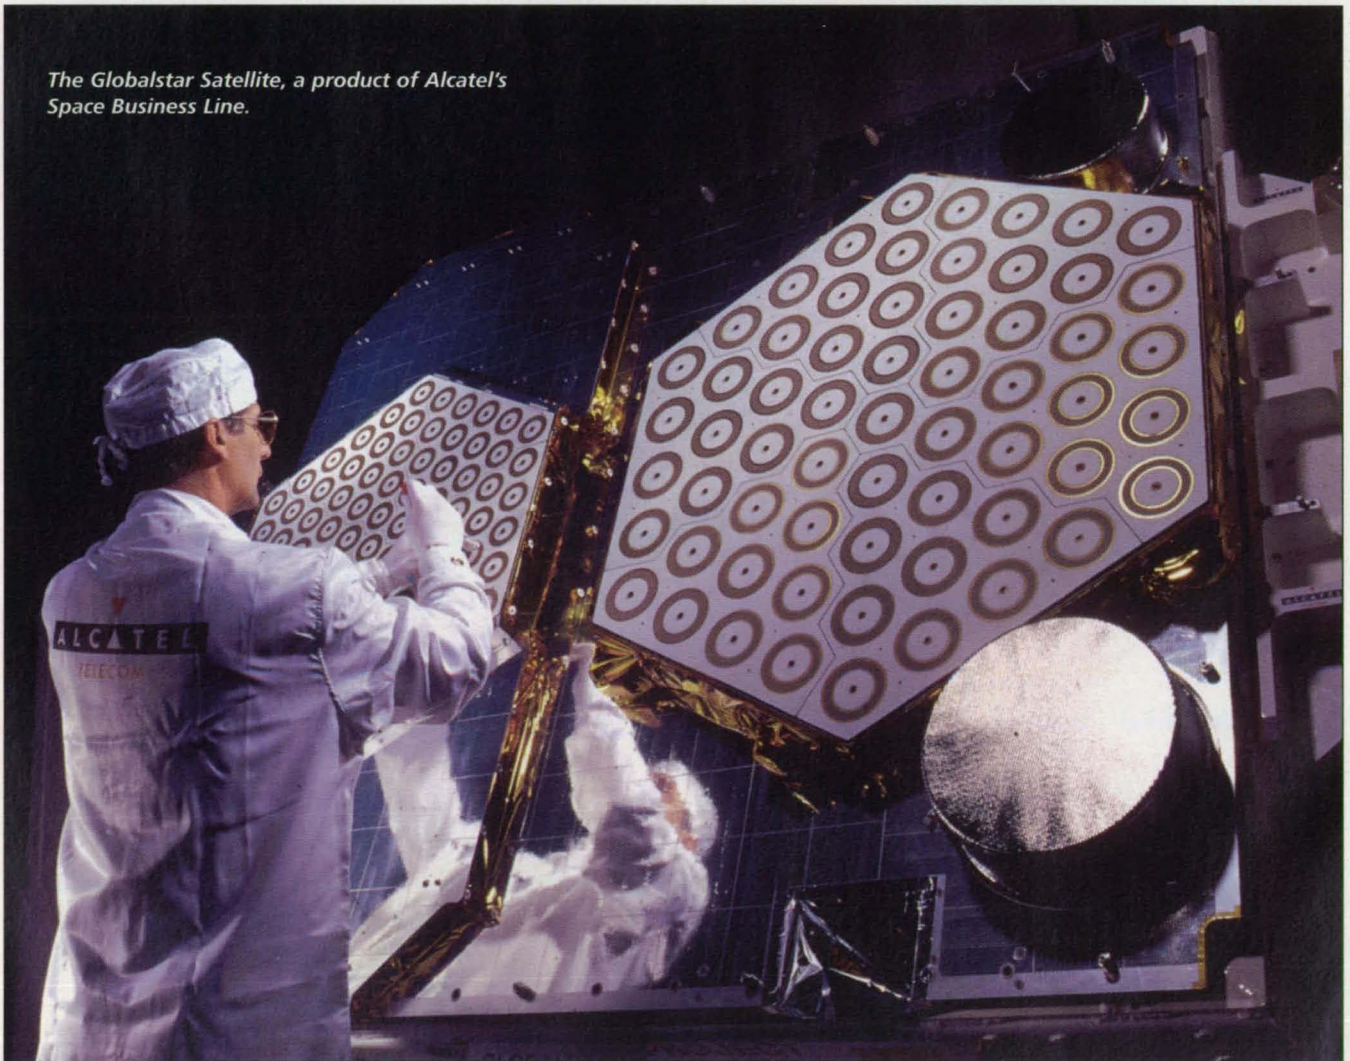

© X. Boymond - Alcatel.

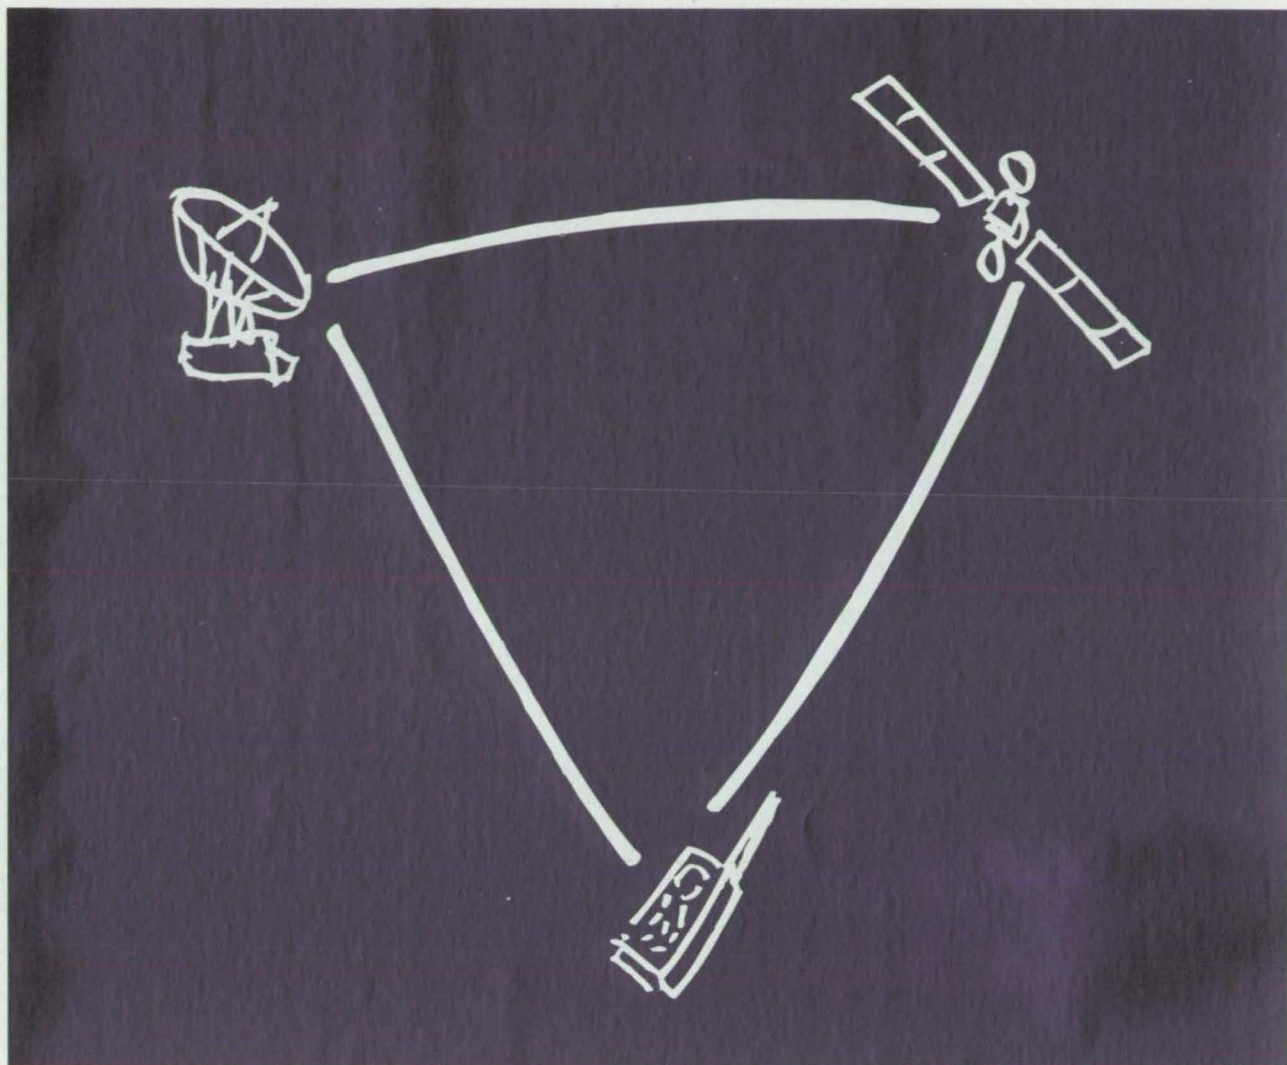

Global Communication Satellite Systems: keep it in one hand.

Alcatel offers unrivaled expertise in providing the turnkey solutions that meet your exact telecom requirements. In fact, we are one of the first companies in the world to supply every link in the telecommunications chain, from definition of specifications and financial engineering to in-orbit delivery and operations. As supplier of both earth and space segment equipment, Alcatel delivers systems which are simpler, more reliable, more competitive. We have already been involved

in more than 60 communication satellite systems and programs: civil and military, public and private, national and international. At Alcatel, we take pride in delivering a total system, ready to enter service from the word « go » – which means you can focus on your core business. If you're looking for a strategic partner, simply contact Alcatel on 33 (0)1 46 52 62 00 - fax 33 (0)1 46 52 62 50. **Alcatel, we help you grow.**




5, rue Noël Pons 92737 Nanterre Cedex, France.

For More Information Write In No. 476

CNES pays tribute to the scientists, engineers and companies who have cooperated in the implementation of the space programs which have made France one of the major actors in the conquest of space to better serve the world.

Space policies
Aerospace industry
Launch
Operational orbit
Control and exploitation

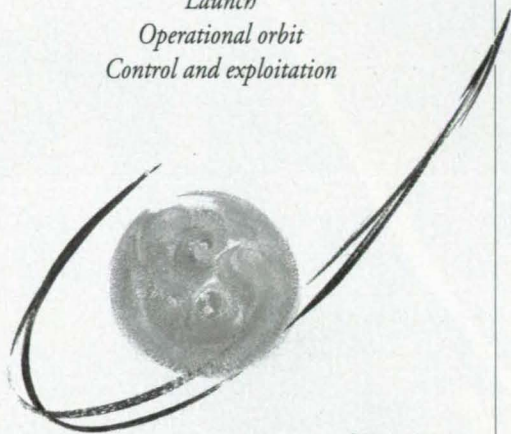

	International Space Station
Altair	Jason
Antares	LMS/STS missions
Aragatz	Metop
Argos	Polder
Ariane	Pronaos
Cassiopee	Proteus
Cospas/Sarsat	Scarab
Cassini Huygens	Sigma
Columbus	Soho
Doris	Spot
Envisat	Stella
Gamma	Stentor
GNSS	Télécom
Helios	Topex Poséidon
Iso	Vega...



CENTRE NATIONAL D'ÉTUDES SPATIALES

PARIS EVRY TOULOUSE KOUROU

FR.I Communication

Centre National d'Études Spatiales (France) - CNES

CNES is a government organization established in December 1961, responsible for developing French space activities. Its tasks are to propose a space policy to the French government and, in conjunction with its partners in industry, research, and defense, carry out its programs.

CNES implements the French space policy along two main lines, which complement each other:

- by participating in the programs of the European Space Agency (ESA) and playing a major role in this organization; and
- by conducting a dynamic national program which ensures a competitive French industry on a world level.

This policy operates in areas where the most important strategic and economic challenges are at stake:

- access to space with the Ariane program and a launch base in French Guiana (Centre Spatial Guyanais - CSG). This program is undertaken in the framework of ESA and launch services are marketed by Arianespace, a CNES subsidiary;
- manned space activities in cooperation with Russia and the United States, and a significant contribution, within ESA, to the International Space Station program;
- space applications such as telecommunications (Stentor), Earth observation (Spot, Topex-Poseidon, Envisat, and Polder), and development of new products in partnership with industry (the Proteus platform for small satellites); and
- scientific programs in conjunction with research organizations in European or international cooperation (Iso, Soho, Interball, etc.).

Over the years, the CNES has strengthened its links with its partners:

- with space users by finding the right compromises between their requirements and choices of space techniques;
- with French industry to which CNES gradually has transferred its know-how and project-management skills to support its competitiveness;
- with laboratories in industry and in large scientific organizations with which it works in numerous research programs;
- by supporting the developing countries in the use of space techniques for purposes of knowledge, economic growth, and resources management; and
- by participating in a defense program in partnership with the defense entity, thus generating synergy between civilian and military programs.

Today, the space sector is in a phase of major evolution. In particular, its activities and products gradually are taking on the dimensions of the commercial market, which demands innovation and a quest for new applications. In order to adapt to this new context, CNES has drawn up a strategic plan defining a framework for its activities in the next few years. CNES plans, in particular, to extend its partnership policy by enhancing the value of its potential for innovation in markets with a future.

The French space program, driven by strong political ambition for over 30 years and run by CNES, is an essential part of the European program and a reference in the world today.

Arianespace

Arianespace is the world's first commercial space transportation company, set up in 1980 by 36 leading European aerospace and electronics corporation, 13 major banks, and the French space agency CNES (Centre National d'Etudes Spatiales).

Arianespace is a European venture, the direct result of nations' commitment to bringing the Ariane family of launch vehicles from the drawing board to the launch pad. To meet this challenging goal, they turned to the European Space Agency (ESA) and mobilized the scientific and technological expertise of CNES.

The shareholding partners in Arianespace represent the scientific, technical, financial, and political capabilities of 12 countries: Belgium, Denmark, Germany, France, Ireland, Italy, the Netherlands, Norway, Spain, Switzerland, Sweden, and the United Kingdom.

To satisfy fast-changing market needs, Arianespace is directly present worldwide: in Europe, with its head office located near Paris, France, at Evry; in North America with its subsidiary in Washington, DC; in the Pacific Region, with a representative office in Tokyo, Japan; and the Arianespace ASEAN office in Singapore.

Arianespace has 320 employees and share capital of 270 million francs. As a space transportation company, Arianespace offers the following products and services:

- markets launch services for customers throughout the world;
- finances and supervises the construction of Ariane expendable launch vehicles;
- conducts launches from the Kourou space center in French Guiana;
- provides a launch insurance scheme; and
- offers partial financial loans for Ariane launches.

The Arianespace launch package is renowned for its highly reliable, personalized service. A team of experts is assigned to each mission, providing support throughout the launch campaign. Customers have come to rely on the savings in time and costs made possible by our operational efficiency and flexibility.

Most of the world's commercial satellite operators have contracted to launch at least one satellite with Arianespace, reflecting our pragmatic, cost-effective approach to getting satellites into orbit.



ARIANESPACE

The world's space transportation company

Arianespace is tying together telecommunications networks with satellite operators and constructors as partners and customers. These global networks support direct television broadcasting, offer enhanced meteorological capacity, make it easier to observe the Earth and open the way to space-based scientific programs.

With the arrival of Ariane 5 alongside Ariane 4 Arianespace is not only gaining greater launch capacity but also making its complete service even more adaptable and readily available.

By placing at least twelve satellites in orbit every year, Arianespace is making space work to make life easier for everyone.

Arianespace, boulevard de l'Europe, B.P. 177, 91006 Evry Cedex, France, Tel. : +33 (0)1 60 87 60 00
Arianespace Inc., 700, 13th Street, N.W., Suite 230 Washington, D.C., 20005, U.S.A. Tel. : +1 (202) 628-3936
Arianespace Tokyo, Kasumigaseki Bldg. 31 Fl., 3-2-5 Kasumigaseki, Chiyoda-ku Tokyo 100, Japan Tel. : +81 (3) 3592-2766
Arianespace ASEAN Office, Shenton House # 25-06, 3 Shenton Way, Singapore 068805, Tel. : 65 223 6426
Arianespace Kourou, B.P. 809, 97388 Kourou Cedex, French Guiana, Tel. : +(0) 594 33 67 07
<http://www.arianespace.com>

Novespace

Celebrates 10 Years of Success

Novespace, the subsidiary of Centre National d'Etudes Spatiales (CNES) responsible for technology transfer and the promotion of microgravity, celebrated its tenth anniversary this past July. The small Paris-based company has a great deal to celebrate. Under the direction of President and CEO Jean-Pierre Fouquet, the company has seen turnover grow by 400% since its creation in 1986. In 1996 alone, Novespace earnings were over \$3.5 million (FF 18m) — up 7.5% from those of 1995 — with profits of 6.6%.

In conjunction with its tenth anniversary celebrations, Novespace organized the Third Bi-Annual Microgravity and Parabolic Flight Colloquium in Bordeaux, attracting scientists and engineers from all over the world. At that time, Novespace unveiled the A300 ZERO-G, an airplane modified specifically for parabolic flight activity.

As organizer of parabolic flight since 1988 and the operator of the Caravelle ZERO-G from 1989 to 1995, Novespace has acquired extensive experience in the field of microgravity. Certain the A300 will enhance its parabolic flight activity and propagate continued interest in microgravity, Novespace anticipates 1997 to be an incredibly successful year.

Parabolic Flight and A300 ZERO-G

At present the world's largest parabolic aircraft, the A300 ZERO-G has an experiment cavity of 300 m³. The aircraft can host as many as 20 different experiments and up to 40 passengers (not including crew). Outfitted with accelerator indicators, video screens, and a special gauge and measurement station, the A300 now can measure and display pertinent data specific to the execution of parabolic maneuvers. In addition, the 20-meter-long experimentation zone is equipped with 50 seats, ten electrical panels (20 kVA), an overboard venting system, attachment rails, foam padding, and special lighting.

Novespace executed 28 successful parabolic maneuvers for the A300's first commercial campaign on February 4 and 6, 1997. These flights were commissioned by the Japanese companies NEC and JGC, which tested the solar panel deployment of the NASDA experimental satellite, COMETS. COMETS, scheduled to be launched into

geostationary orbit in August by the Japanese launcher H2, is a next-generation satellite that will serve as a test bench for many new technologies — notably inter-satellite communications. NEC and JGC used the A300's voluminous experiment zone to test the deployment and retraction of the satellite's 14-meter-long solar panels. Prior to the tests, similar panels had failed to retract during a satellite recovery mission by the space shuttle. The parabolic maneuvers provided an opportunity for real microgravity testing that demonstrated the effectiveness of NEC modifications and the necessity of parabolic flight for testing prototypes.

Technology Transfer


Novespace has been very busy on the technology transfer front, as well. In 1996, technology transfers rose 10% over those of 1995. Subscriptions for their technology catalogues, "Mutations" and "T.E.S.T.", have increased to more than 20,000 and 40,000, respectively. These catalogues serve to disseminate information about various technologies developed by European aerospace industries in hopes of finding applications for them in other industrial sectors. At present, Novespace is working on just over ten transfer projects.

In addition to distributing information regarding new technologies, Novespace conducts market studies and research for non-space-related companies with specific technological needs. As a member of an international technology transfer network, the Spacelink Group, Novespace works with technology transfer companies from the 14 countries

represented in the European Space Agency. This tight and expansive network has enabled Novespace to provide its customers with the latest high-tech European developments. Novespace's international scope is best represented by its French, British, American, Irish, and German staff. Aside from clearly being an interna-

tionally staffed company, Novespace is always looking for opportunities to join forces with European, Japanese, Russian, and North American companies in order to expand and augment both its technology transfer and parabolic flight activities.



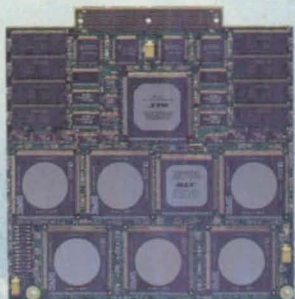

SHARCpool Power

Designed for intensive front-end signal processing, SKY's powerful new *SHARCpool™* accelerator, equipped with 12 *SHARC™* processors, delivers the industry's highest overall performance. *SHARCpool* delivers the fastest I/O, three levels of accessible memory (*on-chip RAM, SRAM and DRAM*), a three-year hardware warranty, and pricing that beats the most stringent cost requirements. *SHARCpool* is the newest member of SKY Computers' family of powerful accelerators for 6U and 9U VME boards, SCSI-based desktop systems and deeply embedded products. *SKY Computers - the most advanced technologies for high-performance applications.*

The most GFLOPS per \$ • Per WATT • Per Square Inch

*For the most powerful embedded technologies,
call SKY at (800) 486-3400 or visit our Web site at*

www.sky.com



SKY Computers, Inc.

A Subsidiary of Analogic Corporation

27 Industrial Avenue Chelmsford, MA 01824
Phone: (800) 486-3400, FAX: (508) 250-0036

SHARC is a trademark of Analog Devices, Inc.

• ISO 9001 Certified •

Societe Anonyme Belge de Constructions Aeronautiques (S.A.B.C.A.)

S.A.B.C.A. is an innovative high-tech company that services the European aerospace and military community. Belgium's leading aeronautic construction company for over 75 years, it designs, develops, and manufactures a variety of space vehicles and hardware assemblies and components. In addition to manufacturing hardware, the company has facilities in Brussels, Gosselies, and Limburg with extensive analysis and testing capabilities. Headquartered in Brussels, S.A.B.C.A. is in a perfect position to design, develop, manufacture, and test a wide spectrum of space hardware, from launcher structures to thrust vector control systems, which can be either electrohydraulic or electromechanical in configuration.

Responsible for the development of the cost-effective thermal protection procedure "PROSIAL" and of "DIAS," a laminated damping device that isolates the main body of a launcher from the boosters, S.A.B.C.A. has contributed enormously to the amelioration of numerous European launcher systems. In addition to these valuable developments, S.A.B.C.A. has worked closely with Aerospatiale (France) on the Ariane launcher programs. For both Ariane 4 and Ariane 5, the Belgian company designed, analyzed, developed, and manufactured electrohydraulic servactuators including Direct Drive Valves (thrust vector control systems), and for Ariane 5, it designed and manufactured the lower booster skirt and booster nose cone.






Making strides in space vehicle technology, S.A.B.C.A. worked with Aerospatiale on the design, thermal analysis, and manufacture of internal and external structural assemblies for the Atmospheric Re-entry Demonstrator (ARD), a scaled-down version of a future manned capsule. At present, the company is working with Aerospatiale and MAN (Germany), and is conducting feasibility studies and design analysis of a Crew Rescue/Transfer Vehicle (CR/TV).

S.A.B.C.A. also does a great deal of work in the space vehicle components domain, designing electronically controlled motorized pointing, deployment, and hold-on mechanisms.

The S.A.B.C.A. team is expert in robotics as well. The company designed and manufactured an integrated service tool and articulated joint service for the HERMES program, and continues to develop and test robotic technologies for future projects (ERA). In collaboration with SEP, S.A.B.C.A. realized a preliminary study and manufactured a motorized section of a valve allowing proportional control of cryogenic fluids for VULCAN MK2.

S.A.B.C.A.'s space flight proven technologies are being implemented in an active thermal control approach using loop heat pipes, two-phase capillary pumped loop and heat pipes for space vehicles.

Many skills ... one passion

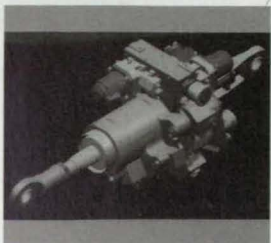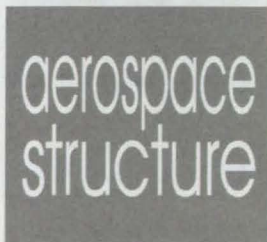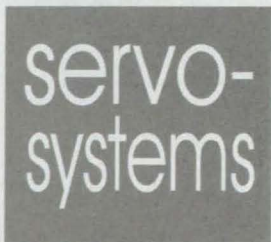


SvalSat: Data Acquisition and Satellite Tracking From the Top of the World

With strong support from the Norwegian government, the Norwegian Space Centre (NSC) is now establishing Svalbard Satellite Station (SvalSat). Located at approximately 80° N, it will offer full coverage; 14 out of 14 daily passes of polar orbiting satellites.

NASA will be the first user of the station for acquisition of data from the Earth Observing Satellites (EOS) and Landsat 7, both important parts of the Mission to Planet Earth program. NSC will operate the station on a NASA five-year contract of \$6 million US. NASA primarily has requested backup service for data reception from the EOS-AM 1 satellite, which will be launched in 1998. The agreement is based on the existing Memorandum of Agreement between NASA and NSC and the details are described in a joint implementation plan. Norway will provide basic infrastructure such as access road, utilities, and a station building, while NASA is providing the technical infrastructure required. SvalSat also will be capable of tracking sounding rockets and Early Orbit Support for orbital launches.

NSC's goal is to make SvalSat a key station in the global

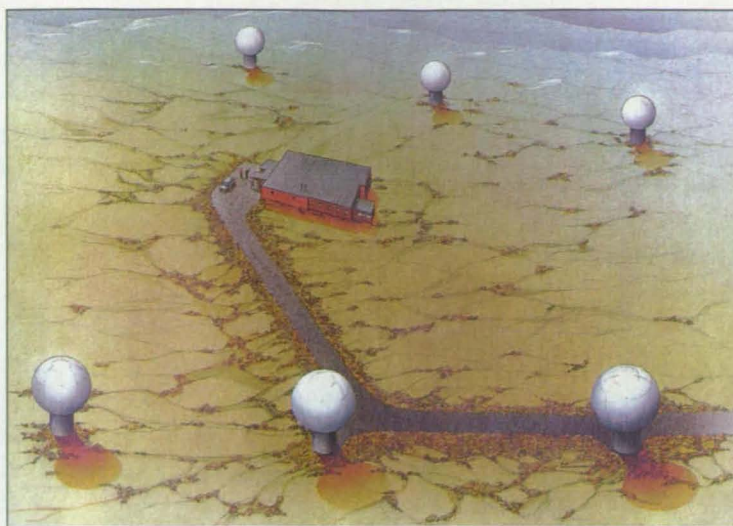

An artist's rendering of the Svalbard Satellite Station (SvalSat), which will provide satellite tracking and data acquisition.

MTPE ground station system and the facility will be proposed as a prime data reception station for the EOS follow-on satellites.

Discussions are being held between NSC and the Indian Space Research Organization (ISRO) about the possibilities to locate a control station for the Indian IRS C/D and related missions at SvalSat. The Indian Earth Observation satellite system is expected to grow significantly in size and complexity over the next years, and SvalSat will allow a 92% total coverage of seven Indian satellites. If the parties agree, NSC will provide ISRO with TT&C support 24 hours a day.

Maximum access to polar orbiting satellites

Svalsat, the new Norwegian ground station at Spitsbergen, Svalbard, at 79° N, gives access to all daily passes of polar orbiting satellites. Svalbard is easily reachable by scheduled planes, has adequate telecommunications and an efficient infrastructure. NASA has recently signed a contract with the Norwegian Space Centre for data acquisition from Landsat 7 and EOS AM1, the first satellite in the «Mission to planet Earth» series. Svalsat is owned by Norwegian Space Centre and operated by Tromsø Satellite



Tromsø Satellite
Station AS
N-9005 Tromsø, Norway
Phone: +47 77 68 48 17
Fax: +47 77 65 78 68
e-mail: adm@tss.no
web: <http://www.tss.no/>



Norsk Romsenter
NORWEGIAN SPACE CENTRE
P.O.Box 113 Skøyen
N-0212 Oslo, Norway
Phone: +47 22 51 18 00
Fax: +47 22 51 18 01
web: <http://www.spacecentre.no/>

Imaging Solutions for Industry from Datacube

Image Processing Pioneer Now Offers Focused Products for Industrial Imaging

From our roots in the late 1970s as a pioneer of digital image processing technology for military, aerospace, and R&D applications, Datacube, Inc. of Danvers, MA, has evolved into a major supplier of focused solutions for commercial image processing markets.


In the early 1990s, our highly experienced image processing engineering staff was reorganized into vertical groups for machine vision, web inspection, and medical imaging.

Over the past year, these groups have produced a steady stream of powerful and innovative new products for commercial imaging users. As a result, well over half of Datacube's sales are now to industrial vision OEMs.


Web Inspection



Machine Vision

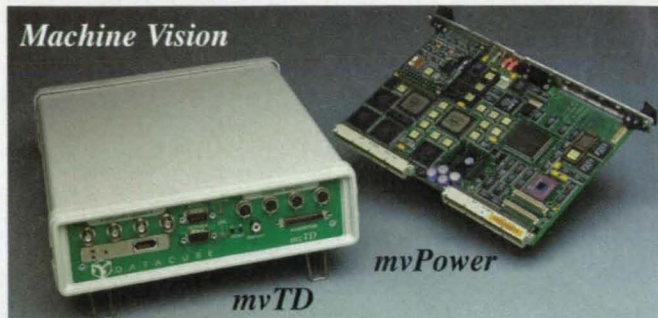

MaxPCI

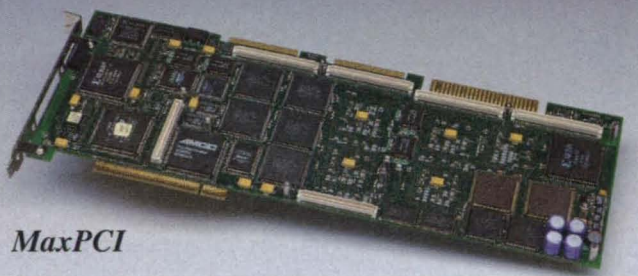

MaxPCI—The New Performance Leader

The MaxPCI® image processing engine for PCI-based systems has extended Datacube performance to a variety of new industrial and medical application areas.

Built exclusively with 40 MHz pipelines, MaxPCI features include dual acquisition, a massive non-blocking crosspoint, and 110 MB/sec. pipeline-to-PCI bus transfer. New MaxACQ acquisition modules, and PSMOD Processing and Storage MODules allow configuration for many different specific requirements.

For low-cost solutions to a variety of mid-to-high-end industrial and medical applications, MaxPCI is the ideal choice.

Rugged, Dependable VME Products

For those applications where the ruggedness and dependability of a VME architecture are appropriate, Datacube offers the MaxVideo 250®, our 4th generation, single-slot image processing subsystem that includes High Speed Image Access for frame-based processing.

Built around the MaxVideo 250 and Motorola's PowerPC®, the PowerTD™ system includes all the hardware and software for plug-and-play development, and allows seamless deployment of finished applications to multiple, low-cost target systems.

Powerful Solutions for Machine Vision

Datacube offers powerful, accurate, easily deployed, and competitively priced machine vision systems for integrators and OEMs.

mvPower® is a comprehensive single-slot solution for OEMs with an on-board PowerPC chip and a flexible camera interface.

mvTD™ is a fast, accurate, fully integrated solution in a compact unit with **mvPower**, Ethernet, the MaxVision Toolkit, and a

remote procedure call facility for external control.

A comprehensive software suite for machine vision, the **MaxVision Toolkit™** includes motion/robot guidance tools and metrology tools with sub-pixel accuracy. The **SMT Package** is a software extension for surface mount technology applications.

Continuous Web Inspection Solutions

For challenging web inspection applications, Datacube offers **Black Widow™**, a powerful, easy-to-integrate systems solution.

With a scalable architecture, Black Widow can include cameras and lighting fully protected in factory-ready enclosures, an operator interface with an application-specific GUI, and a defect recorder. Based on open standards, Black Widow easily interfaces with existing web control systems.

For system specification, Datacube offers **Arachne™**—a pilot system that can be set up at the web, so the integrator and customer can quantify the task and specify exactly the right solution.

Focused Solution Products

coreDAP™ technology adapts Datacube hardware and software to the specific requirements of medical imaging OEMs, providing image processing, storage and retrieval, and networking for digital motion angiography applications. **coreDAP** incorporates Datacube's proprietary MD image recording/playback technology.

PowerTrack™ is a comprehensive tracking solution that streamlines development of surveillance, inspection, and factory automation applications. It includes automatic target acquisition, gate-sizing, full-edge tracking, and tracks two targets simultaneously.

DATAcube—unmatched imaging experience, the best price/performance, a commitment to quality backed by ISO 9001, focused solutions—the choice for industrial image processing.

US: Phone: 508-777-4200 • Fax: 508-777-3117

Europe: Phone: +44 1442-233133 • Fax: +44 1442-230183
info@datacube.com • <http://www.datacube.com>

 D A T A C U B E

An ISO 9001
Certified Company

Need a Video Tracker?



Don't Build It — Buy It!

- High-performance, low-cost, OEM video tracking solution from Datacube*
- Faster, more reliable, and less-costly than building your own*

Datacube and partner SVS R&D Systems have combined their extensive tracking application experience to develop PowerTrack™—a low-cost, total OEM solution for video tracking applications.

With PowerTrack, military and commercial developers of demanding video tracking applications—for the first time—have a viable COTS alternative to costly, time-consuming, internal development efforts.

PowerTrack is available in a variety of configurations to meet many different specific requirements.

Before you decide to design and build a video tracker, get the facts on PowerTrack—the high-performance COTS alternative.



PowerTrack

- True correlation target tracking
- Centroid and edge tracking
- Comprehensive range of integration options:
 - Customize mode logic for specific applications
 - X/Motif GUI, TCP/IP (Ethernet or backplane), or joystick interface options
- Multiple target options
- CE Mark qualified
- Extended environmental ranges

Contact us today for more information:

Phone:

US: 508-777-4200

Europe: +44 1442-233133

Fax:

US: 508-777-3117

Europe: +44 1442-230183

E-mail:

info@datacube.com

Website:

<http://www.datacube.com>

D A T A C U B E

An ISO 9001 Certified Company

Kingston Mix and Match Flexible Storage Solutions

Kingston's storage products provide solutions specifically designed to reliably support increased storage capacity and system flexibility. Use the Kingston rugged Data Silo expansion chassis, available with up to nine bays, to accommodate fixed storage needs. Use the reliable Data Express enclosures for system internal removable storage.

Data Silo DS500 Chassis (9-bay Rackmount or Tower)

Our Data Silo DS500 is a steel rackmount or tower, RAID or JBOD (Just a Bunch of Disks) external expansion chassis designed to reliably house any combination of up to 9 half-height (or 4 full-height and 1 half-height) devices. Used in conjunction with our Data Express removable device enclosures, the DS500 can house up to 12 removable devices.

The Kingston DS500 can support up to 4 host systems. This enclosure comes standard with a power-on LED indicator, 1 or more highly rated, load-sharing, hot-swappable power supply(ies), and 2 quick-released, hot-swappable cooling fans. The DS500's front operator display panel provides a visual and audible warning alarm system that reports dangerous operating conditions.

Each DS500 unit is designed to support a variety of storage applications, from daisy chain configurations to high-performance RAID solutions. Prewired and custom-wired configurations are available with 50-pin SCSI 2 and 68-pin SCSI 3 I/O interfaces. The DS500 is compatible with all popular platforms.

Data Silo DS100 Chassis (1-, 2- & 4-bay)

The Kingston DS100 family of expansion chassis can house up to (4) 3.5" or 5.25" half-height, or (2) 5.25" full-height SCSI peripherals. Each DS100 is constructed of rugged steel and is designed to easily withstand the high temperatures generated by today's high-performance devices. These chassis are equipped with internal wiring, blank filler panel(s), and highly rated, auto-ranging, enhanced power supply(ies) and fan(s).

Data Silo DS90 Chassis (1 bay)

Our stackable DS90 1-bay expansion chassis is constructed of metal-shielded plastic. This lightweight, yet durable enclosure comes equipped with 4 stacking feet, 2 highly rated fans, auto-ranging power supply, internal wiring, a blank filler panel, industry-standard audio jacks, and a unique removable device installation sled. Various available versions of the Data Silo provide flexible options for storage expansion, making our Data Silo enclosures ideal for desktop, JBOD, and RAID, single and dual port disk arrays. Combine our Data Silo DS100 chassis with our Data Express subsystem units and enjoy the convenience of up to 6 removable devices in a small-footprint, desktop storage enclosure.

Data Express (Removable Device Enclosure)

The Kingston Data Express line of removable device enclosures can house 2.5" and/or 3.5" drives or 3.5" front-load type devices. Data Express subsystems are mountable into any internal or external 3.5" half-height and 5.25" half- or full-height peripheral expansion bay.

Kingston Data Express units are solidly constructed and employ highly reliable mating connectors that are rated as high as 25,000 insertion cycles for most models. An ID select indicator, device carrier key lock, device activity indicator light, and antistatic insertion guide rails are standard features.

Our Data Express modular subsystems are ideal for applications that require cold, warm, or hot swapping of devices. In addition, the Data Express is perfect for data transfer or transportation, data security, archiving large files, JBOD and RAID applications. "Mix and Match" with our Data Silo standalone expansion chassis with the Data Express for a custom, external removable solution.

Warranty & Testing

All Kingston storage products carry a 7-year warranty, the longest in our industry. We are so sure that our customers will be completely satisfied with our storage products, that in addition to our unbeatable 7-year warranty, we offer a 30-day, no-questions-asked, money-back guarantee. Every Kingston storage product is 100% tested and burned-in for 24 hours prior to shipment. All products are UL, CSA, and TuV approved and are designed to meet FCC class B and CE specifications. Kingston Storage Products Division is an active member of the RAID Advisory Board (RAB).


What Our Customers Say

Our most recent customer survey revealed the following quotes: "I like Kingston storage products because their high quality helps build customer loyalty." "As far as reliability goes, KTC is the Rolls-Royce of storage products." "I buy Kingston storage because I know that I am not going to have trouble connecting it up." "I can get delivery from Kingston in 2 or 3 days." "When a shipment comes into the port for repairs, we can count on Kingston to get the products we need right away." "I do not have the room to carry inventory, so fast shipping is necessary for me to please my customer, and so far Kingston has not let me down." "Whenever I call Kingston for anything, I always get a helpful person on the line, not just someone trying to sell me something."

Where to Find Our Products

With approximately 700,000 Kingston storage products shipped around the world, often we are asked where our products actually are used. Because we sell through distribution and integrators, applications are difficult to track and often are not reported to us. However, we do know that some of our products have found their way into the White House, aboard Woods Hole's submersible "Alvin" for exploration of the Titanic, into Army bunkers in the Middle East, onto a few of NASA's shuttles, onboard large numbers of Navy ships, on Air Force C130 aircraft, and most recently, dropped from pods into Bosnia for information retrieval purposes. Whether it's RAID or JBOD configurations for graphics, multimedia, design, file servers, CAD/CAM, engineering security or government applications, Kingston's storage products are rugged and flexible enough to suit most needs.

Call us today at 800-435-0642, e-mail us at storage@kingston.com, or find us on the web at <http://www.kingston.com>.

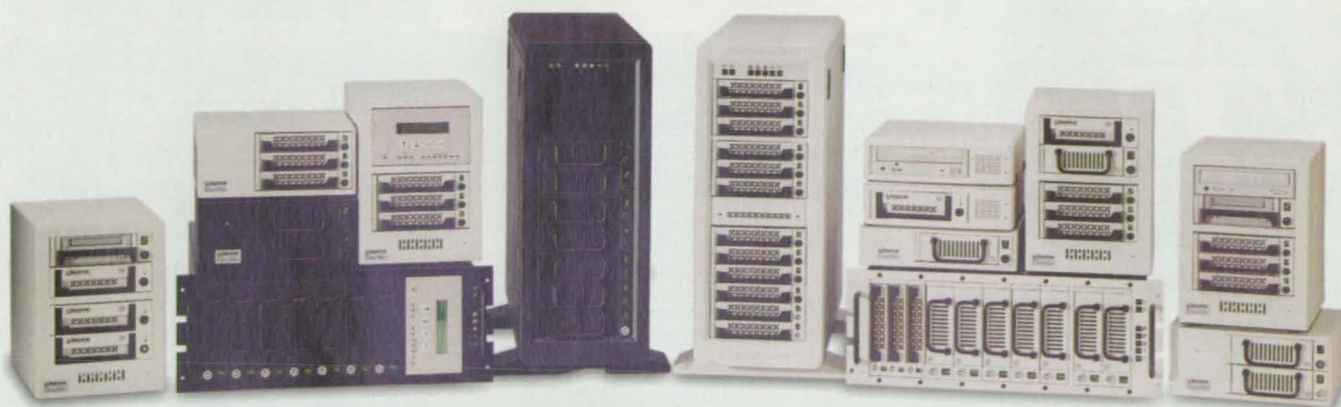

PICTURED CONTROLLERS AND DRIVES NOT INCLUDED

WHEN IT COMES TO DATA STORAGE, IT'S NOT JUST ABOUT BEING TOUGH. IT'S ALSO ABOUT BEING FLEXIBLE.



Flexibility. It might be one of the last things you think about when buying storage enclosures, but the first thing you need when your storage requirements grow or change. However, if you are already using Kingston's rugged line of Data Silo® expansion chassis or removable Data Express® drive enclosures, you've got plenty of choices. Kingston's storage products are specifically

designed to meet long-term storage needs, offering an unparalleled variety of mix-and-match solutions. Our reliable Data Silo expansion chassis are available with up to 9 bays, and

our Data Express enclosures are ideal for your internal and external removable storage needs.



DATA SILO EXPANSION CHASSIS



DATA EXPRESS REMOVABLE STORAGE

Best of all, you can integrate a variety of Data Express models into a stand-alone Data Silo and create your own custom removable solution. Plus, all Kingston storage enclosures are backed with Kingston's superior service and support, including

a generous 7-year warranty. Kingston Storage enclosures—proof that you can be both tough and flexible at the same time.

Kingston
TECHNOLOGY
STORAGE PRODUCTS DIVISION

For more information, call us at (800) 259-9370



Visit our Web site: <http://www.kingston.com/ad.htm>

**ISO 9002
CERTIFIED**


Specialty Steel & Forge




US 97/0849

T

oday, the name *Specialty Steel & Forge* is synonymous with the quality source for Specialty Steels and Open Die Forgings. Our success is based upon a commitment to excellence in client service. This commitment has enabled *Specialty Steel & Forge* to achieve the capacity to create and build "partnership" type relationships to better serve our customers. We treat every inquiry, large or small, with the same high level of expertise. Giving the most minute details the attention needed, results in the best possible service, quality products and fair competitive pricing. This same commitment to service has motivated *Specialty Steel & Forge* to create the following tools which help our customers meet the challenges of tomorrow:

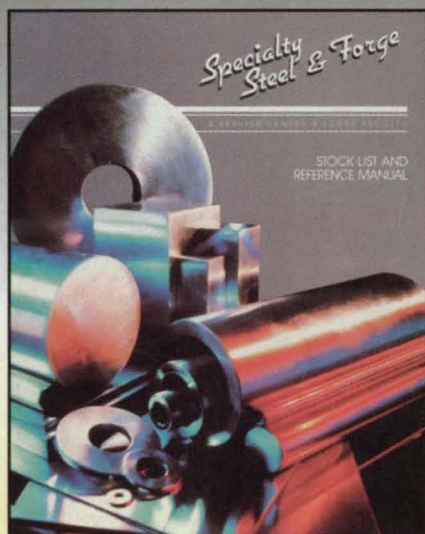

COMPREHENSIVE STOCKLIST & REFERENCE MANUAL

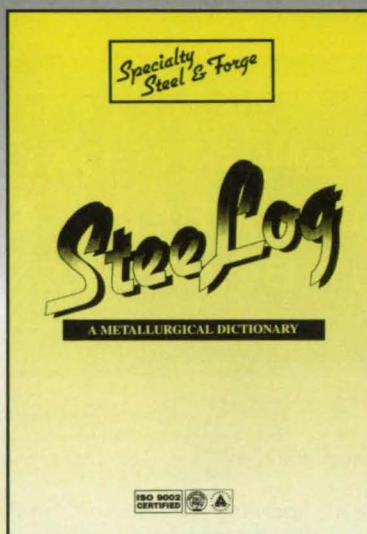

STEELLOG - A METALLURGICAL DICTIONARY

ALLOY INFO REPORTS

Complete chemistry, physicals, specifications, heat treatment, machinability, design characteristics, availability, costing

OVER 3000 ALLOYS • Stainless Steels • Nickel • Titanium • Aluminum • Alloy Steel • Tool Steel • Tungsten • Carbon • Molybdenum • Trade Named Metals

INSTANT REPORTS ON YOUR FAX MACHINE



FREE DEMO REPORT AND SUBSCRIBER SERVICE INFORMATION, CALL TOLL FREE:
1-800-600-9290

OUTSIDE CONTINENTAL USA:
1-617-505-0708


ALLOY/INFO FAX

**METALS WATCH!
QUARTERLY NEWSLETTER**

April/May 1998, Volume 2, 2nd Quarter, Edition 2

Metals Watch!

Published by SS&F Information Services
Thomas Shandza, Executive Editor



Starting in 1998, Metals Watch! has been very pleased with your responses and comments about Metals Watch! and we're always looking for new ideas to improve ourselves and serve our customers better. One way that we've accomplished this is by developing our new Web Site on the Internet.

Drop by and visit our home page at <http://www.steelforge.com> where you can get information on our company, what we do, who we are, and a full "SteelLog" & Reference Manual. You can also get information on our new "ALLOY/INFO" FAX Engineering Reports Service, as well as a rapid inquiry or fax page through all of our trade names of Metallurgy - all on-line and all ready to use through our Web Site.

The use of technology has allowed us at Specialty Steel & Forge to bring the value of this technology and place it in your hands in a way that we can serve our customers the best way possible.

As always, we are looking forward to your continued suggestions.

Have a special day!

LEWIS A. WILCOX



Lewis A. Wilcox, President,
Specialty Steel & Forge

Overview

COVER STORY

The 1998 Outlook For Stainless Steel
Use in South West China, But Slow

IN METAL CASE

Construction Has Seen A Target Of Opportunity For Suppliers Of Stainless And Other Specialty Steel

IN PURCHASING FOCUS

How A Steel Industry Shifting Ties Integrates Suppliers Into The Supply Process

IN FORGING UPDATE

Future Demand Will Stay Healthy

VISIT OUR WEB SITE!



World Wide Web:
<http://www.steelforge.com>
Email: info@steelforge.com

Specialty Steel & Forge

**(973)808-8300
FAX: (973)808-4488**

26 Law Drive, Fairfield, NJ
07004-3293

WorldWideWeb:
<http://www.steelforge.com>

Email: info@steelforge.com

INSTANT REPORTS ON THE INTERNET

WEB ADDRESS:
<http://www.steelforge.com>
E-MAIL:
info@steelforge.com



VISIT OUR WEB SITE!



World Wide Web:
<http://www.steelforge.com>
Email: info@steelforge.com

Specialty Steel & Forge



Supplying Aerospace Markets

OPEN DIE FORGINGS & ROLLED RINGS



Rounds • Blocks • Cylinders • Rings (to 160") • Shafts • Hubs • Flanges • High Temp Alloys • Corr. Resist. Alloys • Nickel Alloys • Cobalt Alloys • Stainless Steel • Duplex Stainless • Ph Grades • Titanium • Aluminum • Alloy Steel • Carbon Steel • Tool Steel • Tungsten • Moly • Low Expansion • Glass Sealing

SPECIALTY STEEL IN STOCK

The "Hard-to-Find Specialists"

Specialty Steels • High Temp Alloys • Corr. Resist. Alloys • Nickel Alloys • Cobalt Alloys • Stainless Steel • Titanium • Aluminum • Alloy Steel • Carbon Steel • Tool Steel • Tungsten • Molybdenum • Trade Named Metals • ALL MILL FORMS: Sheet • Strip • Plate • Bar • Rounds • Wire • Tubing • Pipe • Fittings • Flanges



OUR COMMITMENT AND PLEDGE



GLOBAL BUSINESS in the '90s and beyond will demand excellence in client servicing. We are committed to creating and building "partnership" type relationships to better serve our customers. Towards this goal we pledge only the best possible service, quality products, and fair competitive pricing. Our commitment and pledge will help you meet your challenges of tomorrow.

ALLOY/INFO REPORTS

Complete Chemistry, Physicals, Specifications, Heat Treatment, Machinability, Design Characteristics, Availability, Costing **OVER 3000 ALLOYS** • Stainless Steels • Nickel • Titanium • Aluminum • Alloy Steel • Tool Steel • Tungsten • Carbon • Molybdenum • Trade Named Metals

INSTANT REPORTS ON YOUR FAX MACHINE

FREE DEMO REPORT AND SUBSCRIBER SERVICE INFORMATION,
CALL TOLL FREE: 1-800-600-9290
OUTSIDE CONTINENTAL USA: 1-617-505-0708



INSTANT REPORTS ON THE INTERNET

WEB ADDRESS: <http://www.steelforge.com>
E-MAIL: info@steelforge.com



VISIT OUR WEB SITE!



Specialty Steel & Forge

(973)808-8300 FAX: (973)808-4488

<http://www.steelforge.com>
E-Mail: info@steelforge.com

26 Law Drive, Fairfield, NJ, USA 07004-3293
World Wide Web: <http://www.steelforge.com>
E-Mail: info@steelforge.com

CALL,
WRITE, FAX OR E-MAIL
FOR FREE STOCKLIST &
REFERENCE
MANUAL!

ISO 9002
CERTIFIED



US97/0849

Faugère & Jutheau: Insuring Progress

The French insurance and re-insurance broker, Faugère & Jutheau, has been insuring Europe's space, aviation, and high-tech aerospace industries for over 20 years. Presently under the direction of Chief Executive Officer Mohammed B. Dahbi, Faugère & Jutheau provides a spectrum of financial protection from launcher insurance or ground facilities coverage, to in-orbit life insurance.

The firm furnishes ESA with launch insurance for a number of its space programs (OTS-1,2; METEOSAT; ECS-1,2,3,4,5; MARECS-A,B,B2; and OLYMPUS F1) and in-orbit life insurance for the ECS-1,2,4,5 programs and the MARECS-A and B2 programs. For CNES, Faugère & Jutheau provides launch insurance for SYMPHONIE, pre-launch coverage for Ariane launches and SPOT satellites, as well as coverage for ground facilities and space activity liabilities.

In addition, Faugère & Jutheau provides insurance for EUTELSAT, Arianespace (Ariane launchers), France Telecom (Telecom 1 and 2 families), Aerospatiale (ARABSAT, TURKSAT, NAHUEL, THAICOM, AGILA), TéléDiffusion de France, Spot Image, CLS, ARABSAT, NAHUELSAT, DASA, and the European Southern Observatory.

Intespace

Intespace is a limited company specializing in environmental testing services and engineering (with an average annual turnover of 110 MFF), running a 20,000 m² environmental test center located within CNES Space Centre of Toulouse.

Environmental Tests (from space to industrial applications)

- Mechanical tests (COFRAC accreditation):
acoustic, vibration, shock
- Thermal tests: solar vacuum (space simulation),
thermal vacuum
- Climatic tests: hot, cold, humidity
- Electrical tests (COFRAC accreditation):
electromagnetic compatibility
- Compact antenna test range
- Associated supports, including maintenance,
metrology (COFRAC-certified for electrical quantities,
acceleration, masses, and temperatures)
- Operation of test facilities

Design, Research, Consulting & Engineering (in environmental techniques)

- Structure dynamics: structural calculations and
modal analysis, optimization, calibration
- New testing methods: transient vibrations,
microdynamic vibrations, infrared tests
- Test center engineering
- Test facilities engineering
- Training

Data Processing

- Design and industrialization of information systems for test
and simulation data management analysis (DynaWorks®)

The leading French
insurance broker serving
high technology in

Aviation and Space

to provide its clients
with a first class
worldwide service.

Contacts :

Stanislas Chapron

Jean Fournier


José Da Costa



54, quai Michelet 92681 Levallois-Perret Cedex
Tél : + 33 1 41 34 50 00 - Fax : + 33 1 41 34 51 06

For More Information Write In No. 485

A Large European Test Center

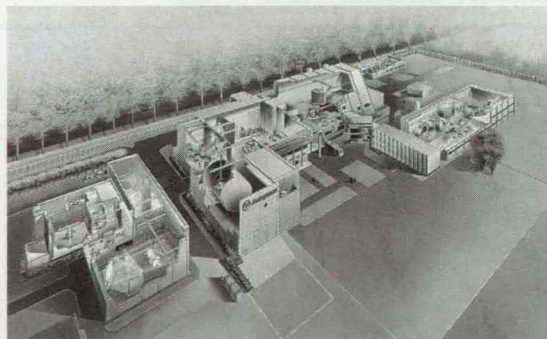

Testing

Test Center Engineering

Test data processing software



18, avenue Edouard-Belin - B.P. 4356 - 31029 Toulouse Cedex 4 - FRANCE
Tél. +33 (0) 5 61 28 11 11 - Fax +33 (0) 5 61 28 11 12

For More Information Write In No. 486

IMEC: a Dynamic Microelectronics Resource


Established by the Government of Flanders in 1984, IMEC is located in Leuven, Belgium. Now the largest independent microelectronics center in the world, it currently employs about 700 mostly scientific and technical professionals, while working with a large number of collaborators, approximately 365 companies and research organizations worldwide.

As Europe's leading laboratory in microelectronics, it is participating in close to 90 R&D projects cofunded by the CEC. IMEC is also strongly involved in the various JESSI projects, including the common JESSI/ESPRIT ADEQUAT project on 0.25-micron CMOS, for which IMEC was project coordinator. IMEC is involved in many R&D projects for ESA.

Scientific research, which runs 3-10 years ahead of industrial needs, is concentrated on: digital telecom systems, broadband and high-speed communications, design methods, submicron process technology, nonvolatile memories, microsystems, multichip modules, compound materials, electronics, and optoelectronics, broadband and personnel communication, physico-chemical analysis, and solar cells. Besides these research activities, IMEC makes an appreciable contribution to the training of microelectronics specialists of tomorrow.

IMEC developed a variety of specific formulas of interaction as a strategic technology partner for industry. Specific programs are the Industrial Affiliation Program and Industrial Residency. Furthermore, process steps and modules, as well as fully integrated submicron technologies, are transferred to industry. To date IMEC has set up 13 spinoff companies, based on its R&D results.

Tracks to the future

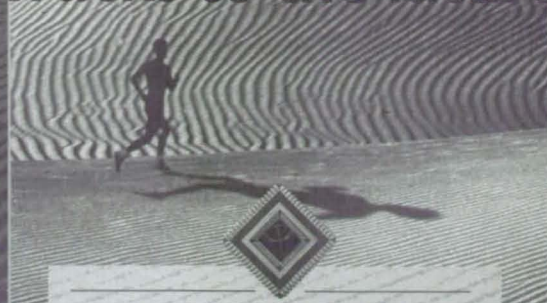

The line between now and tomorrow, between 'if' and 'possible': IMEC transforms ideas into reality.

Today IMEC is Europe's largest independent research center of micro-electronics, where it employs over 600 people.

Its scientific research runs 3 to 10 years ahead of industrial needs. Developing novel design methodologies for single chip systems, processing technologies for the next generation of ULSI-chips as well as innovative microsystems, IMEC is recognised worldwide as processing progress.




PROCESSING PROGRESS

For more information please contact
Marianne Van den Broeck, External Relations

IMEC vzw, Kapeldreef 75 - 3001 Leuven (Belgium)

Tel.: + 32 16 28 14 91 Fax: + 32 16 28 16 37 - <http://www.imec.be>

For More Information Write In No. 487

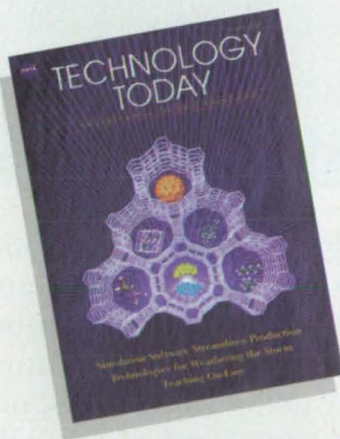

Now you can subscribe to NASA Technology Today

the exciting new teaching tool for educators and parents

NASA Technology Today's mission is to share the excitement, adventure, and knowledge of NASA's work with teachers and parents for use in the classroom and home. Each full-color, illustrated edition will be your guide inside NASA, spotlighting the agency's major missions, launches, science projects, discoveries, and technology breakthroughs — with fun activities for students. Plus, you'll learn where and how to take advantage of NASA educational resources, including special Internet sites, software, videos, and more.

Subscribe for a full year — six issues — for the charter rate of \$17.95... or two years for just \$29.95. Additional copies (addressed to same subscriber) are only \$1.00 each (\$6.00 additional per year).

Don't miss a single issue...subscribe today!

Published in cooperation with NASA and the International Technology Education Association.

☐ Please enter my subscription to NASA Technology Today for: ☐ one year at \$17.95 ☐ two years at \$29.95

☐ I also want to receive ____ additional copies of each issue, at \$1.00 per copy x 6 for the subscription year (e.g. — \$12.00 for 2 extra copies of each issue)

Total: \$ _____

☐ check enclosed (payable to Associated Business Publications Intl.)

☐ charge my: ☐ VISA ☐ MasterCard ☐ American Express

Card No./Exp. Date _____

Signature _____

Phone No. _____

Fax No. _____

Name _____

Organization _____

Address _____

City/St/Zip _____

Mail to: Associated Business Publications Intl., 317 Madison Avenue, New York, NY 10017.

Or fax credit card orders to: (212) 986-7864.

Questions? Call (212) 490-3999 or e-mail: ntb_advertise@interramp.com

THE A300 ZERO-G



Our new A300 ZERO-G is the world's largest parabolic airplane.

Now, achieving space-like conditions is economically feasible and logistically realistic. Our A300 ZERO-G is ideal for training astronaut operations, conducting scientific research, and testing new technologies destined for space. Tailored to accommodate your specific needs, our parabolic campaigns encourage direct intervention before, during, and after flight activities. Don't let the weight of the world keep you down...

DEFY GRAVITY.

For further information, call Novespace today
at 00 33 (1) 42 33 41 41.



Computer Software

Software for Internet Distribution of Oceanographic Data

The DODS HDF Data Server and Client Library computer program facilitates distribution, via the Internet, of oceanographic data that reside on servers in the Distributed Ocean Data System (DODS). This software extends the suite of DODS data formats to include Hierarchical Data Format (HDF), which is the primary format for dissemination of data from NASA's Earth Observing System (EOS). With the help of this software, an application program that utilizes the HDF application programmer interface (API) can gain direct access to data on a remote DODS server; the access and the concomitant translation of data between formats are both automatic and transparent to the application program. Users can develop programs that perform such operations as extracting subsets and conducting searches as though the data to be examined resided in their own local computer files. The DODS and this software work under UNIX. At the time of receipt of information for this article, the server component of the software was undergoing beta testing, and the client component was still undergoing development. It is planned to release the client and server components together in a single package. This work was sponsored by NASA's Earth Science Data and Information System (ESDIS) Prototyping effort. It is intended that this software will be incorporated into the EOSDIS (EOS Data and Information System) core system to provide remote access to EOS data sets.

This program was written by Todd Karakashian of Caltech for NASA's Jet Propulsion Laboratory. For further information, write in 98 on the TSP Request Card. NPO-20020

MOO Web Core

The MOO Web Core computer program implements an interface between the MOO multiple-user database computer system and the World Wide Web, enabling any Web user to obtain information from a MOO server. At the time of reporting information for this article, there were about 100 MOO servers at industrial, university, and government

sites, and the number of them is expected to grow. The nature of the MOO system and its software can be understood partly in terms of the history of its name: "MOO" stands for "MUD, Object Oriented", while "MUD" originally stood for "Multi-User Dungeon," (an Internet adventure game with a large number of simultaneous players), which then evolved into self-explanatorily-named software called "Multi-User Data base." MOO has evolved in conjunction with a collaborative project called "AstroVR," wherein MOO and MOO Web Core have been used to make images of celestial objects available on the Internet. MOO Web Core creates a set of MOO objects designed to provide an http interface to a MOO server running a LambdaCore-derived data base. By use of MOO Web Core, any standard World Wide Web client can connect to a MOO server and request data. MOO Web Core implements the http "GET" and "POST" commands, supporting html document delivery, search services, and fill-in form queries. MOO Web Core is designed to fit into any LambdaCore-based MOO data base.

This work was done by David Van Buren of Caltech for NASA's Jet Propulsion Laboratory. For further information, write in 9 on the TSP Request Card. NPO-19642

Software for Evaluation of Data-Compression Algorithms

The Advanced End-to-end Simulation for On-board Processing (AESOP) program facilitates computational simulations of the performances of data-compression and -decompression algorithms in the presence of noise. AESOP satisfies a need for a single program that can be used to evaluate, compare, and build on data-compression algorithms developed by different scientists and engineers. AESOP provides a graphical interface to an extensible set of data-compression algorithms, interfacing with both compiled code and stand-alone programs. Most interactions between AESOP and the user take place via a mouse. Once compressed, data can be fed through simulated transmission and decompression to evaluate the effects of compression parameters, noise, and error-correction subalgorithms. The user can predict

the ultimate data quality attainable via different compression methods and compression ratios, and evaluate data compression in the larger context of packeting and noisy transmission. Written in C and C++, AESOP currently runs on Sun SPARCstation computers using SunOS 4.1.3 and Motif. Operating-system dependences are minimal.

This work was done by Alan Mazer, Roberto Mendoza, and Andy Boden of Caltech for NASA's Jet Propulsion Laboratory. For further information, write in 45 on the TSP Request Card.

In accordance with Public Law 96-517, the contractor has elected to retain title to this invention. Inquiries concerning rights for its commercial use should be addressed to

*Larry Gilbert, Director
Technology Transfer
California Institute of Technology
Mail Code 315 - 6
Pasadena, CA 91125
(818) 395-3288*

Refer to NPO-19673, volume and number of this NASA Tech Briefs issue, and the page number.

Algorithms for Selection of Scheduling Heuristics

A computer program incorporates the STOP1, STOP2, EL1, and EL2 algorithms, which implement different versions of a statistical approach to choosing one out of a number of alternative heuristic strategies for scheduling. The basic rules for making this choice are that (a) the chosen scheduling strategy should be the one that allocates resources most efficiently, (b) the choice must be made on the basis of incomplete information, and (c) excessive information-gathering cost must not be incurred in making this choice. Each algorithm tests the performance of each strategy on a randomly selected sample of scheduling problems, then uses parameter-estimation techniques to infer statistical models of performance on the general population of scheduling problems. These models are then used to estimate (a) the utility and cost of acquiring additional information and (b) the desirability of selecting a particular strategy. Each algorithm implements a different method of balancing the expected utility of additional information against the cost of acquiring that information. The pro-

gram can be executed on Sun SPARCstations running common LISP. In computational experiments on representative sets of scheduling data, all four algorithms were found to outperform both the benchmark COMPOSER algorithm and the traditional manual selection procedure.

This work was done by Steven A. Chien and Jonathan Gratch of Caltech for NASA's Jet Propulsion Laboratory. For further information, write in 33 on the TSP Request Card.

NPO-19766

Software for Managing SAR Systems

The Data Acquisition and Production Planning System (DAPPS) computer program assists in the management of synthetic-aperture-radar (SAR) equipment and data. DAPPS incorporates three subsystems; the Flight Agency Interface Subsystem (FAIF), the Acquisition Planning Subsystem (APS), and the Production Planning Subsystem (PPS). The FAIF manages interfaces with the Canadian, European, and Japanese space agencies. Satellite planning and scheduling files received from the various flight agencies are used to

plan the acquisition of raw signal data transmitted from the satellites to the McMurdo (in Antarctica) and Alaska SAR Facility (ASF) ground stations. Users can submit data-acquisition requests. The APS uses the satellite planning and scheduling files to incorporate data-acquisition requests into satellite schedules. When final flight-agency schedules are received, the APS generates an antenna schedule file for the appropriate antenna at ASF or McMurdo. The PPS manages the production of SAR imagery and other data products; in so doing, it also provides an interface for operators to queue various product requests, modify their priorities, and provide a central control mechanism for the generation of SAR data products at ASF. DAPPS runs on two SUN SPARCstation 20/71 computers with 96 MB of memory and 9 GB of disk space. Each computer includes two Ethernet connection cards.

This work was done by Navid Dehghani, Quentin Sun, Sally Chou, Richard Norman, Philip Yurchuk, Rodney Hoffman, Miguel Siu, Teresa McKillop and Larry Stevens of Caltech for NASA's Jet Propulsion Laboratory. For further information, write in 10 on the TSP Request Card.

NPO-19995

COSMIC, NASA's Software Technology Transfer Center, has an inventory of over 800 software packages that originally were developed by NASA and its contractors for the U.S. space program. These packages have a wide range of applications other than space exploration and are used by industry, academic institutions, and other government agencies.

For further information about software available from COSMIC, or to receive a free diskette catalog, contact COSMIC at:

COSMIC

The University of Georgia
382 East Broad Street
Athens, GA 30602-4272

Phone: 706-542-3265


Fax: 706-542-4807

e-mail:

service@cosmic.uga.edu

WWW:

http://www.cosmic.uga.edu

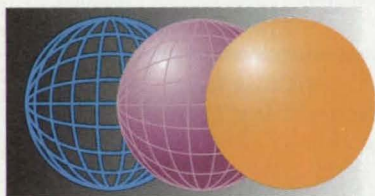


DISCOVER THE REALITY OF SIMULATION DRIVEN DESIGN™




DADS

Calculate loads, positions, velocities. Integrated with CATIA, I-DEAS Master Series, and Pro/ENGINEER.

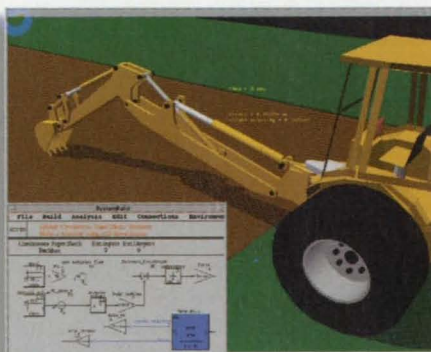

DADS/Plant

Mechanical System Simulation integrated with control systems in MATLAB, MATRIXx, and EASY5.

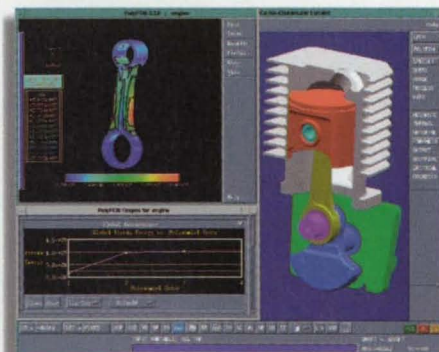

PolyFEM

Structural Component Analysis integrated in CATIA, I-DEAS Master Series, and Pro/ENGINEER.

CADSi®

Tel: 319-626-6700 ■ Fax: 319-626-3488 ■ www.cadsi.com

Mr. Sulu, I think you dropped something.

We admit the tri-corder is a pretty handy gadget.


Unfortunately, you'll have to wait about 200 years to get one. Until then, consider the HP LogicDart. It's an advanced logic probe that not only performs basic logic monitoring, but also tests continuity, dc voltage, frequency, and does timing analysis. This eliminates the hassle of switching tools and keeps you focused on solving problems. Making it the perfect tool for first-level troubleshooting.

What's more, you can make all of these measurements from a single probe. So you don't have to fumble around hooking up different probes for different instruments. And the HP LogicDart's precise probe tip allows you to confidently probe fine-pitch surface mount circuitry.

But there's more to this 23rd-century tool than we can explain in 150 20th-century words. That's why we're offering a free brochure with key specifications and ten practical HP LogicDart applications.

To find out more about the HP LogicDart, visit our Web site or call HP DIRECT at 1-800-452-4844, Ext. 5215. At a price of only \$795*, anything else would be illogical.

<http://www.hp.com/info/LogicDart1>

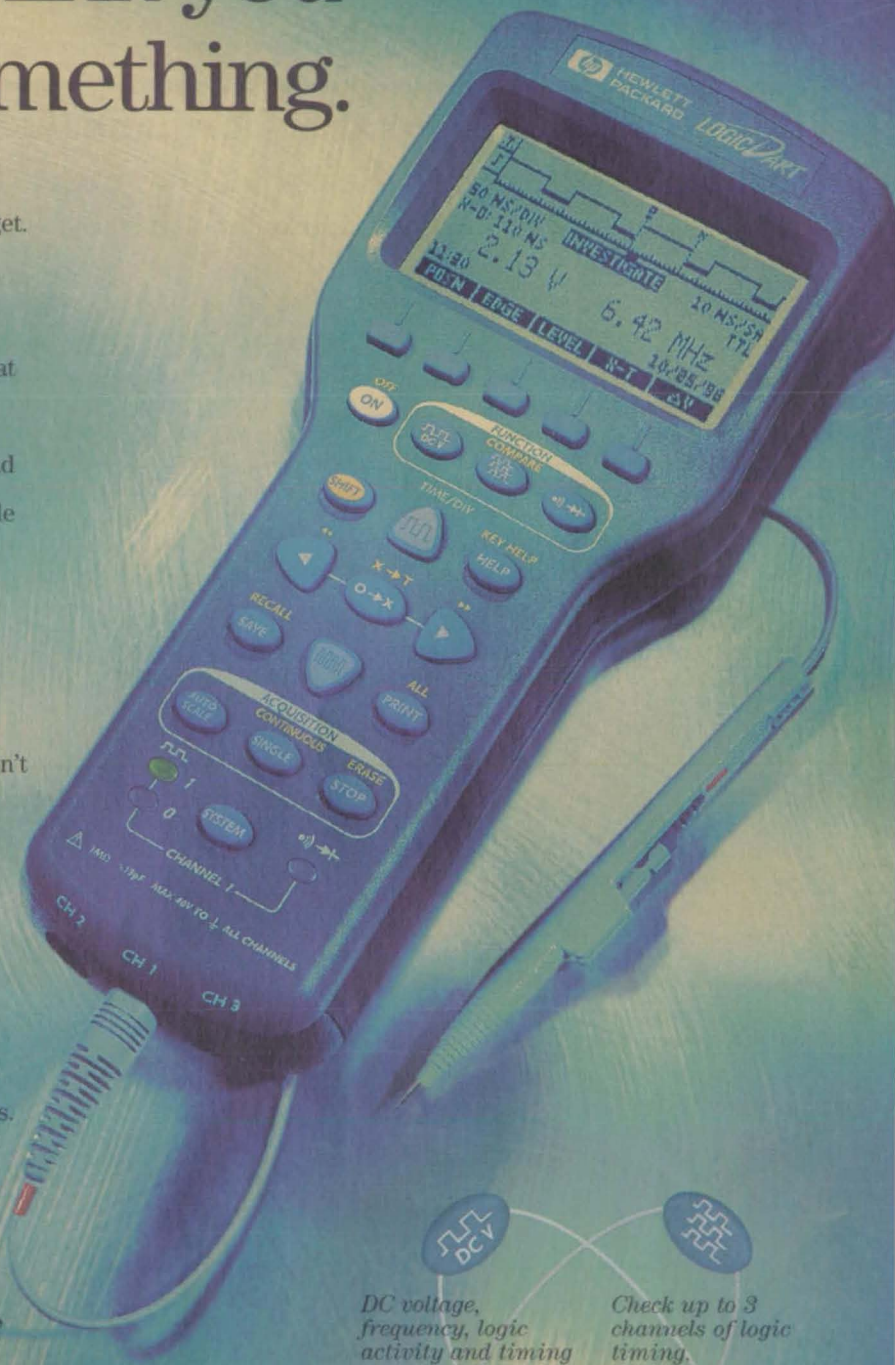

DC voltage, frequency, logic activity and timing simultaneously.

Check up to 3 channels of logic timing.

Measure continuity, diode test, and resistance.

100 MSa/s sampling — up to 10 ns timing resolution.

* U.S. list price Faxback: 1-800-800-5281, Document 12687
©1997 Hewlett-Packard Co. TMPMO533/NASA



Fluid Reservoir Maintains Constant Back-Pressure During Addition and Removal of Liquid

A piston moves to accommodate addition or removal of liquid from a completely filled reservoir.

Marshall Space Flight Center, Alabama

The figure shows a chamber completely filled with liquid. The chamber is equipped with a mechanism, a free-floating piston at one end, that can be attached to a spring-driven lever-arm of variable mechanical advantage, to help prevent the introduction of bubbles of gas during liquid addition or removal. Originally developed for use in the microgravity environment of


space, where lack of hydrostatic pressure and buoyancy can cause problems with unwanted bubbles during liquid-filling, this apparatus can also be used on Earth in any situation in which a constant back-pressure would be desirable. A syringe needle is inserted into the reservoir through a septum port on the end opposite to the piston for liquid transfer, and a pressure transducer

is mounted within the reservoir to allow pressure monitoring during liquid transfer.

The overall function of the apparatus is to maintain a nearly constant back-pressure (including zero pressure) on the liquid in the reservoir while providing a storage volume that can expand or contract just enough to match the volume of additional liquid being injected or withdrawn from the reservoir, thereby minimizing bubble formation. This apparatus has been test-flown aboard the NASA KC-135 low-gravity aircraft to test liquid handling during low gravity, for applications such as solution crystal growth and cavitation tests.

The apparatus includes a piston-cylinder assembly attached to one end of the reservoir. The piston is held centered in the cylinder and guided by a linear ball bushing to minimize pressure error due to friction. Instead of piston rings, sealing between the cylinder wall and piston is accomplished by a very thin flexible latex rubber bladder which unrolls from the cylinder wall as the piston moves outward, to provide additional liquid volume. Pressure is applied to the back of the piston through a linkage mechanism by a constant-force spring motor — that is, a spring which does not change force as it winds or unwinds. This spring motor maintains a constant force on the piston as the piston moves in or out to accommodate changes in the volume of the liquid, and this force may be set to any desired level by changing the mechanical advantage lever in the linkage mechanism.

This work was done by Dale M. Kornfeld of Marshall Space Flight Center and Raymond H. Moore, Mark Wells, and Byron Burden of Teledyne Brown Engineering. For further information, write in 80 on the TSP Request Card.
MFS-31081

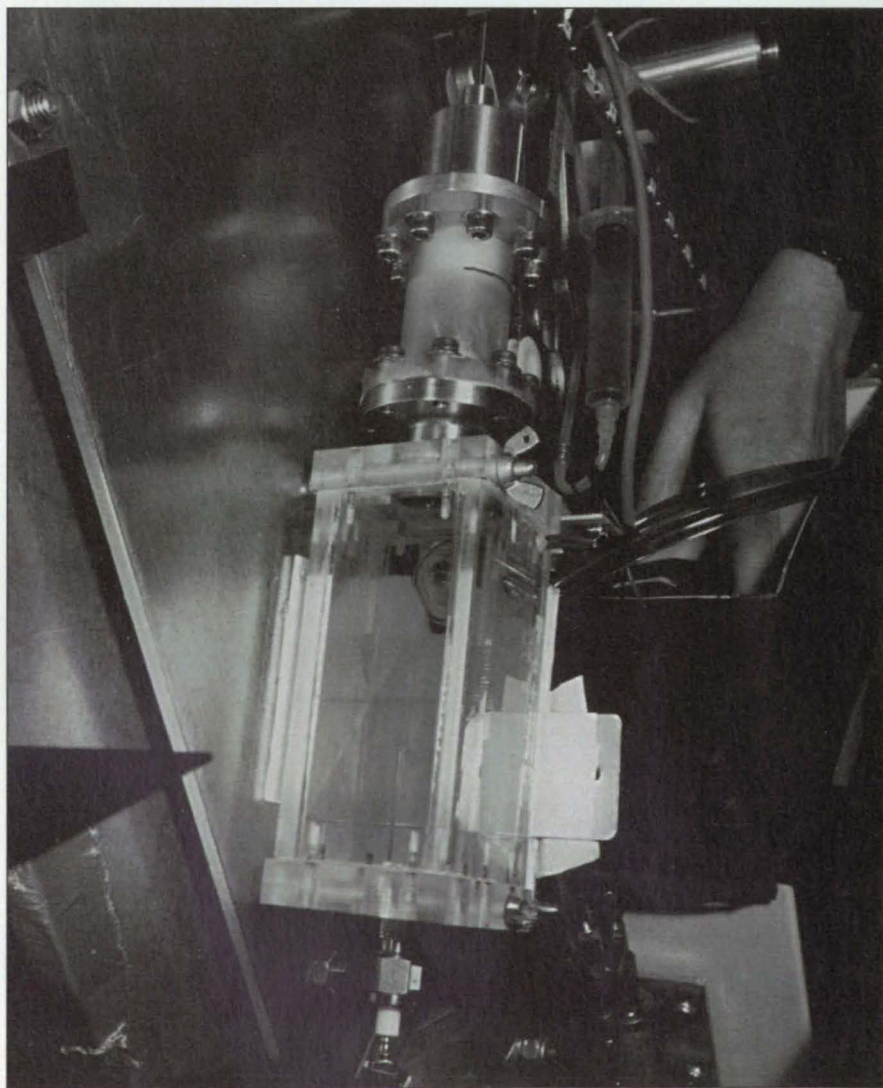

The Cylindrical Mechanism attached to the rectangular chamber serves as a pressure-regulating reservoir to help suppress bubbles.

Parker's made controlling air valves easier for Field Bus Users.

SAM Generation 2.1

Parker's Serial Addressable Module (SAM) saves time and eliminates costly wire installations.

Parker's Sam 2.1 Communications Module allows easy access to various protocols, including:

- DeviceNet™
- Honeywell's Smart Distributed System™
- Allen Bradley's Remote I/O
- Interbus-S
- Profibus-DP


The SAM module converts a dumb air valve to a "smart manifold."

saves machine space and wiring cost, and creates a logical addressing center for related machine components.

- CAN system distributes the components around the machine geography, promoting efficient design and eliminating costly control boxes.
- Solenoids may be individually fused for additional protection.
- Modular construction minimizes downtime.

FLEXIBLE

- Up to 32 inputs and 32 outputs.
- 4, 8, or 16 external I/O available on optional I/O modules for easy field expansion.
- Available with either NPN or PNP 10-30 VDC inputs, or 120 VAC.
- NEMA 4 (IP65) construction.
- Available for use with AL, A4, A6, F3, and ISO 5599/2 (H Series).
- Covers a Cv range from .7 to 11.0 with port sizes from 1/8" to 1-1/4".
- Supports up to 24 watts per point when external power is supplied.

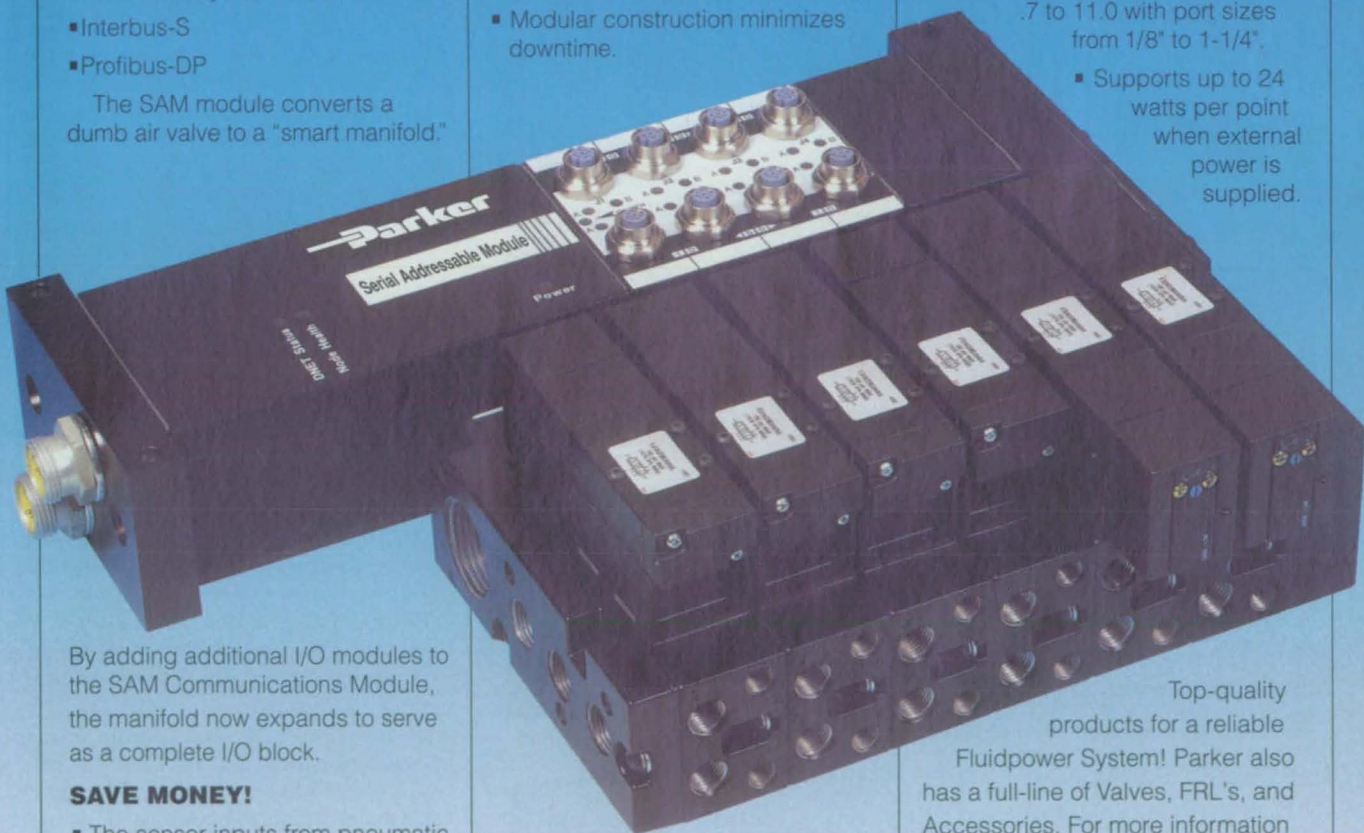

By adding additional I/O modules to the SAM Communications Module, the manifold now expands to serve as a complete I/O block.

SAVE MONEY!

- The sensor inputs from pneumatic cylinders, slides and other air components can be plugged directly into the valve manifold --

Top-quality products for a reliable Fluidpower System! Parker also has a full-line of Valves, FRL's, and Accessories. For more information on these companion products, or on SAM 2.1, contact your local Parker distributor or 1-800-C-PARKER. Ask for SAM Catalog 0631/USA.

Parker Hannifin Corporation

Pneumatic Division
8676 E. M-89 • Richland, MI 49083
(616) 629-5000 • FAX (616) 629-5385

Allen-Bradley and PLC are registered trademarks of Allen-Bradley Company, Inc. Honeywell is a registered trademark of Honeywell, Inc.

Parker
Motion & Control

Low-Differential-Pressure Test Apparatus

Differential-pressure transducers can be tested and calibrated more easily and cheaply.

John F. Kennedy Space Center, Florida

An apparatus for testing and calibrating low-differential-pressure transducers can be used under various conditions in the laboratory or in the field. The apparatus is designed especially for use on clean-room-air-conditioner differential-pressure transducers with typical full-scale ranges of about 0.1 in. of water (about 25 Pa).

Previously, it was necessary to test and calibrate such transducers in the laboratory by use of expensive and cumbersome dead-weight testers, with strict control of room temperatures and long waiting times for equalization of temperatures. The present apparatus costs about one-third as much as a dead-weight tester does, is portable, does not

depend on strict control of room temperature, and can be operated easily by a technician with minimal training.

The apparatus (see figure) comprises a differential-pressure generator, a standard differential-pressure gauge with electronic output that can be displayed and recorded by a computer, and associated plumbing. The differential-pressure generator includes a stainless-steel tank partitioned into two approximately equal volumes. A tube connects each volume to one of two ports of a precise volume controller based on a threaded piston with an operating handle. Other tubes connect the two volumes to the ports of the transfer-standard differential-pressure gauge and to the ports of the differential-pressure gauge to be tested or calibrated. The two gauges are connected in parallel; that is, they are exposed to the same differential pressure between the two volumes.

When the operator turns the handle of the volume controller, the volume on one side of the controller decreases, causing an increase in the gas pressure on that side. On the other side of the controller the volume increases, causing a decrease in the gas pressure on the associated side. The technician turns the handle on the volume controller until the transfer-standard gauge indicates the desired differential pressure; when this point is reached, the technician causes the computer to record the readings of the transfer-standard gauge and the gauge under test.

While the decreasing volume (compression) caused an increase in pressure, there was an increase in the temperature. A corresponding decrease in temperature accompanied the decrease in pressure on the other side. In order to determine the value of the pressure he/she has just set, the technician normally has to wait until the temperature differences dissipate. The metal divider in the tank allows this temperature differential to mix at approximately the speed of sound, therefore dissipating the temperature difference during the volume controller adjustment. However, the heat-transfer processes in this apparatus are slow enough that the technician can easily maintain a desired pressure setting by manual adjustment. Moreover,

Are your CAD designs a best-kept secret?

Share 3D designs freely with SolidView®.

You can now share your 3D CAD designs freely. SolidView's exclusive 3D publishing capabilities allow you to send your CAD designs, along with a no-cost 3D player, to anyone with a Windows® PC. That's all they need. Solid communication between design, manufacturing, and suppliers has never been easier or faster.

SolidView includes:

- Exclusive 3D publishing
- High performance graphics
- VRML input and output
- Optional IGES input
- 3D dimensioning and markup
- 30-day money-back guarantee
- Windows 3.1, 95, and NT compatibility

To order your copy of SolidView or for a FREE 15-day trial, call us toll-free at 1-888-SOLID-VU. For more details, call (805) 257-9300 or visit us at <http://www.solidconcepts.com>.

Only
\$495!

No-risk money-back guarantee.

U.S. list price plus shipping and handling.




SOLID View

Share the vision.

Solid Concepts Inc. • 28231 Avenue Crocker #10 • Valencia, CA • 91355

SolidView is a registered trademark of Solid Concepts Inc. Windows, Windows NT, and Windows 95 are registered trademarks of Microsoft Corporation.

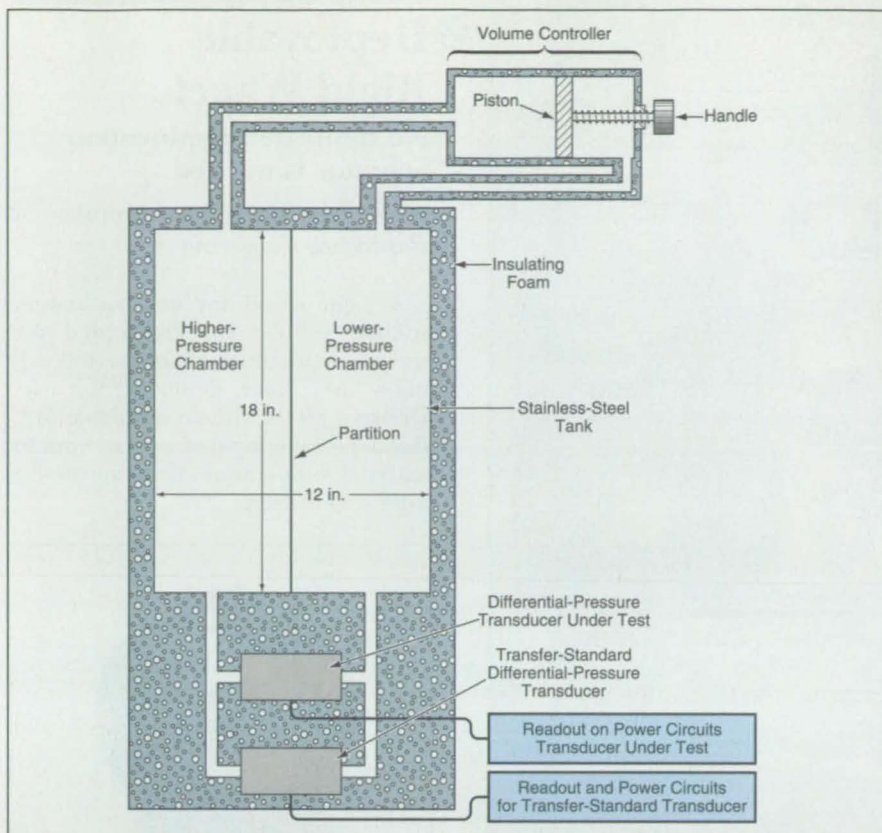

Pressures of Gas in the Two Chambers can be made to differ slightly by use of the volume controller, which contains a manually adjustable piston that increases the volume of the gas on one side while decreasing the volume of gas on the other side by an equal amount.

the apparatus is insulated to prevent room air currents and other ambient phenomena from differentially heating or cooling the gases in the two volumes.



The standard differential-pressure gauge is a commercial unit that has been calibrated by use of primary standards that have, in turn, been calibrated by the National Institute of Standards and Technology (NIST). The full-scale reading of this unit is 0.53579 in. of water (about 133 Pa). Tests have shown that with manual adjustment, differential pressure can be regulated to within 5×10^{-5} in. (0.012 Pa), exceeding a design requirement for an accuracy and resolution of 2.5×10^{-4} in. (0.062 Pa).

This work was done by Gregory A. Hall of Kennedy Space Center and Stephen J. Stout, Richard T. Deyoe, James E. Meeks, and Harold E. Crain of I-NET. For further information, write in 75 on the TSP Request Card.

This invention is owned by NASA, and a patent application has been filed. Inquiries concerning nonexclusive or exclusive license for its commercial development should be addressed to the Patent Counsel, Kennedy Space Center; (407) 867-2544. Refer to KSC-11804.

Computer Mounting Solutions

Ergonomically position your computers wherever you need them—with Ergotron's Computer Mounting Solutions

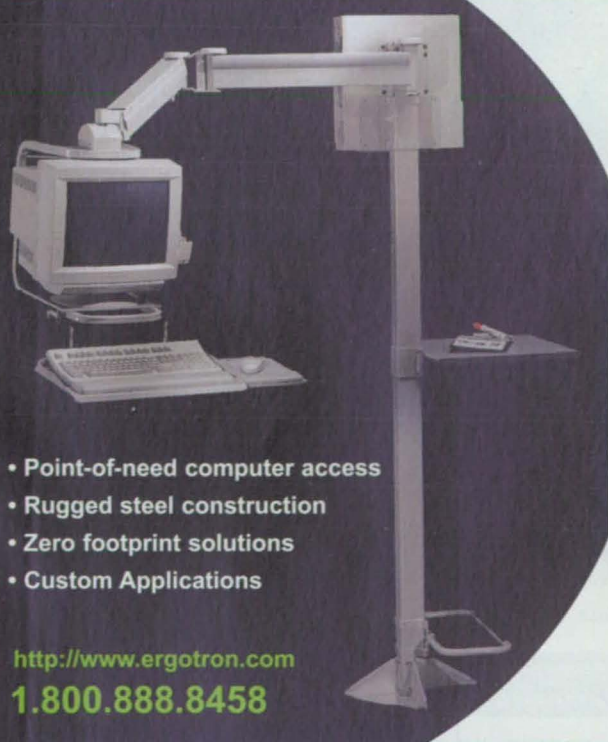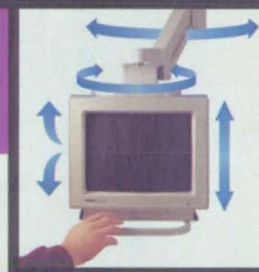

- Point-of-need computer access
- Rugged steel construction
- Zero footprint solutions
- Custom Applications

<http://www.ergotron.com>
1.800.888.8458



Mobile WorkCenters



Flat Panel Monitor and Keyboard Mounts



Wall Mounts



ERGOTRON®

1.800.888.8458 <http://www.ergotron.com>

Milestones, Etc. for Windows.

The Fast, Easy Way to Schedule Your Projects!




Essential for planning, tracking, reporting, presenting, and organizing your work!

In the engineering world, nothing happens without a schedule and everything comes under grueling scrutiny. That's why you need Milestones, Etc.™ 5.0 from KIDASA. Milestones, Etc. project scheduling software makes scheduling work and communicating the progress fast and easy. You can create master schedules containing instant hyperlinks to detailed schedules, documentation, financial information, even web pages. And with built-in project wizards, spell-checking, smart import capabilities, datagraphs, and more, Milestones, Etc. has the sophisticated features you need to be more effective in your job now. No other project scheduling software offers you more. See for yourself. Call today, and order Milestones, Etc. for just \$169.00. Or visit our web site at www.kidasa.com, and download a free trial version - NOW!

1-800-765-0167
www.kidasa.com

KIDASA
SOFTWARE

©1997 KIDASA Software, Inc. 1114 Lost Creek Blvd., Suite 300, Austin, TX 78746. All trademarks and registered trademarks are the property of their respective owners. Microsoft, Windows and the Windows logo are registered trademarks of Microsoft Corporation.

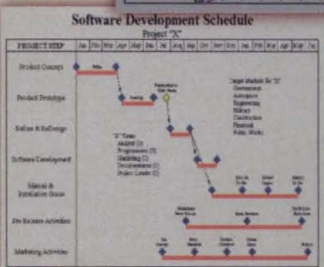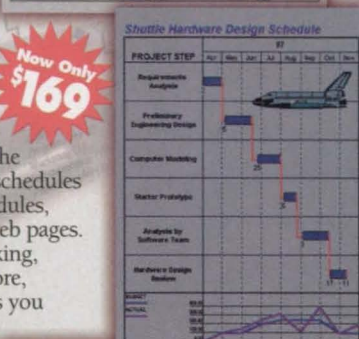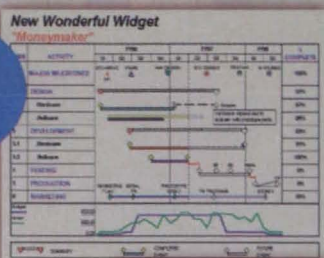

Designed for Microsoft Windows 95



For More Information Write In No. 415

Deployable Rigid Wheel

No dedicated deployment actuator is needed.

NASA's Jet Propulsion Laboratory,
Pasadena, California

A rigid wheel for an exploratory robotic vehicle can be folded for stowage at about one-third its full volume, then later deployed for use. Unlike a wheel with an inflatable tire, this deployable rigid wheel can work in extreme temperatures and can survive intense radiation.

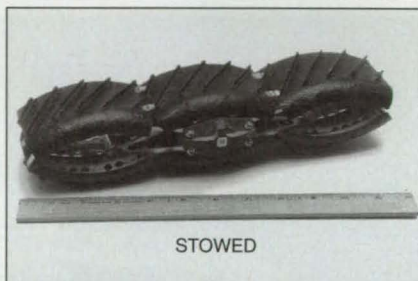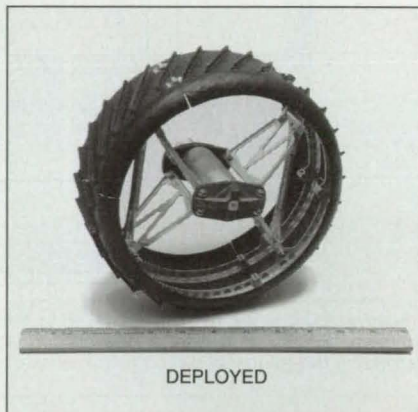

The Deployable Rigid Wheel can be stowed at about one-third its full volume. When released from stowage, it extends itself, then locks itself at full extension.

The wheel (see figure) includes six rigid outer segments that are hinged together and connected to a hub via pin-ended spokes. No dedicated actuator is needed for deployment; instead, to initiate deployment, one simply releases some restraints. Deployment force and locking are derived from pin-ended extension springs. When deployment is complete, the spokes rest on mechanical stops at the hub; this establishes the load path for transmission of torque.

This work was done by Lee F. Sword, Geoffrey D. Harvey, and Jack A. Frazier II of Caltech for NASA's Jet Propulsion Laboratory. No further documentation is available. NPO-19982

Extreme Environments

High Performance Cable Harnesses

- Single and Multimode
- Single and Multichannel
- Easy Maintenance and Cleaning
- High-Reliability Ruggedized Connectors
- Low Insertion Loss
- High Return Loss

680 Series
Return Loss
Module

NEW

No Mandrel Wraps!
Contact us for more details



RIFOCs Corporation

805/389-9800 Fax 805/389-9808 • e-mail: rifocs@aol.com • <http://www.rifocs.com>

Fiber Optic Instruments & Components

Procedure for Quick Calculations of Hydroelastic Loads

Effects of sloshing can be estimated faster by use of a simplified mathematical model.

Marshall Space Flight Center, Alabama


A procedure for calculating hydroelastic loads associated with sloshing of liquid in a tank involves the use of (1) a computer code developed previously for finite-element mathematical modeling of hydroelasticity and (2) a finite-element mathematical model of the dynamics of the tank to obtain (3) a simplified (one-degree-of-freedom) approximate mathematical model of sloshing. In comparison with other, more complex mathematical models of sloshing, this approximate model can be implemented more rapidly and easily and thus more cheaply. The capability afforded by this procedure can be beneficial in analyzing and designing tanks in which sloshing can adversely affect safety and controllability; potential applications include ballast and liquid-transport tanks in ships, fuel tanks in aircraft, and liquid-transport tanks on land vehicles.

The previously developed HYDRO computer program implements the finite-element model of the liquid. This model is based partly on the simplifying

assumptions that the liquid is inviscid, incompressible, and irrotational, and that it undergoes only small displacements. The principal unknown quantities that one seeks to compute in HYDRO are pressures in the liquid as


functions of position and time. One important consequence of the simplifying assumptions is that one can compute these pressures from displacements of the boundary of the liquid.

In the finite-element modeling of the

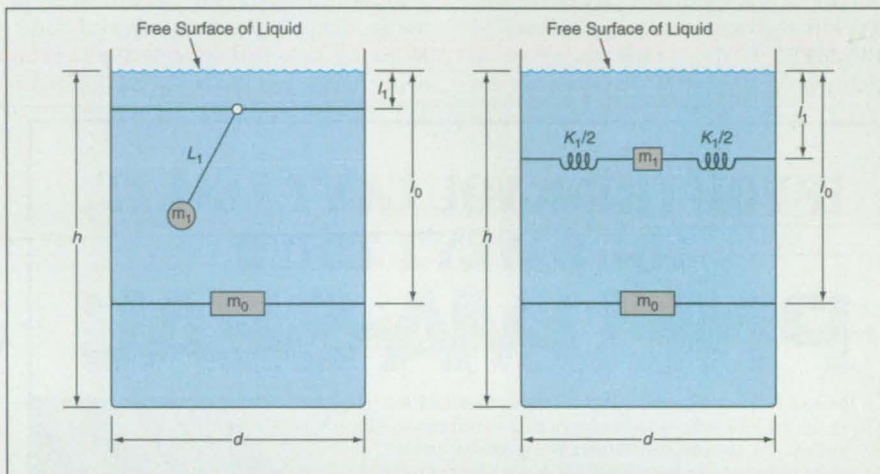

A Pendulum or Spring-and-Mass Model approximates the effects of sloshing of liquid in a tank. Masses m_0 and m_1 represent the nonsloshing and sloshing parts, respectively, of the mass of the liquid. The spring stiffness K_1 or the pendulum length L_1 represents the slosh stiffness.


RUGGEDTRONICS

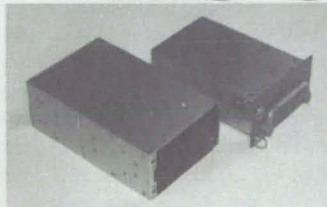

*Ruggedized
Peripherals*
RUGGED
MEMORIES
FOR SEVERE
ENVIRONMENTS

- Sealed Units - For moisture, dust, corrosive atmosphere
- Pressurized designs for operation over 10,000 feet
- Removable Units
- Rack mount design
- High levels of vibration and shock isolation
- Tempest designs
- Designs for Hard drives, Optical drive, Tape and Floppies
- Optional interfaces and input power

24711 Redlands Blvd. No. G
San Bernardino, CA 92408
(909) 796-5374 FAX (909) 796-7704

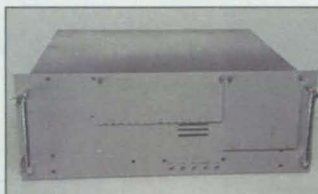

tank, one seeks to compute the displacements (elastic deflections) of the tank as functions of position and time. Wherever the liquid wets a wall of the tank, the pressure in the fluid and the displacement of the wall affect each other, and the dynamic response of the tank is affected by its elasticity and its distribution of mass.

In the present procedure, HYDRO is used to calculate the slosh frequencies under the initial simplifying assumption that the tank is rigid. Another previously developed computer program called "BEAMER" is then used to obtain a transformation matrix that couples the

HYDRO model of the liquid with the finite-element structural model of the tank. The resulting system of equations for the coupled models is solved by use of a third previously developed computer code; namely, MSC/NASTRAN.

The last step in the procedure is to generate the approximate single-degree-of-freedom model of sloshing (see figure). Such models have traditionally been used in analyzing control systems that interact with sloshing liquids. To generate data to determine the values of the model parameters m_0 , m_1 , and either K_1 or L_1 , one first models the tank as being subjected to a lateral enforced

acceleration. One then finds the values of these parameters that make the oscillations of the model produce net lateral forces and moments equal to those of the first lateral slosh mode. A HYDRO-post-processing code called "SLOSH" has been written for this purpose. SLOSH reads in the results from HYDRO, performs a frequency-response analysis, and solves for parameters of the approximate model.

This work was done by Joseph Brunty and Frank Bugg of Marshall Space Flight Center and Eric R. Christensen of Sverdrup Technology, Inc. For further information, write in 87 on the TSP Request Card.

Inquiries concerning rights for the commercial use of this invention should be addressed to the Patent Counsel, Marshall Space Flight Center; (205) 544-0021. Refer to MFS-31134.

IF YOU THINK YOU CAN'T SEAL IT, YOU HAVEN'T TRIED PNEUMA-SEAL®

Pneuma-Seal is an inflatable gasket that when pressurized with air, fills the gaps between surfaces, even hard-to-seal uneven surfaces. And when deflated, Pneuma-Seal quickly retracts to prevent interference when opening and closing a door or cover.

You can use Pneuma-Seal as an effective barrier against pressure differentials and to seal out water, dust, gas, chemicals, noise and other contaminants.

Pneuma-Seal is particularly suitable for:

Large enclosures where it is uneconomical to machine the entire sealing surface

Uneven fabrications where traditional compression gaskets or latches are ineffective

Horizontal or vertical sliding doors or covers that would tend to drag on and abrade conventional seals

Hinged doors where flush thresholds are required

Typical applications include:

Processing equipment: chemical, food, textile, pharmaceuticals, dryers, ovens and where **rapid sealing and unsealing** are required

Pollution control: sound attenuation, hopper seals

Laboratory facilities: test equipment, clean rooms

Transportation: military vehicles, aircraft, shipboard, mass transit doors and hatches

Construction: special purpose doors, flood protection

Pneuma-Seal is available in a wide range of profiles, with fabric reinforcing where applicable, and in a variety of rubber and silicone compounds to meet harsh environmental conditions.

Pneuma-Seal is furnished complete, ready to install as continuous loops, strips, rectangles, or other shapes to your specified dimensional requirements.



To obtain a complimentary copy of our designer's handbook, engineering assistance or to have a Presray representative contact you, please call us at any of the following telephone numbers:

(914) 855-1220

Telex: 646720

FAX: (914) 855-1139

West Coast: (714) 751-2993

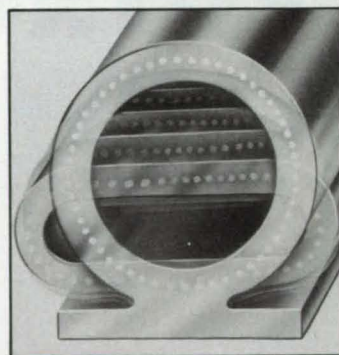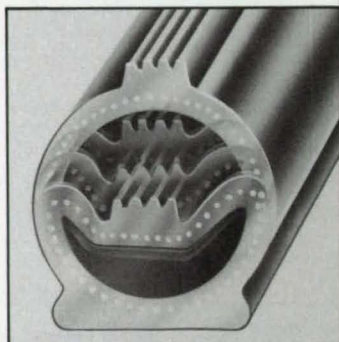

PRESRAY

Presray Corporation
159 Charles Colman Boulevard, Pawling, NY 12564

YOU MAY ALSO CONTACT US BY CIRCLING THE
RESPONSE NUMBER INDICATED BELOW.

⊕ Turbine-Blade Radial Damper With Offset Center of Gravity

*Marshall Space Flight Center,
Alabama*

A device suppresses radial vibrations of a turbine blade, thereby helping to reduce fatigue and prolong the life of the blade. The device is a damper that is pressed outward against the turbine-blade platform by centrifugal force. The damper is shaped and positioned with its center of gravity offset from the radial line through the point of contact with the blade platform, so that centrifugal force applies a torque about this point. The torque is reacted by contact between a radial leg of the damper and the sides of a radial slot into which the leg extends. The circumferential force of contact gives rise to a radial frictional force whenever the blade platform and thus the damper move radially. Thus, kinetic energy of radial vibrations is damped by friction, with consequent reduction of the amplitudes of the vibrations. The heat generated by the frictional dissipation of energy is removed by the turbine flow.

This work was done by Charles A. Bulgrin and John O. Struthers of United Technologies Pratt & Whitney for Marshall Space Flight Center. For further information, write in 83 on the TSP Request Card.

Inquiries concerning rights for the commercial use of this invention should be addressed to the Patent Counsel, Marshall Space Flight Center; (205) 544-0021. Refer to MFS-31177.



Machinery/Automation

Apparatus for Access to a Confined Space From Above

Telescoping tubes, a ladder, and platforms would fit through a narrow opening.

John F. Kennedy Space Center, Florida

A proposed apparatus called an "access kit" would enable technicians and equipment to enter and leave a confined space through a relatively narrow opening in the ceiling. The apparatus is undergoing development; its original intended application is in the installation and removal of refrigerator and freezer components in a spacecraft module through a 50-in. (126-cm) square hatch on top of the module. Similar apparatuses could be designed to provide access to other confined spaces through narrow top openings for purposes of manufacturing, maintenance, and rescue. Large confined spaces such as chemical tanks, vats, and silos could be easily accessed from above. The access kit is unique in that it does not touch the room interior and is entirely supported from above.

The apparatus (see figure) would include three rectangular-cross-section telescoping tubes, a ladder, platforms, and hoists. For compactness, the telescoping motions of the tubes would be actuated by a single wire-rope-drive hoisting mechanism. This mechanism would be strong enough to raise and lower not only the platforms, tubes, and ladder, but also the technicians.


Initially, the apparatus would be maneuvered into position above, and aligned with, the hatch. The telescoping tubes would then be extended by a single actuator down through the hatch into the room below. The telescoping tubes would provide support for the platforms as they were lowered through the hatch and set up for use.

The platforms would include a fixed access platform and several flip platforms, all combined into an assembly at the bottom of the telescoping tube assembly. Once the platform assembly was lowered to the desired position, a technician would climb down the ladder to the platform assembly, then deploy the flip platforms to cover the entire open area and thereby provide a safe work platform. Other technicians, if needed, would then climb down the ladder to the work platform.


Two small jib hoists would be available for lowering and raising components and other equipment and, if necessary, for raising injured technicians.

This work was done by Scott T. Colloredo and Alan C. Littlefield of Kennedy Space Center and Scott Strickland of McDonnell Douglas Corp. For further information, write in 65 on the TSP Request Card.

Inquiries concerning rights for the commercial use of this invention should be addressed to the Patent Counsel, Kennedy Space Center; (407) 867-2544. Refer to KSC-11848.

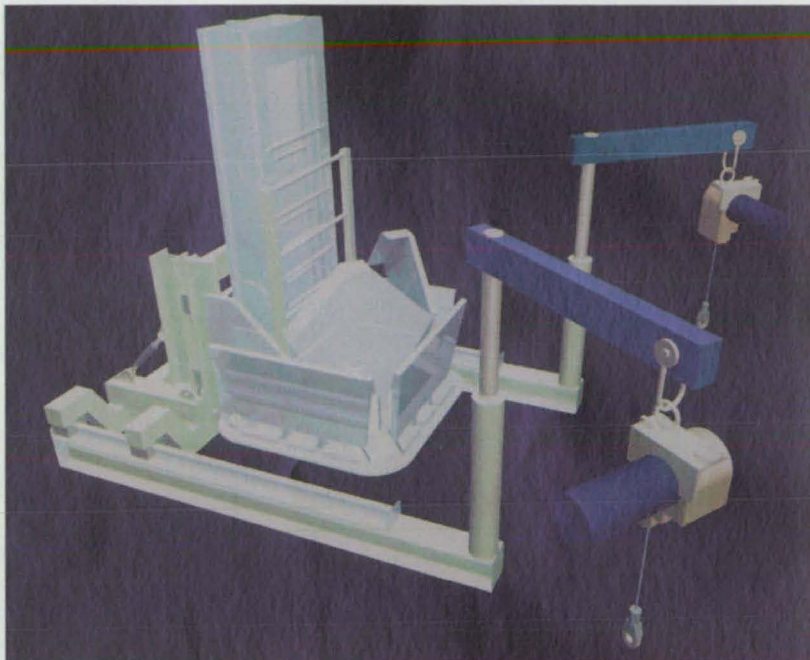

ACCESS KIT WITH TELESCOPING TUBES RETRACTED

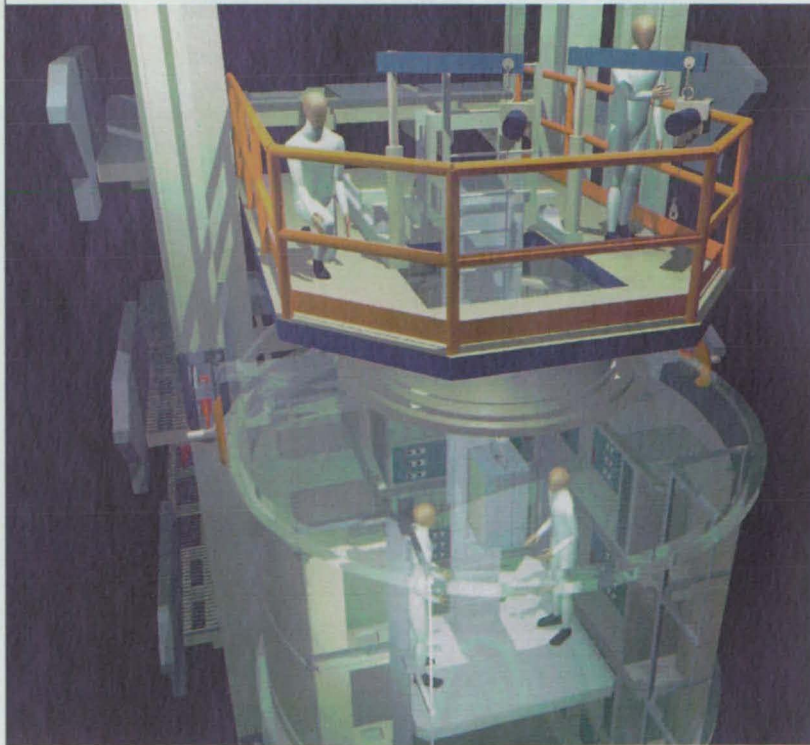


ACCESS KIT IN USE

The Access Kit would be fairly compact when the flip platforms were folded inward and the telescoping tubes retracted for assembly. In use, the telescoping tubes would be extended downward and the flip platforms deployed to form a work platform.

Thermal-Clear™ Heaters

The clear choice for transparent heating

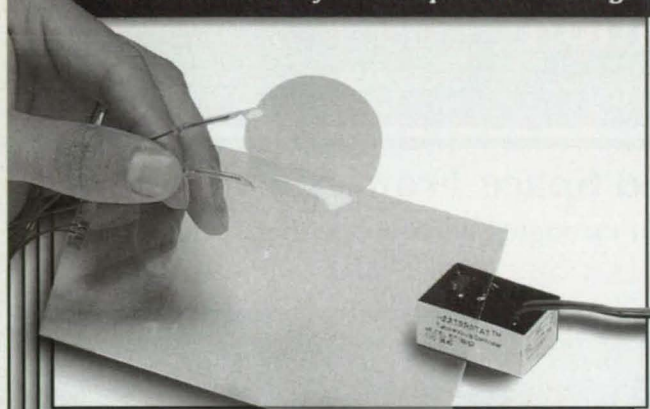

Optical grade mylar with fine wire element for shine-through heating • 82% minimum light transmission
 • Rectangular, round, and irregular shapes to 11" x 22"
 • Optional temperature sensors & controllers

Extend the operating range of LCD's & fluorescent tubes

- Portable computers & scanners • Incubator covers
- Microscope stages • Aircraft displays • Medical devices • Outdoor security equipment • Faceplates


MINCO PRODUCTS, INC.

7300 Commerce Lane • Minneapolis, MN 55432-3177 U.S.A.
 Telephone: (612) 571-3121 • FAX: (612) 571-0927

For More Information Write In No. 418

UniSlide® Motor Driven Positioning Equipment

Travel from 1/2 in. to 17 1/2 ft.

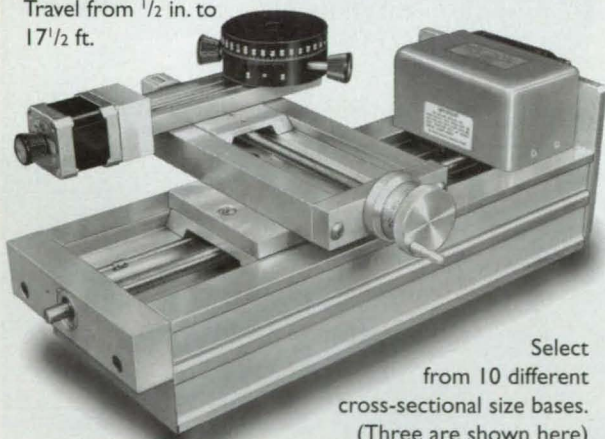

Select from 10 different cross-sectional size bases. (Three are shown here)

Choose from hundreds of Linear Slides, Rotary Tables, and X-Y Tables. Use them to position, scan or feed. Move loads from oz. to 400 lbs. Also, powerful, programmable motor controllers. Get your FREE 48 page Catalog M-97 and price list today!

VELMEX, INC.

Visit us at www.velmex.com

Call 800 642-6446

FAX: 716 657-6153

In NYS: 716 657-6151

Bloomfield, N. Y. 14469

*Reducing Gear-Mesh Vibrations With Piezoelectric Actuators

Opposing vibrations are introduced in a feedforward control scheme.

Lewis Research Center, Cleveland, Ohio

Experiments have demonstrated the feasibility of a feedforward scheme for reducing gearbox vibrations by introducing opposing forces at the gear-mesh frequency, using piezoelectric actuators coupled to the outer races of some of the gear-shaft bearings. The need to consider the introduction of opposing vibrations arises because even in the presence of the most careful design and precise fabrication, the variation in gear-tooth stiffness with motion of the meshing point along the gear-tooth profile makes it impossible to eliminate gear-mesh vibrations completely. The vibrations are transmitted through the gear shafts and bearings to the gearbox housing.

The basic concept of reducing vibrations in the gear box housing by use of opposing, piezoelectrically actuated vibrations has been investigated previously, but with a view toward suppressing synchronous, subsynchronous, and transient vibrations of rotors. In engineering disciplines concerned with vibrations of rotating machine elements, "synchronous" means at the frequency of rotation. Typically, frequencies of rotation are of the order of tens to hundreds of hertz. One of the novel aspects of the present development is the choice of the gear-mesh frequency (typically of the order of several kilohertz) rather than the lower frequencies addressed previously. Another novel aspect is the particular design for coupling between the actuators and the bearing races.

Figure 1 illustrates the arrangement of gears, bearings, and piezoelectric actuators in a test rig used in the experiments. The actuators at an angle that is collinear with the gear-tooth contact force; in the particular gear design, this angle is 20° off the centerlines of the shafts. Cone washers and a threaded plug preload a push rod between each actuator and its respective bearing race. A small accelerometer is mounted on each

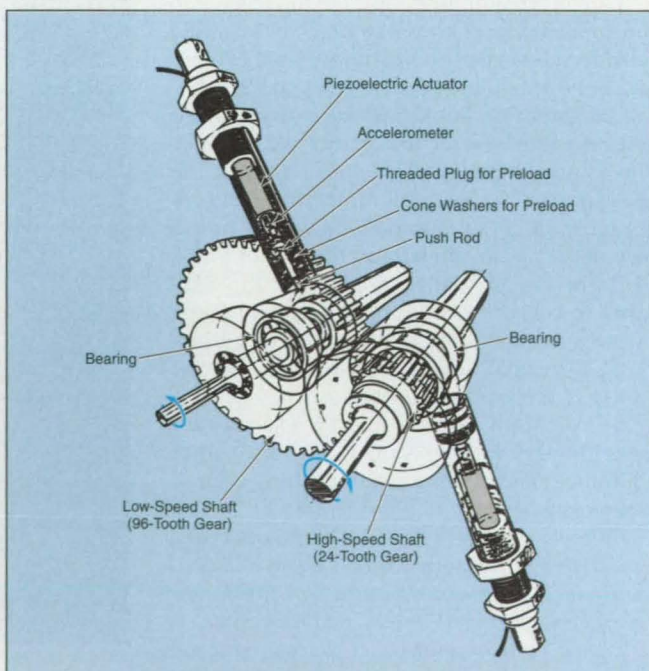


Figure 1. Piezoelectric Actuators Generate Forces to counteract gear-mesh vibrations. The off-center mounting scheme makes the actuator force collinear with the gear-mesh force.

actuator. Not shown in Figure 1 are a mechanism for applying a static preload torque to the low-speed shaft, four accelerometers mounted on the gearbox housing to measure vibrations.

Figure 2 shows the major functional blocks of the feedforward control scheme to illustrate the principle of operation. An eddy-current displacement

sensor is mounted to detect the passage of the teeth of one of the gears. As the gear rotates, this probe produces a pulse wave at the gear-mesh frequency. A feedforward circuit converts the pulse wave to a sinusoid of equal frequency. The phase of the sinusoid for each actuator can be adjusted manually, by use of a phase shifter and an inverter, over the

full range of 360°. The feedforward circuit has a separate manual control to adjust the amplitude of the sinusoid.

An oscilloscope is used to monitor the gear-tooth pulse wave and the amplified feedforward sinusoid for each actuator. The voltage and current of the feedforward sinusoid is monitored by analog meters. A four-channel dynamic signal analyzer monitors the frequency responses of four accelerometers. In operation, the phase and amplitude of the feedforward sinusoid(s) are adjusted manually to minimize the amplitude of the gear-mesh-frequency component of the vibration amplitudes indicated by the signal analyzer.

This work was done by Albert F. Kascak and Gerald T. Montague of the Vehicle Propulsion Directorate of the U. S. Army Research Laboratory and Alan Palazzolo, Daniel Manchala, and Erwin Thomas of Texas A&M University for Lewis Research Center. For further information, write in 13 on the TSP Request Card.

Inquiries concerning rights for the commercial use of this invention should be addressed to NASA Lewis Research Center, Commercial Technology Office, Attn: Tech Brief Patent Status, Mail Stop 7-3, 21000 Brookpark Road, Cleveland, Ohio 44135. Refer to LEW-16070.

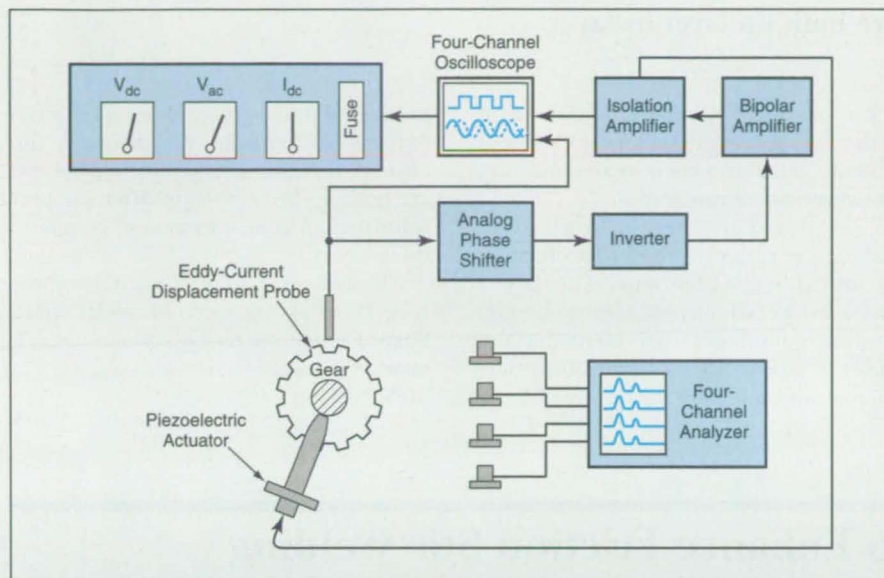


Figure 2. Feedforward Excitation for the Piezoelectric Actuators is generated from the displacement-probe output, which is a pulse wave synchronous with the meshing of the gear teeth.

Liability

Asset



Handling and Treatment of Metal Chips

Call on us

The SOLUTIONS

for your needs

are in our hands



For more details
please contact
Charlie Gaal at
Alesa Alusuisse Canada Ltd.

245 Victoria, Suite 700
Westmount, Quebec, H3Z 2M6
Tel: (514) 937-9105
Fax: (514) 937-0473



Desktop Manufacturing of Silicon Nitride Components

Three-dimensional components are built up layer-by-layer.

Marshall Space Flight Center, Alabama

A proprietary "desktop" laminated-object-manufacturing process has been used to rapidly fabricate silicon nitride components. The finished components are based on a computer-generated model and built without any mold or dies, so the design can be easily changed, providing engineers and designers with a very flexible and rapid prototyping process. The process has been used previously for rapid fabrica-

tion of prototype components from other ceramic materials besides silicon nitride. It has also been successfully used to create metal prototypes.

The first step in the process involves taking the ceramic powder and forming it into thin, flexible tape. The tape is used in special-purpose, computer-controlled equipment that laminates one layer of tape to a stack of previously laminated and cut layers. The new layer is

then cut to form one cross-section of the part being built. In this manner, the desired three-dimensional components are built up layer-by-layer. After the part is finished, it is heat treated to complete the process.

This work was done by Curtis W. Griffin of Lone Peak Engineering for Marshall Space Flight Center. No further documentation is available.

MFS-26467

Back-Surface Relief To Enhance Friction Stir Welding

Sensitivity to depth of penetration is reduced, and strength is increased.

Marshall Space Flight Center, Alabama

An improved version of friction stir welding (FSW) incorporates a weld-preparation step in which a groove of suitable cross section is machined into the back surface, straddling the weld line between two workpieces to be joined (see Figure 1). This groove, known in the art as back-surface relief, offers two advantages: (1) it makes the overall FSW process more controllable by decreasing the sensitivity of the resulting weld quality to variations in the depth of penetration of the welding tool into the workpieces, and (2) the fracture strength and toughness of the weld exceed those of a similar weld made without back-surface relief.

The tool used in FSW comprises a shoulder and a probe. The tool is rotated, moved along the weld line, and pushed into the workpieces with considerable force. The force and motion plasticize and forge the parent material under the tool. The quality of the resulting weld is highly dependent on the depth of penetration of the probe, making it necessary to control the depth of penetration precisely by use of rigid structures to support the tool and the workpieces. In principle, the depth could be measured and controlled actively, but this would entail great expense.


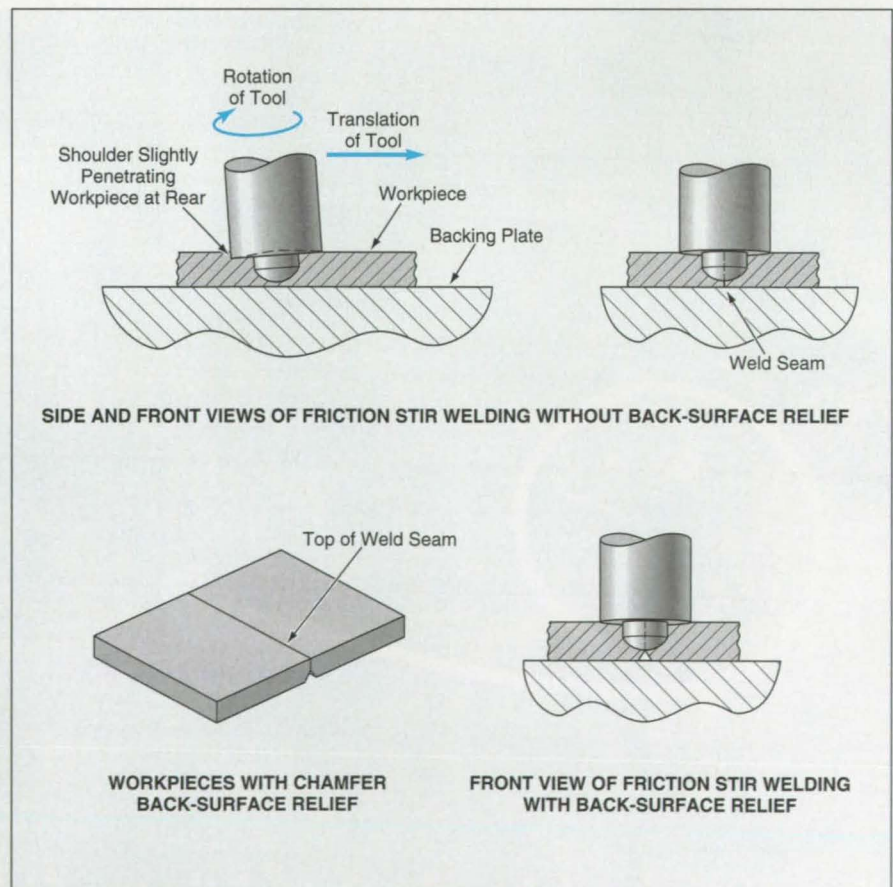


Figure 1. Friction Stir Welding can be performed without or with back-surface relief. Although the back-surface relief shown here is in the form of an inverted V groove, other relief cross sections could also be used.

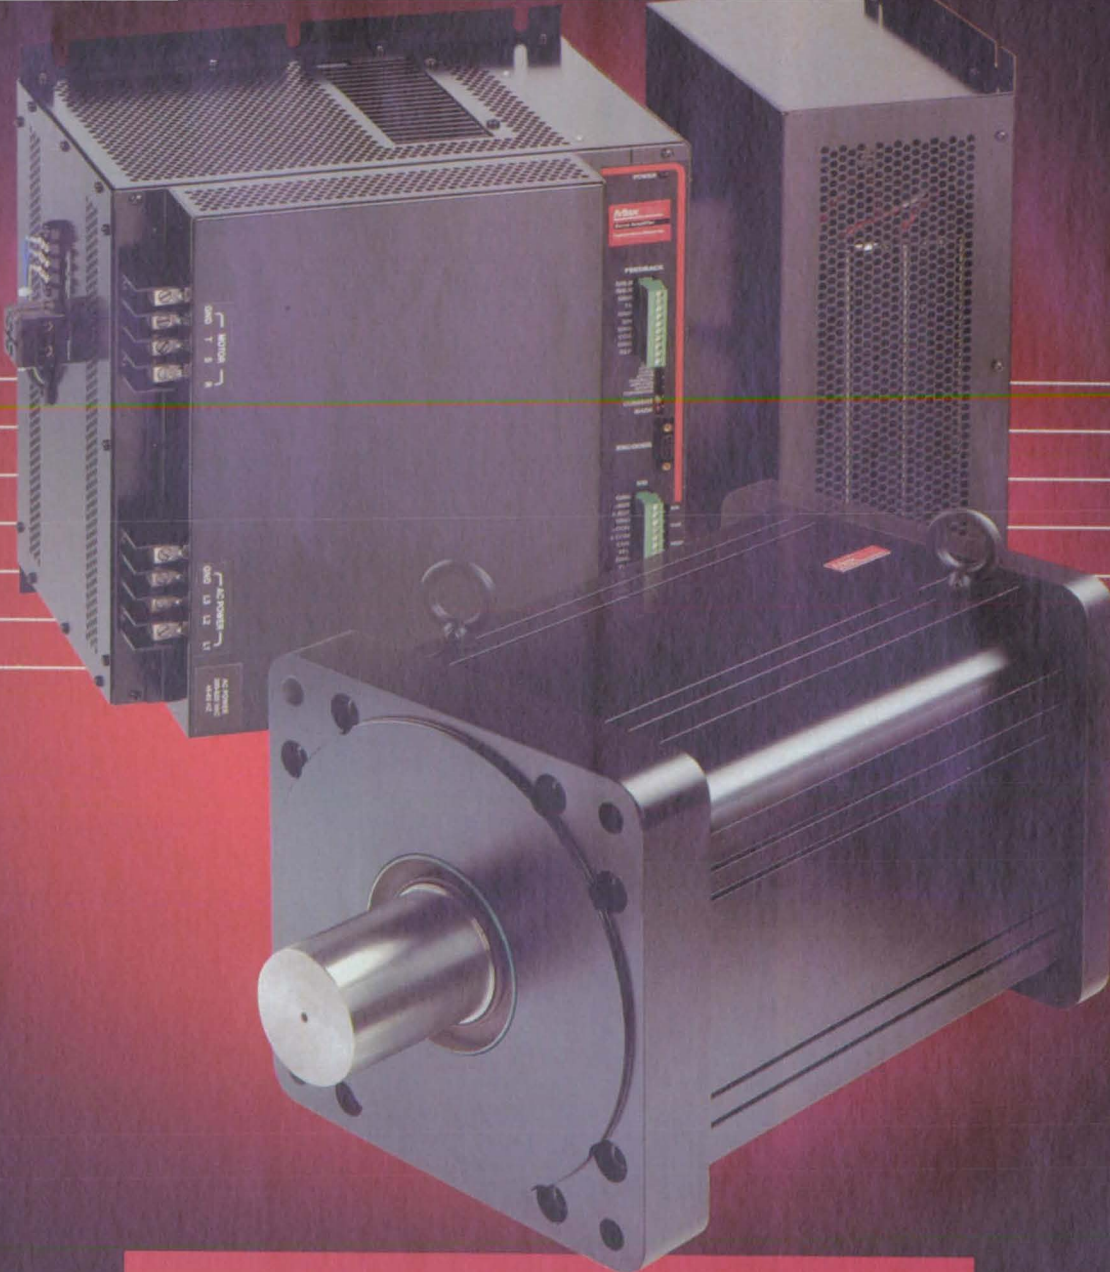

Introducing The New 12"MaxPlus™ Servo Motor

Massive Torque. Serious Horsepower. Incredibly Small Size.

300 Ft/Lbs.
of Continuous Torque
Up to 90 Horsepower
12 inch frame size

The numbers say it all: The new MaxPlus™ 12-inch servo motor delivers greater torque in a smaller mass for higher throughput and greater reliability (no gearbox). Our new 12-inch motor replaces vector drive and servo motors with gearboxes and performs extremely well on very large machinery where the size and weight of conventional motors has made automation prohibitive.

And it comes from Custom Servo Motors, where we are committed to working with you to develop


customized motor/amplifier packages that meet or exceed your performance, size and durability requirements.

If you want more torque with less mass, give us a call at **1-800-967-1785** for all the details.

Custom Servo Motors Inc.

A Subsidiary of MTS Systems Corporation

2121 Bridge St.
New Ulm, MN 56073
Phone: 507-354-1616
Fax: 507-354-1611

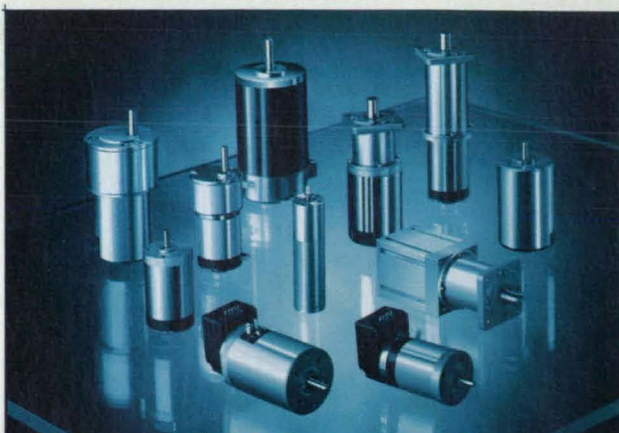

INDUSTRIAL SOLUTIONS IN MOTION

Globe's full line of brush and brushless DC motors and gearmotors feature:

- Up to 4" diameter
- Ceramic and rare earth magnetics
- High speed capabilities
- Spur and planetary gear reducers
- Encoder feedback

Call for immediate information!

**Broad Product
Portfolio**

**Custom
Engineering
Support**

**Availability Via
Distribution**

GLOBE MOTORS™


A Division of Labinal Components and Systems, Inc.

9 3 7 / 2 2 8 - 3 1 7 1

2275 Stanley Avenue ■ Dayton, Ohio 45404 ■ Fax: 937/229-8531

For More Information Write In No. 421

Linear and Circular Precision Encoders

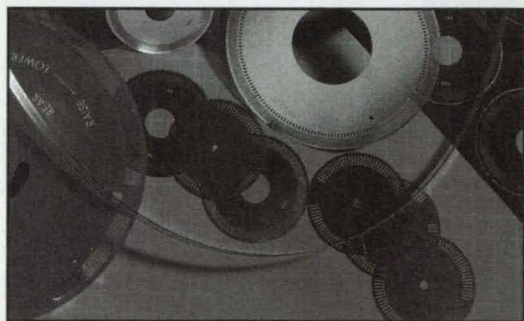

- Metal, glass or film
- Linear or Disk
- Close tolerance, custom designs
- Binary Code, Motor Control
- Applications: Automotive, office equipment, medical products, robotics

Call us toll-free for information or prompt quotation:

1/800-BMC-ETCH

Buckbee-Mears St. Paul
A UNIT OF BMC INDUSTRIES, INC.


278 E. 7th St., St. Paul, MN 55101
612/228-6400 • FAX 612/228-6572
info@bmcind.com • <http://www.bmcind.com>

In the absence of back-surface relief, plasticized material is forged between the probe tip and the bottom of the parent material. In the presence of back-surface relief, forging occurs between the probe tip and the backing plate, so that forged material is pushed into the relief volume. Back-surface relief thus redefines the nature of the FSW process. Though the precise physics of the improvement may be difficult to explain, it is apparent that back-surface relief makes the depth of penetration of the tool less critical, and there is apparently some optimal relationship between the geometry of the relief and the amount of parent metal pushed into the relief volume.


In an experiment to demonstrate this concept, 0.250-in. (6.35-mm)-thick workpieces of Al/Li alloy 2195 were joined by FSW, both with and without back-surface relief (see Figure 2). The specimens made with back-surface relief exhibited higher fracture strengths and greater elongations than did the specimens made without back-surface relief. Moreover, the standard deviations of the fracture strengths of the specimens made with back-surface relief were an order of magnitude smaller than those of the other specimens. These data indicate that back-surface relief results in stronger, more consistent welds.

This work was done by Jeff Ding of Marshall Space Flight Center, Peter Oelgoetz of Boeing North American, Rocketdyne Division, Peter Romine of Florida International University, and Glynn Adams of the University of Arkansas. For further information, write in 56 on the TSP Request Card.

Inquiries concerning rights for the commercial use of this invention should be addressed to the Patent Counsel, Marshall Space Flight Center; (205) 544-0021. Refer to MFS-30134.

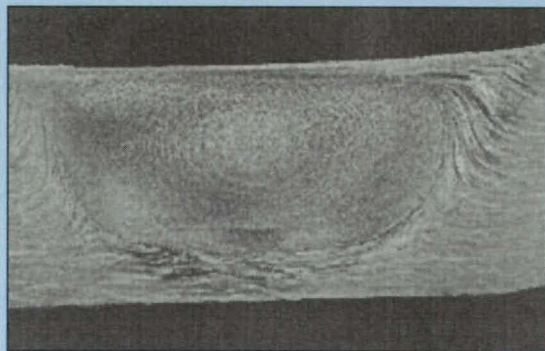


FRICTION STIR WELD WITHOUT BACK-SURFACE RELIEF

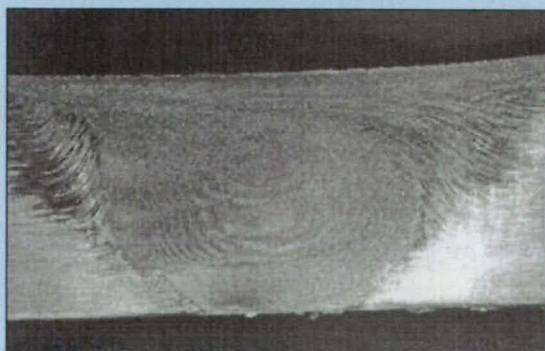

FRICTION STIR WELD WITH BACK-SURFACE RELIEF

Figure 2. These Cross Sections of FSW Specimens exhibit different distributions of fine-grain structure. In the specimen made with back-surface relief, the distribution extends to the bottom and is more nearly even. These differences are associated with differences in mechanical properties.


Motion **CONTROL** Tech Briefs

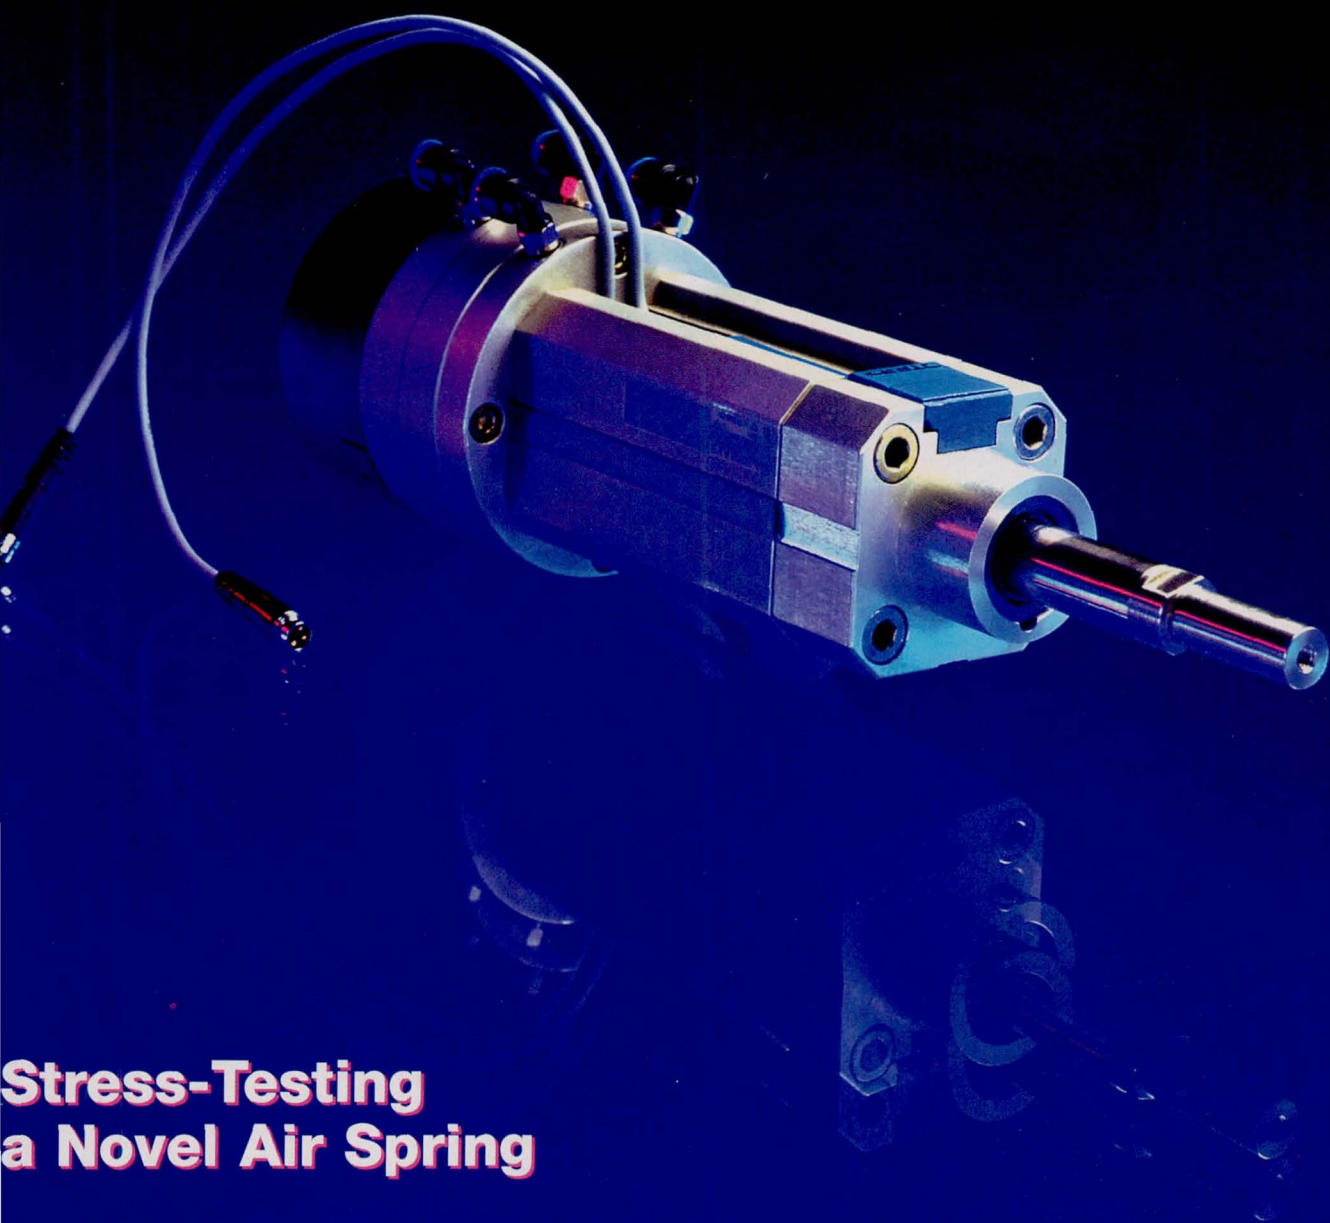

**Stress-Testing
a Novel Air Spring**

**Design of an Accurate
Gravimetric Feeder**

Looking for Quiet, Brushless Motors?

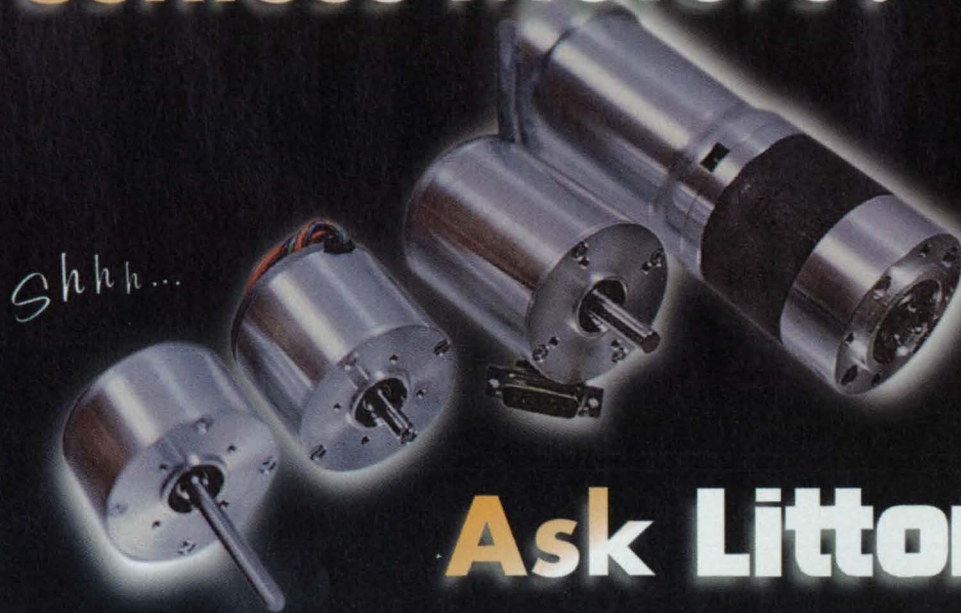

Ask Litton.

The Silencer™ series of brushless DC motors provides strong, quiet operation. In fact, Silencer motors offer such low acoustical noise you can hardly tell they're running.

Call us with your motor requirements. We'll speed prototyping and slash design/manufacturing cycle times by faxing you a **free** computer model of your motor.

Clifton Precision® DC Brushless Motors

- 2.25" diameter housings
- Lengths from 1.3" to 2.8"
- Continuous torques range from 7.5 to 56 oz-in
- Speeds up to 20,000 rpm
- Standard options include gearheads, resolvers, encoders and electronic drivers
- Coming soon are size 12, 34 and 42 NEMA frame brushless motors

Litton

Poly-Scientific

800-336-2112

ext. 279

Blacksburg, VA
540-953-4751
FAX 540-953-1841
<http://www.litton-ps.com>
e-mail: msg@litton-ps.com

Motion CONTROL Tech Briefs

Motion Control Tech Briefs Supplement to *NASA Tech Briefs* June 1997 Issue Published by Associated Business Publications

MOTION CONTROL TECH BRIEFS

- | | | | |
|-----|---|-----|---|
| 2b | Novel Air Spring Design Uses Fiber-Reinforced Plastic | 12b | Air-Slide Powder Preblender and Gas Seal |
| 4b | Mechanism for Fine Adjustment of Radio-Frequency Reflectors | 14b | Discharge Valve for Gravimetric Feeder |
| 6b | Fixture Holds Flexible Waveguide Rigidly After Installation | 15b | Preventing Fouling of Feeder Mechanisms by Aluminum Powder |
| 8b | Dropped Devices Would Penetrate Ground to Regulated Depths | 17b | Inlet Gas Distributor for Pneumatic Powder-Conveying Vessel |
| 10b | Active Suppression of Vibrations in Automobile Drive Trains | 20b | Liners for Inlet Bellows of Gravimetric Feeders |
| 11b | Self-Cleaning Spool Valve | 20b | Deflectors for Outlet Bellows of Gravimetric Feeders |
| | | 21b | Discharge Knife for a Gravimetric Feeder |


On the cover:

The DSL series of actuators from Festo Corp., Hauppauge, NY, features rotary, linear, and simultaneous rotary/linear actuation in one compact module. An extruded aluminum profile design makes it possible to mount the actuator on a wide range of Festo's pneumatic slide units via standard transition plates to build modular devices for pick-and-place, capping, and packaging.


Photo courtesy Festo Corporation.

PRECISION STAGES


Accurate Systems at an Affordable Price!

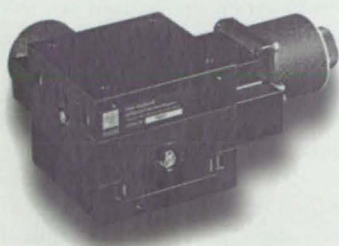

X-Y Stages

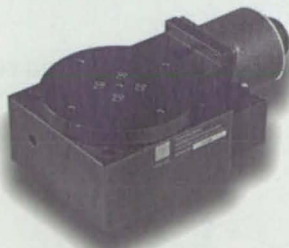

Rotary Tables

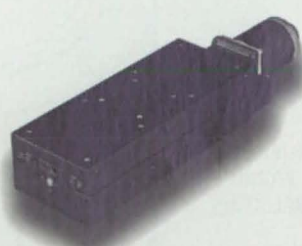

Single Axis Stages

NEAT offers a wide range of motorized stages to meet your most demanding requirements. Intelligent engineering and state-of-the-art manufacturing result in unsurpassed performance. Many options are available including: stepper or servo motors, rotary or linear encoders, special hole patterns, and a wide range of leadscrew pitches. NEAT also designs custom stages for OEM applications -- call us today to discuss your requirements!

Call today! 1-800-227-1066



New England Affiliated Technologies

620 Essex Street, Lawrence, MA 01841

TEL: 508.685.4900 FAX: 508.688.8027 WEB: www.neat.com



Free 160 Page Catalog!

Novel Air Spring Design Uses Fiber-Reinforced Plastic

Finite element analysis helped designers minimize stress on the piston.

Firestone Industrial Products Company, Carmel, Indiana

Firestone has produced a novel design for an air spring whose piston can be made from fiber-reinforced plastic (FRP) to reduce weight and eliminate corrosion. The earliest of these pistons were compression-molded from 50-percent glass-reinforced polyester and were somewhat lighter than aluminum counterparts. Applications were fully supported across the base.

In the late 1980s, injection-molded designs were developed that utilized 33-percent glass-filled nylon, with emphasis on applications that only partially supported the piston base with the spring beam's trailing arm. These pistons were lighter in weight while still maintaining the necessary design criteria.

Currently Firestone engineers have developed designs that are supported only in the center of the piston and that use a portion of it as an air reservoir. This design further complicates the structure, since the load must be transferred through the outside of the


piston to the central support.

The initial design process began by using commercial and proprietary finite element analysis (FEA) programs. The piston's shape was developed (see figure) and a loading scheme was applied to determine high-stress locations. The geometry was altered in the model until stress predictions were at an acceptable level.

The design team produced drawings from the model to release the production injection mold for fabrication. Initial samples from the production tool passed load deflection testing and fatigue testing on a flat-plate center support. Fatigue testing on the



Shown at right is Firestone's FRP piston, with the full air spring assembly at left.

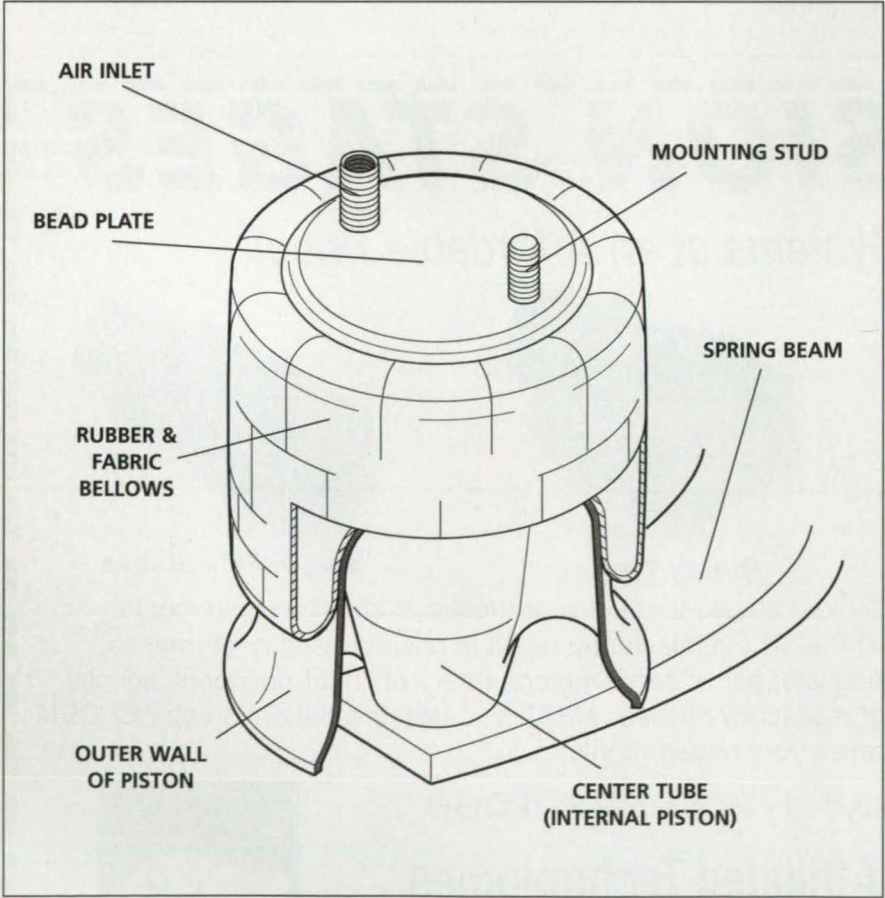

Schematic of Firestone's Reversible-Sleeve Air Spring with Fiber-Reinforced Plastic (FRP) Piston. During travel, the bellows (inflated to a maximum of 100 psi) rolls down and over the outer wall of the piston. In some air spring designs, as shown here, the center tube is the only part of the piston that interfaces with the spring beam. The fiber-reinforced plastic piston has the strength to withstand pressures up to 150 psi in jounce, while providing weight and cost reductions.

customer's spring beam, however, resulted in failure due to small cracks on the internal rib structure of the piston.

Analysis of the spring beam revealed a rough convex surface because of its manufacture as a forging. A footprint analysis was performed on the beam. The team mounted the air spring piston assembly, fully torqued, onto the beam with pressure-sensitive Mylar installed as an interface. The assembly was then pressurized to various loading conditions and the resulting contact areas obtained.

By analyzing the footprint of the piston on the beam, a special contour was developed on the bottom piston surface to maximize contact area and minimize stress. Additionally, with the help of the FEA model, the team revised the internal rib structure to further lower stresses caused by the irregular mounting surface. These low-stress predictions were verified by utilizing strain gauges during both static burst and dynamic fatigue testing. The piston was then released for testing on a truck.

Test track results concluded the design was capable of more than 500,000 kilometers, based on previous test track experience. The resultant piston, when compared to the production aluminum design, provided a weight saving of 3.4 lbs. and a 40-percent reduction in cost.

This work was done by Daniel J. Leonard, technical director of Firestone Industrial Products Co., Carmel, IN, and colleagues. For more information, contact Leonard at 1-800-247-4337; fax (317) 776-5116; E-mail: <http://support@firestoneindustrial.com>

BRU SERIES

All the performance and functionality of the larger drives at 1/4 their size

Optional touchpad MMI is ideal for the factory floor

UL, cUL listed and CE marked



Available in 0.5, 1.0, and 2.0 kW continuous output ratings



Accepts a variety of command sources

- analog input
- step and directional w/electronic gearing
- master encoder following
- preset positions/velocities/torques
- RS-232/485 commands

Same features, performance software and cables throughout the Advantage Line family

Advanced multi-processor design for leading edge velocity loop bandwidth, digital current, velocity and position loops, and advanced low speed control algorithm

BRU Master, Windows™-based software

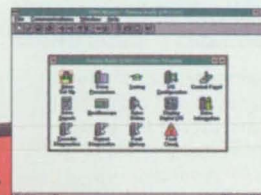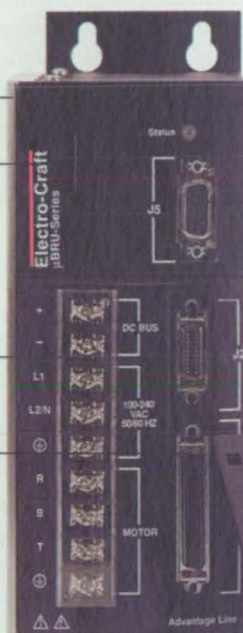

A LOT OF DRIVE IN A COMPACT SIZE.

The BRU-Series Advantage Line universal drive family now includes three new micro drives that extend its power range from 0.5 kW all the way to 15 kW.

The Advantage Line micro-size drives deliver more power and better performance than other micro drives on the market. Moreover, they have virtually the same full-feature functionality of the larger drives in a package that's 25% of their size. And with the Windows™-based BRU Master or the optional TouchPad MMI, setup and operation are a breeze.

Small size and exceptional performance make these new micro drives ideal for servo markets and stepper replacements.

To learn how standardizing on the BRU-Series Advantage Line for all your applications can increase productivity, call 1-800-328-3983. Rockwell Automation. **THE RIGHT COMPANY. THE RIGHT SOLUTION.**

Rockwell Automation

Electro-Craft

Windows™ is a trademark of Microsoft Corporation. Electro-Craft® is a registered trademark and BRU-Series™ is a trademark of Reliance Electric Co. or its subsidiaries

For More Information Write In No. 832



Electro-Craft
SERVO SYSTEMS



More and more machine tool owners, integrators and OEMs are! They've discovered the power and flexibility of our new PMAC-NC for Windows™ program.

On a PC platform with Windows '95™ and NT.

They're switching to PC-based, open architecture solutions.

Transforming merely adequate machines into real performers.

Their machines are cutting better circles. More accurate parts. Much faster.

And that's not the half of it. They're *really* taking control by:

- Selecting the controller, amplifier and motors which work best for their applications.

- Going into fifth axis up to eight axis applications. At huge savings.

- Achieving superior and reliable servo performance.

- Delivering block throughput rates to well over 1,000 per second.

- Increasing performance.

- Reducing costs with our PMAC 2 and digital PWM amplifiers.

Are your CNC machine tools out of control?

Call us.

Discover how easy it is to take control!

DELTA
World Leader In Motion Control
See for yourself at Westec Booth 4108

9036 Winnetka Ave., Northridge, CA 91324
Phone: 818-998-2095 Fax: 818-998-7807
Internet: www.deltatau.com

⊕ Mechanisms for Fine Adjustment of Radio-Frequency Reflectors

Differentially pitched inner and outer threads on bushings would produce small differential displacements.

NASA's Jet Propulsion Laboratory, Pasadena, California

A class of simple mechanisms for fine adjustment of the panels of radio-frequency reflectors is based on the use of two sets of screw threads at slightly different pitches to obtain small differential axial displacements for relatively large rotations. In the original application for which these fine-adjustment mechanisms were devised, reflector panels were adjusted by use of singly threaded adjusters of 20 threads per inch (pitch of 0.05 in. = 1.27 mm). To displace a panel 0.001 in. (0.0254 mm), one would turn one of the older singly-threaded adjusters through an angle of 7.2°. This is too small a turn to control easily by hand, and a slight rotation error could lead to an unacceptably large displacement error; a mechanism with a much larger rotation for the same displacement would make it easier to perform fine adjustments.


A mechanism of the present doubly threaded type provides the desired larger rotation for a given displacement. The figure illustrates a prototype of this type of mechanism installed behind a simple aluminum sheet, which serves as a model of a reflector panel. The edges of the aluminum sheet are bonded to a housing, in which the mechanism is mounted.

The heart of the mechanism is a hollow bushing with an outer thread

pitched at 28 per inch (pitch of about 0.0357 in. = 0.907 mm) and an inner thread pitched at 32 per inch (pitch of 0.03125 in. = 0.79375 mm). The inner thread of the bushing engages a stud connected to the center of the aluminum sheet, while the outer thread of the bushing engages a threaded hole in the housing behind the sheet.

Turning the bushing to pull down (or to push up) on the stud causes the bushing to ride upward (or downward, respectively) in the threaded hole in the housing, so that the net upward or downward movement of the stud and reflector is the difference between these two displacements. The net displacement equals the difference between the two pitches multiplied by the number of turns of the bushing. For example, one full turn of the bushing produces a net displacement of about 0.00446 in. (≈ 0.113 mm). For another example, to obtain a displacement of 0.001 in. (0.0254 mm), one would turn the bushing about 80°; this is ten times the rotation and thus easier to control and less subject to error than is the original single-thread design.


This work was done by Michael P. Moore of Caltech for NASA's Jet Propulsion Laboratory. For further information, write in 32 on the TSP Request Card. NPO-19457

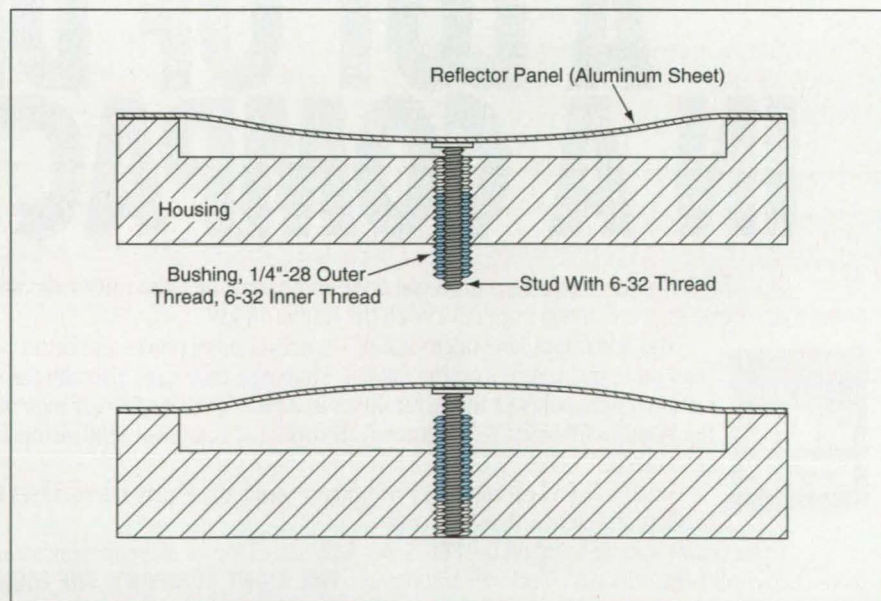


The Deflection of the Reflector Panel in this prototype is adjusted by turning the bushing. A practical reflector structure would include many (48 in the original intended application) such adjustment mechanisms.

Servopneumatics... Fast, Accurate Positioning At a Price You Can Afford

FESTO

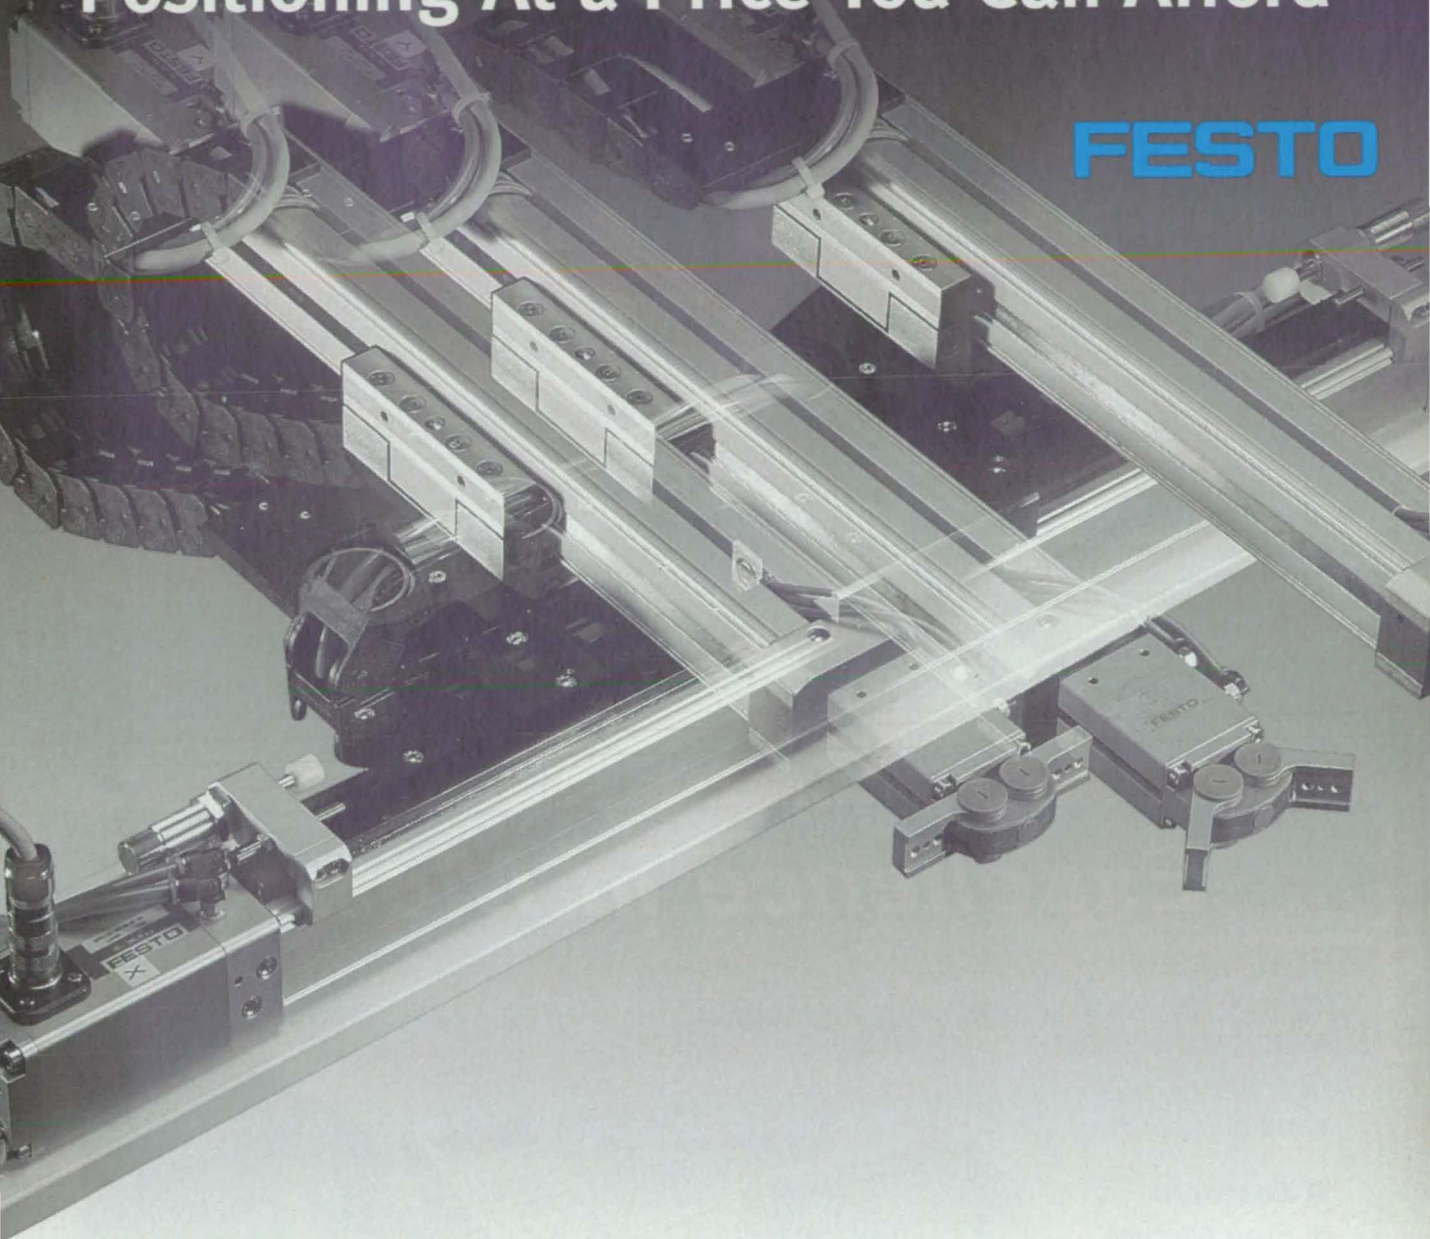

Stop paying "high-precision" prices for intermediate stroke positioning

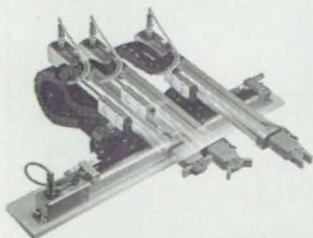

Now you can afford accurate mid-stroke positioning in applications where the cost of traditional, high-precision servomotor and stepper motor positioning is prohibitive.

New Servopneumatics offers a cost-effective, alternative solution for positioning loads faster and farther to achieve positioning accuracy suitable for up to 80% of typical applications. With only four system components, servopneumatics provides

a simple, low-maintenance and easy-to-use solution for long-life operation you can depend on.

Single & Multi-Axis Positioning Capability

- Control of up to 4 axes
- Positioning accuracy to within $\pm 0.1\%$ of stroke
- Repeatability of $\pm 0.04\%$ of stroke
- Speeds of up to 70 in/sec.
- Working strokes to 5.25 ft

- Direct-drive actuators for optimum stiffness and response

Ask for a **FREE** Catalog

Festo Corporation

395 Moreland Road
Hauppauge, NY 11788
Phone: 516-435-0800
Fax: 516-435-8026

Visit our Website:
<http://www.festo-usa.com>

Boston • New York • Baltimore • Charlotte • Tampa • Detroit • Cleveland • Chicago • St. Louis • Dallas • Los Angeles • San Jose • Seattle

© Copyright 1997, Festo Corporation

For More Information Write In No. 834

Fixture Holds Flexible Waveguide Rigidly After Installation

Spherical ferrules can be clamped in somewhat different orientations.


NASA's Jet Propulsion Laboratory, Pasadena, California

A fixture called a "lockout device" rigidly holds the ends of a bellowslike flexible section of a waveguide after installation. The flexible section is needed during installation to accommodate small misalignments of the interfacing end flanges (see figure). After installation, the waveguide is required to be rigid to prevent excessive displacements in the flexible section and, ultimately, fatigue failure; this requirement is satisfied by use of the lockout device, which fixes the positions and orientations of the ends of the flexible section with respect to each other while also accommodating misalignments.

The lockout device includes a split tube with bolted frictional clamps at the ends. The clamps engage flange-like ferrules at the ends of the flexible section of the waveguide. The outermost surfaces of these ferrules are spherical, while the inner contact surfaces of the clamps are cylindrical; thus, each clamp can engage a ferrule at any orientation within the range

provided by the spherical surface. This work was done by David J. Levitt and Wesley P. Schmitgal of Caltech for NASA's Jet

Propulsion Laboratory. For further information, write in 50 on the TSP Request Card. NPO-19617

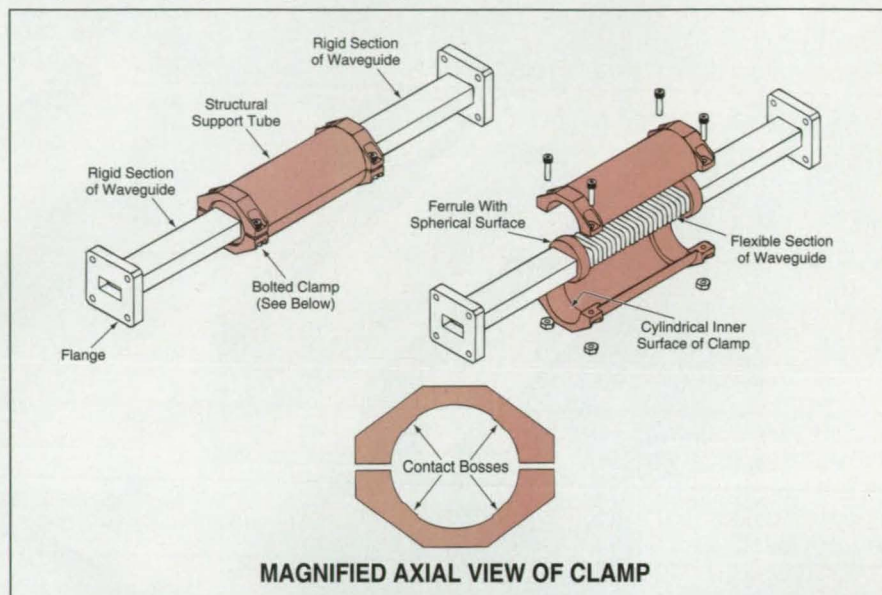

The Ferrules Are Clamped to rigidize the flexible middle section of the waveguide. Contact bosses on the inner cylindrical surfaces of the clamps accommodate manufacturing tolerances.

Excellence in Motion™

As the innovation leader in stepping motor drives and systems, IMS brings you a full range of high performance motion control products:

- Encoders
- Step Motors
- Total Motion Systems
- Power Supplies
- Accessories
- Intelligent Indexer/Drives
- Full, Half, Microstep Drives



IMS™

INTELLIGENT MOTION SYSTEMS, INC.

370 N. Main St., P.O. Box 457, Marlborough, CT 06447
Tel: 860/295-6102 FAX: 860/295-6107

**We Haven't Rendered Other Inverter Duty
Motors Completely Obsolete.**

They'll Still Make Lovely Paperweights.



Great doorstops, too. That's because only Lincoln offers the Ultimate Spike Defense™ (U.S.D.) Insulation System. Our Inverter Duty CTAC® and VTAC™ motors incorporate advanced technology magnet wire, insulation materials, and a solvent-based varnish to deliver unusually high temperature tolerance. But then we go one critical step beyond, combining these performance-focused designs with our unique in-slot manufacturing



process. The result: an industry-high three-year warranty against turn-to-turn, phase-to-phase or phase-to-ground failure, regardless of drive brand, distance between motor and drive, or carrier frequency. And of course, Lincoln motors are made right, right in the U.S.A. So use Lincoln Inverter Duty motors to anchor your operation. And everyone else's to hold down your paperwork. For more information, see the numbers listed below.



Call us at 1-800-416-2266, fax us at 1-888-536-6867, or visit Lincoln on the World Wide Web at these addresses:
<http://www.thomasregister.com/lincolnelectric>, <http://www.lincoln.electric.industry.net>, or <http://www.lincolnelectric.com>

⊕ Dropped Devices Would Penetrate Ground to Regulated Depths

Instruments would be set up at prescribed heights in inaccessible locations.

NASA's Jet Propulsion Laboratory, Pasadena, California

Devices that would penetrate the ground to regulated depths after being dropped from heights are undergoing development. These devices — known as controlled-depth-of-penetration penetrators (CDPPs) — would be used to carry cameras and/or other instruments, which, after impact, would be deployed at predetermined heights above the ground. CDPPs could be dropped from aircraft or balloons, for example, to install instruments in locations not readily accessible by travel along the ground. CDPPs would minimize impact forces so that high-resolution optical components, scanning mechanisms, and other delicate instrument components would not be damaged. CDPPs would function in soils of

various types and over a wide range of impact velocities.


Each CDPP would comprise two sections: a heavy ogive forebody and a relatively light afterbody, which would be a payload container with exterior fins shaped to act as a soil brake (see figure). The forebody would have the shape and mass needed to penetrate the soil to an acceptable depth. The soil brake would be designed to decelerate the payload at a rate small enough to prevent damage to the instrumentation, yet large enough to limit penetration to no more than a prescribed depth. The forebody and afterbody would be connected by a shear pin.

Upon impact, the forebody would

penetrate the soil, carrying the payload with it until the drag of the soil brake exceeded the design strength of the shear pin. The shear pin would then break, releasing the forebody from the payload. The forebody would continue into the ground until its kinetic energy was spent, while the soil brake would cause the afterbody to come to rest at no more than the prescribed depth, with its upper end at approximately the prescribed height above the surface. The instrument(s) would then be deployed.

This work was done by David W. Juergens of Caltech for NASA's Jet Propulsion Laboratory. For further information, write in 18 on the TSP Request Card.

NPO-19846

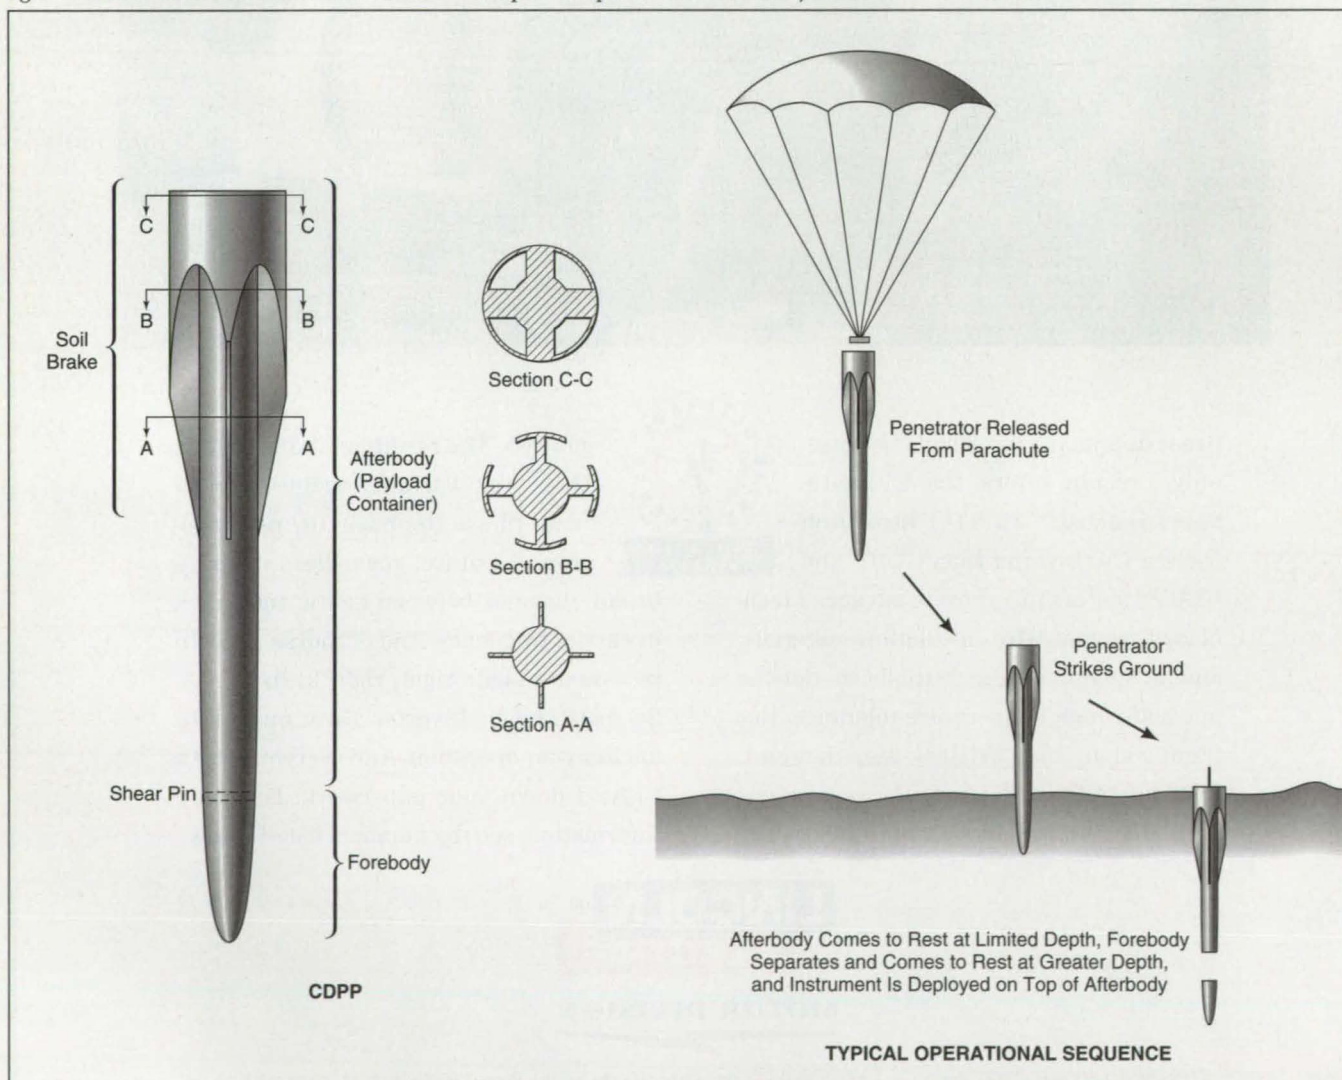

The Forebody and Afterbody would separate after impact, after the relatively heavy forebody had dragged the relatively lightweight afterbody to a prescribed limited depth.

Motion Control Solutions ... when reliability, performance and quality are your primary concerns.



- Gearboxes.
- DC micromotors.
- BLDC motors.
- DC gearmotors.
- Stepper motors.
- Optical encoders.
- Magnetic encoders.
- Controllers, Drivers.
- DC tachometers.
- DC motor generators.

Call or fax us today! Ask for our catalog and let our applications engineers help you find the solution to your motion control needs.



escap® from mind to motion

Portescap U.S., Incorporated

36 Central Avenue, Hauppauge, NY 11788 • Telephone 516-234-3900 • Fax 516-234-3986
e mail: escap@interserv.com • <http://www.portescap.com>

escap® is a registered trademark of Portescap

For More Information Write In No. 837

Active Suppression of Vibrations in Automobile Drive Trains

Vibrations were reduced substantially in experiments.

NASA's Jet Propulsion Laboratory, Pasadena, California

Feedback control systems for suppression of vibrations in automobile drive trains are undergoing development. Like typical active vibration-suppressing systems designed for other purposes, a system of this type would be based on the general concept of measuring vibrations with an accelerometer, processing the accelerometer output via a suitable compensator to generate a command

signal representative of opposing vibrations, and applying an amplified version of the command signal to an electromechanical actuator to generate the opposing vibrations. With proper design of the compensator, actuator, and associated circuitry, the net vibration level could be reduced substantially.

A broadband control system would not perform adequately because it


would not focus its energy at the disturbance frequencies, where it would be most needed. Most of the energy of vibrations in an automobile drive train is concentrated at the first few harmonic and subharmonic frequencies of the rotational speed of the engine. Accordingly, the approach followed in the present development is to design a compensator such that the overall effect of the system is that of a self-tuning bank of notch filters, with notch center frequencies that are adjusted to track the varying engine speed.

In a vibration-suppression system of this type, the basic engine-rotation signal would be provided by a magnetic pickup device, mounted near the flywheel, that senses the passage of the flywheel teeth. The accelerometer would be affixed to a drive-train-mounting cross member. The electromechanical actuator would also be mounted on the cross member near the actuator. The output of the magnetic pickup device would be digitized and fed to a counter for determination of the number of flywheel teeth that have passed at any given instant of time. The output of the accelerometer would be digitized and fed to a digital signal processor (DSP), along with the digital tooth-count signal.

The DSP would use the tooth-count signal to determine the instantaneous engine shaft angle and generate in-phase and quadrature reference signals — synchronized with the engine rotation — for all the harmonic and subharmonic frequencies at which vibrations are to be suppressed. All the reference signals would be generated with little computation, by use of only one lookup table. The DSP would implement the compensator from the reference and acceleration signals by use of a modified version of the Least Mean Squares algorithm. The output of the DSP would be fed through a digital-to-analog converter, then amplified, then applied to the actuator.

The figure schematically illustrates a prototype system in a laboratory setup. The electromechanical actuator used in this setup was of the proof-mass type, with a mass of about 1 kg and the capability to generate forces as large as 40 N at frequencies above 40 Hz. The compensator was implemented in a commercial DSP, which was programmed to suppress vibrations at nine frequencies; namely, the first five harmonics and the


Not since the piranha...

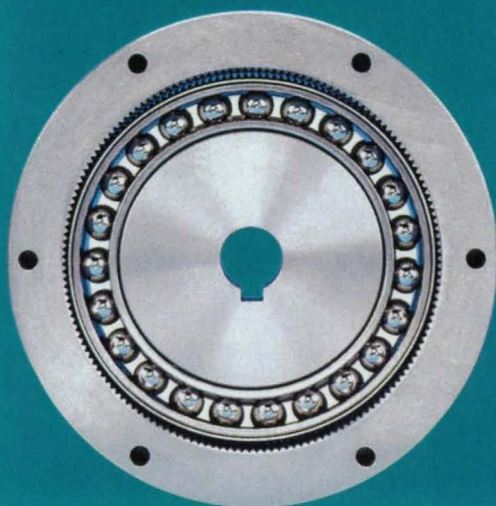

has there been such massive tooth contact area in such a powerful little package.

Harmonic Drive Zero-Backlash Gearing

Teeth mesh across two large arcs in a unique way that produces exceptional torque capacity with minimal wear.

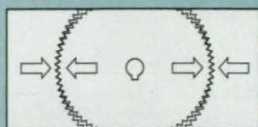


Harmonic Drive speed reducers are proven high-ratio torque multipliers. Lightweight, durable, and efficient, they assure precise motion control in robot joints, print registration, space satellites, semiconductor manufacturing, and factory automation. For more information, contact:



HARMONIC DRIVE
TECHNOLOGIES
247 Lynnfield Street
Peabody, MA 01960
TEL: (508) 532-1800
FAX: (508) 532-9406

© 1993 Harmonic Drive Technologies

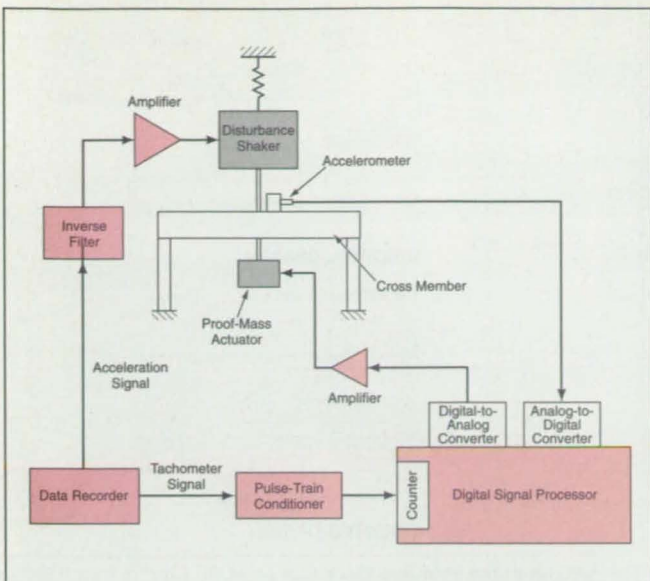

This **Laboratory Setup** was used to demonstrate the present concept for active suppression of vibrations in an automobile drive train. In a real application, the tachometer signal would be a flywheel-tooth-passage signal from a magnetic pickup device, and the shaker would be replaced by an engine and drive train.

four integer-and-a-half harmonics between them. A real engine was not used in this setup: Instead, engine vibrations were synthesized by driving a shaker, via an inverse filter, with a previously recorded vibration signal from a real engine; and flywheel-tooth-passage pulses recorded along with the vibration signal were substituted for the output of a real magnetic pickup device. In experiments on this setup, the vibrations at the nine selected frequencies were attenuated by more than 20 dB when the system was operating.

This work was done by Zahidul H. Rahman and John T. Spanos of Caltech for NASA's Jet Propulsion Laboratory. For further information, write in 64 on the TSP Request Card.
NPO-20026

Self-Cleaning Spool Valve

Controlled leakage for gradual shutdown is combined with self-cleaning.

Marshall Space Flight Center, Alabama

A spool that places the main actuator in the pneumatic shutdown position and is used to control the rate of shutdown has been modified by the incorporation of a self-cleaning curtain orifice. Helium gas applied to the pneumatic end of the spool places the valve in the pneumatic shutdown position. In this position, the opening cylinder of the main actuator is communicated to the hydraulic return system via a timing orifice in the spool valve sleeve. The shutdown rate is regulated by a sized timing orifice of rectangular cross section. Helium gas, which is also applied to the closing piston of the main actuator (the closing piston is in a push-push configuration with the opening piston), provides the necessary closing force to the main actuator. The hydraulic fluid in the opening cylinder is forced through the timing orifice, therefore controlling the closing rate of the main actuator.

The top part of the figure shows the unmodified version of the valve, without the self-cleaning curtain orifice. In this version, debris is trapped by a filter inside the spool. The oil flows only one way through the filter and only during the shutdown sequence; as a result, there is no convenient way to remove accumulated debris

The Smooth Operators.

For optical imaging applications, nothing moves smoother than our line of synchronous and BLDC motors. Hysteresis, reluctance and BLDC designs have constant speeds from 1500 to 30,000 rpm with unmeasurably low speed variation—exclusive of load or voltage.

Advanced capabilities provide a broad selection of options. Call our engineers to get a clear picture of what we can do for you.



EASTERN AIR DEVICES, INC.
1 Progress Drive, Dover, NH USA 03820
Tel: (603) 742-3330 Fax: (603) 742-9080



For More Information Write In No. 839

EXTREME ENVIRONMENT STEPPER MOTORS

phytron



VSS Series

Phytron VSS series of stepper motors are offered in three different categories to cover most extreme environment applications.

VSS-FV

- Vacuum up to 10^{-3} Torr
- Temperature range -40°F to $+250^{\circ}\text{F}$
- Clean Room, Class 10

VSS-HV

- Vacuum up to 10^{-7} Torr
- Temperature range -40°F to $+400^{\circ}\text{F}$
- Clean Room, Class 1

VSS-UHV

- Vacuum up to 10^{-11} Torr
- Temperature range -454°F to $+600^{\circ}\text{F}$
- Radiation hardened to 10^8 Rad
- Clean Room, Class 1

Options: Second shaft, Heat sink, Gear head, Custom design.

Phytron, Inc.
1345 Main Street,
Waltham, MA 02154
1-800-96-Phytron
Fax 617-647-3526
www.phytron.com
e-mail:
info@phytron.com

Motion Control Made Simple

Precise position and speed sensing for the motion control industry.

RM15
MODULAR 1.5 INCH ENCODER

RM21
MODULAR 2.1 INCH ENCODER

RCM15
MODULAR 1.5 INCH COMMUTATION ENCODER

RCM21
MODULAR 2.1 INCH COMMUTATION ENCODER

RCH20
HOLLOW SHAFT 2.0 INCH COMMUTATION ENCODER

RS15, RS21
SELF-CONTAINED 1.5 INCH & 2.1 INCH ENCODER

RCH25
HOLLOW SHAFT 2.5 INCH COMMUTATION ENCODER

Our rotary optical encoders provide state-of-the-art technology in a cost effective easy to install package. Call our toll-free number for your copy of our product guide.



RENCO ENCODERS, INC.

26 Coromar Drive, Goleta, California 93117
Phone: (888) 736-2612 Fax: (805) 685-7965
INTERNET: <http://www.renco.com>

For More Information Write In No. 841

FORGET BALL SCREWS

Remember Kerk Anti-Backlash and general purpose Lead Screw Assemblies for unsurpassed quality.


- PRECISION SCREWS
- PATENTED NUT DESIGNS
- NO PRE-LOADING OR LUBRICATING
- LEAD ACCURACY TO .0001 IN./IN.
- LONG LIFE, SMOOTH OPERATION
- LOW DRAG TORQUE / LOW COST



Motion Products Inc

For more information: tel 603-465-7227 • fax 603-465-3598
1 Kerk Drive, Box 539 • Hollis, NH 03049

For More Information Write In No. 842

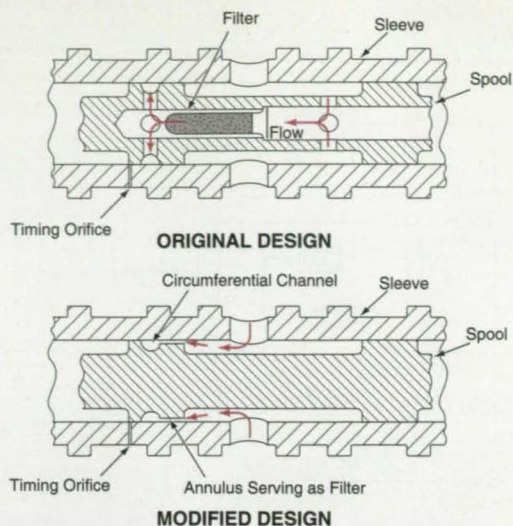

The Annulus in the Modified Valve Acts as an Oil Filter in that it blocks particles too large to travel easily through the timing orifice. The flow of oil through the annulus keeps the annulus clean by sweeping away smaller particles that can travel easily through the timing orifice.

from the filter.

The bottom part of the figure shows the modified version. An annular gap around part of the spool allows some leakage and acts as an oil filter. The radial gap of the annulus is chosen small enough (smaller than the smallest dimension of the timing orifice) to prevent debris from reaching and blocking the timing orifice. The length of the annulus is then chosen so that the rate of leakage through the annulus can be an order of magnitude greater than that through the timing orifice. The annulus is cleaned by the scavenging effect of the normal flow of oil through the valve. The leakage past the annulus is collected by a circumferential channel, which provides for unrestricted flow to the timing orifice.

This work was done by Mario Padilla of Rockwell International Corp. for Marshall Space Flight Center. For further information, write in 73 on the TSP Request Card.

Inquiries concerning rights for the commercial use of this invention should be addressed to the Patent Counsel, Marshall Space Flight Center; (205) 544-0021. Refer to MFS-30042.

Air-Slide Powder Preblender and Gas Seal

One powder is shaped to block a flow of gas into another powder.

Marshall Space Flight Center, Alabama

The figure illustrates an air-slide apparatus that combines precisely controlled flows of aluminum and iron oxide powders. The apparatus is part of a facility that manufactures solid rocket propellant containing these powders plus other ingredients, but the technological significance of the apparatus goes beyond the rocket propellant application. Apparatuses of this type can be used in processes for making such diverse products as foods, fertilizers, and plastics.


The basic task is to combine and preblend two or more weighed quantities of powder in a closed system without degrading their weight accuracies. Care must be taken to ensure that accuracy is not decreased by either allowing gas pressures to alter precision of upstream weighing equipment or altering the weight of powder that is delivered at the end of

the process, by allowing some of it to adhere to interior surfaces of the pipe and process equipment. In designing the apparatus to satisfy these requirements, it was necessary to pay special attention to the unique properties of the aluminum and iron oxide powders:

- To prevent ignition of the highly explosive aluminum powder, it is necessary to maintain an inert (nitrogen) atmosphere in the ducts.
- Iron oxide powder is very adhesive, tending to accumulate on some duct

the gas used in this slide. The upper and lower halves of the slide are separated by a gas-permeable membrane. Compressed nitrogen is introduced below the membrane, and flows up through the membrane, fluidizing the aluminum powder, which is fed in on top of the membrane. Fluidization enables the aluminum to flow down very slight inclines, much like a fluid.

Iron oxide and aluminum powder merge and are preblended inside the air slide. The iron oxide inlet to the air slide

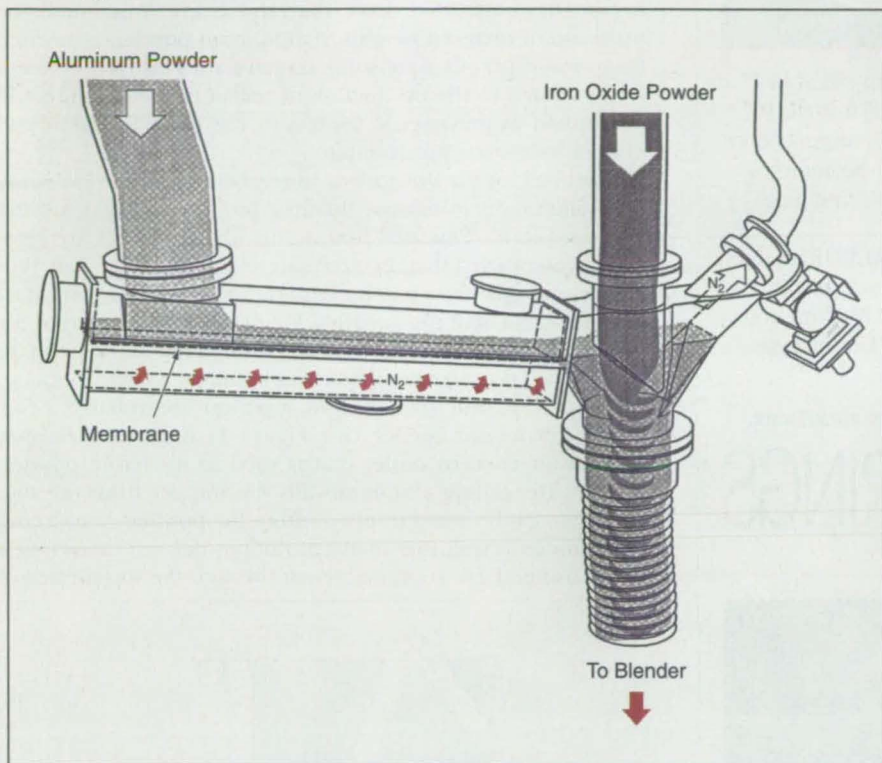

The **Aluminum Powder Flows** around the iron oxide powder, up to a level above the outlet of the vertical iron oxide duct. The aluminum powder thus blocks any flow of nitrogen through the iron oxide powder, and the iron is encapsulated in the aluminum flow.

surfaces. To ensure the integrity of the weight, the accumulation of iron oxide powder on surfaces must be minimized.

- Iron oxide powder comprises submicron-sized particles that could easily be blown away by excessive flows of nitrogen in the ducts, with consequent loss of weight precision.

In the present apparatus, the accumulation of iron oxide powder on surfaces is prevented by making the powder fall through the center of an oversized vertical duct. The air-slide part of the apparatus is used to convey the aluminum powder across a 4-ft (1.2-m) horizontal distance from the outlet of an aluminum-powder feeder to the inlet of the blender, wherein the two powders are mixed. The slide path has a slight downhill tilt from the aluminum-feeder outlet to the blender inlet. "Air slide" is something of a misnomer in that nitrogen is

extends vertically into the aluminum powder discharge. The annulus that forms between the outside diameter of the pipe and the air slide was carefully sized to flood and fill with aluminum powder. Thus, the aluminum powder acts as something of a seal, suppressing pressure fluctuations from the upstream weighing equipment and thus preventing the loss of the smaller iron oxide particles as nitrogen vents from the process. Finally, the adhesive iron oxide becomes encapsulated in aluminum powder, which flushes it through the system.


This work was done by Joel Crook of Thiokol Corp. for Marshall Space Flight Center. For further information, write in 77 on the TSP Request Card.

Inquiries concerning rights for the commercial use of this invention should be addressed to the Patent Counsel, Marshall Space Flight Center; (205) 544-0021. Refer to MFS-31129.

How to Get 200 lbs. of Force & Precise Control with 150 Watts

*Piston Travel is controllable
to 0.0001 inch*

*Limit Switch easily
controls shaft travel*

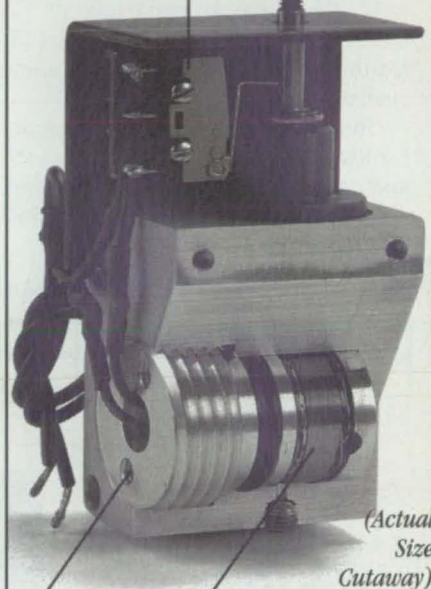

*Heating
Element
provides silent
operation*

*(Actual
Size
Cutaway)
Polymer Core
Matrix provides
0.150 inch of Travel
at 50 lbs. of Force*

TCAMTM

(Thermo-Chemically Activated Motion)

Linear Actuators

TCAM actuators use electrical power to heat and rapidly expand a polymer matrix to produce motion and force. It's precise, reliable, compact, quiet, easily installed and weighs but a few ounces. For more information, ask for this descriptive brochure today.



TCAM Technologies, Inc.
33800 Curtis Blvd., #114
Eastlake, OH 44095
Phone: 800-738-TCAM (8226)
(216) 942-2727
Fax: (216) 942-2730

U.S. Patent Nos. 5,419,133, 5,177,969 and 5,025,627. Other U.S. and International Patents Pending

REALI-SLIM bearings save weight and space

Kaydon REALI-SLIM® thin-section bearings are the industry standard for compact, weight-saving power transmission designs. They're excellent for aircraft, radar, machine tools, mobile equipment, instruments, automation and robotics, material handling, medical, and other precision applications. Available from stock in 1" to 40" bore sizes, and 8 different cross sections from 3/16" to 1". Choose from radial contact (Type C), angular contact (Type A) and four-point contact (Type X) geometries. Double-sealed, special coatings and customizing also available.



Request a free 64-page catalog and REAL-DESIGN™ I software to help you specify thin-section bearings quickly and accurately. Kaydon Corporation, 2860 McCracken Ave., Muskegon MI 49443. 616-755-3741. For fastest response Fax: 616-759-4102.

Circle 844 for catalog 300.

Circle 853 for design aid software.

KAYDON BEARINGS

Amazing Hubble Image Now A Full-Color Poster!

One of the Hubble Space Telescope's most incredible discoveries — the birth of stars 7000 light years from Earth — is now captured in a gorgeous limited-edition wall poster.

Only \$7.95 each.

Rush me ___ Hubble poster(s)
at \$7.95 each plus \$5.00 for
shipping (in tube). NY residents add sales tax to total.

Total \$ _____

Name _____

Comp _____

Address _____

City/St/Zip _____

Phone No. _____

☐ Check enclosed (payable to Associated Business Publications)

Charge my: ☐ VISA ☐ Mastercard ☐ AmEx

Card No./Expiration: _____

Signature: _____

Mail to: Assoc. Business Publications, Dept. F, 317
Madison Ave., NY, NY 10017. Or fax to: (212) 986-7864.



actual size: 14" x 18-3/4"

Discharge Valve for Gravimetric Feeder

This valve prevents leakage of fluidized powder during filling of a hopper.

Marshall Space Flight Center, Alabama

A computer-controlled, pneumatically actuated valve blocks incidental discharge of aluminum powder from the outlet of a gravimetric feeder during batch refills. The feeder is part of a facility that manufactures solid rocket propellant. By preventing small, unintended flows, the valve helps to maintain the precision of metered weights of aluminum powder, as needed for mixing with other constituent materials. This valve concept is not limited to the production of rocket propellant; it could be applied to gravimetric feeders in the food, fertilizer, and plastics industries, for example.

The need for the valve arises largely because of the propensity of aluminum to assume fluidlike properties, when moving (fluidized flow). Fluidized flow occurs when particles are separated from each other by cushions of gas. Contact bed flow occurs when particles touch each other and gas is present only in the interstices of the particles. Fluidized flow is preferred for moving powder, within a process, from point A to point B. Contact bed flow is preferable for metering the powder because, in comparison with fluidized flow, it is more controllable.

The gravimetric feeder (see Figure 1) includes a hopper with an auger at its outlet that is used to discharge powder. Initially, free-falling aluminum fills the hopper from the top, and some gas becomes trapped within the powder. After a couple minutes at rest, the weight of the powder will cause much of the trapped gas to permeate out through the top surface of

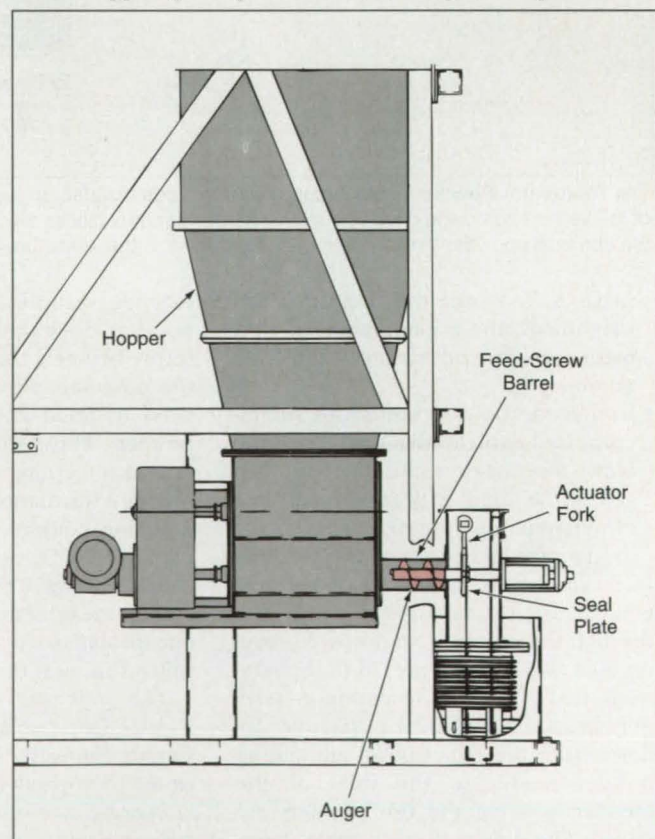


Figure 1. Leakage Occurs as fluidized aluminum flows around the auger helix and through the clearance between the auger (feed screw) and the auger barrel, when the auger is not turning. The valve blocks this leakage during times when powder feed is not desired.

the powder. As aluminum is dropped into the hopper, during refills, the fluidized powder spreads outward as it hits the hopper bottom, rather than forming a pile. Under these conditions, some of the powder spirals through the auger helix and drops into the discharge. Powder following this path is unaccounted for in the batch weight; this is the unintended flow that the valve is designed to block.

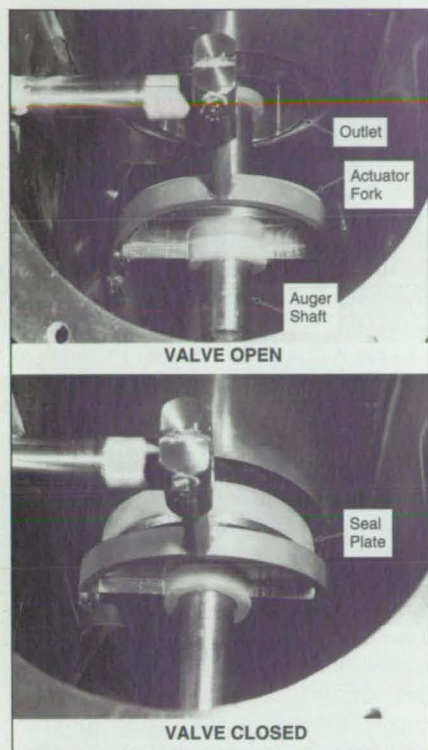


Figure 2. The Actuator Fork Pushes the Seal Plate along the auger shaft between "open" and "closed" positions. The auger shaft runs through the center of the seal plate when the valve is open. The seal occurs around the shaft and also around the auger barrel. The shaft to which the actuator fork is connected is driven by an external pneumatic actuator.

The auger discharge is blocked within a seal plate that slides along the auger shaft. The seal plate is an elastomer covered disk. During hopper refills, the seal plate is pushed against the outlet of the auger barrel ("closed" position), blocking unintended flow of aluminum powder. The seal plate is moved along the shaft, between the "open" and "closed" positions, by an actuator fork (as shown in more detail in Figure 2), which is connected to an external pneumatic actuator. Under computer control, the actuator closes the valve immediately before the hopper is filled, and opens it immediately before the auger is started to feed powder.

This work was done by Joel Crook of Thiokol Corp. for Marshall Space Flight Center. For further information, write in 82 on the TSP Request Card.
MFS-31120

Preventing Fouling of Feeder Mechanisms by Aluminum Powder

Several features prevent powder degradation around rotational components of process equipment.

Marshall Space Flight Center, Alabama

The design of the gravimetric aluminum-powder feeder mentioned in the preceding article incorporates several features to prevent fouling by aluminum powder, an essential ingredient in many solid rocket motors. The particular fouling problem arises because aluminum

powder is so soft and fine that it infiltrates small internal openings within the feeder and forms hard foil pieces under very low pressures. Around rotating or sliding parts, such foil pieces accumulate rapidly, so that clearances close and the affected parts seize. The antifouling fea-

*What's The
New Name for
Motion Control
Technology?*

API Motion

The company known for innovative motion control products and solutions has a new name - API Motion.

And together, the companies that form the new API Motion are the best solution for your automation application.

- **API Controls:** Servo and Step Drives and Motion Control Systems
- **API Deltran:** Electromagnetic Brake & Clutch Solutions
- **API Gettys:** Step and Servo Motors
- **API Harowe:** Encoders, Resolvers and BLDC Motors

Call the new name in motion:

1-800-566-5274


Fax: 716-691-9181


<http://www.industry.net/api>



API Motion

AMERICAN PRECISION INDUSTRIES INC.

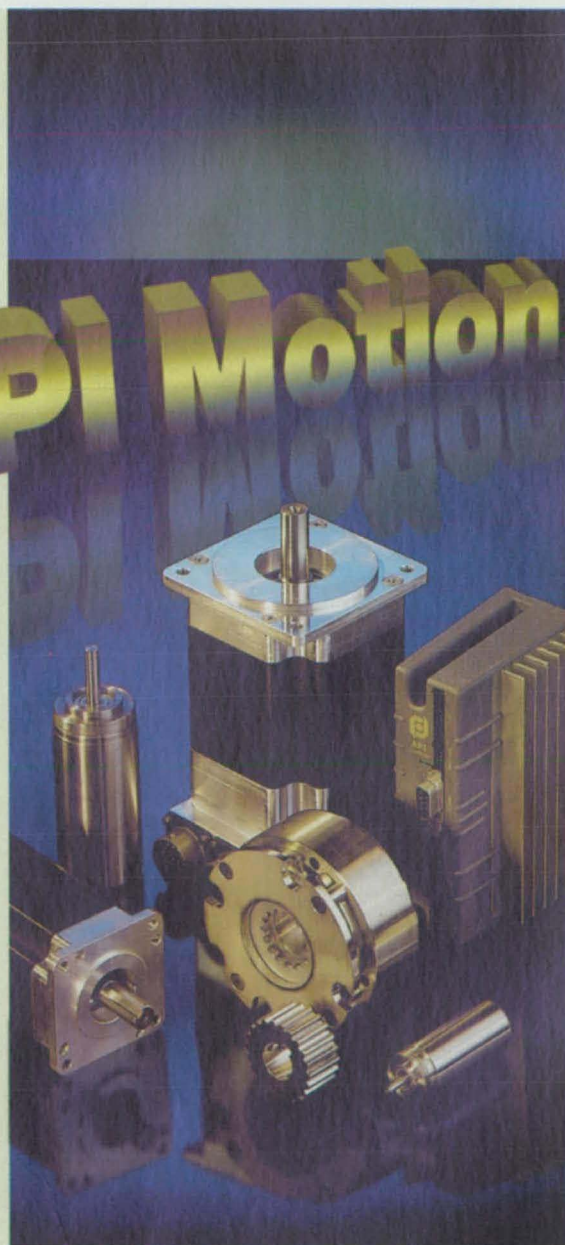

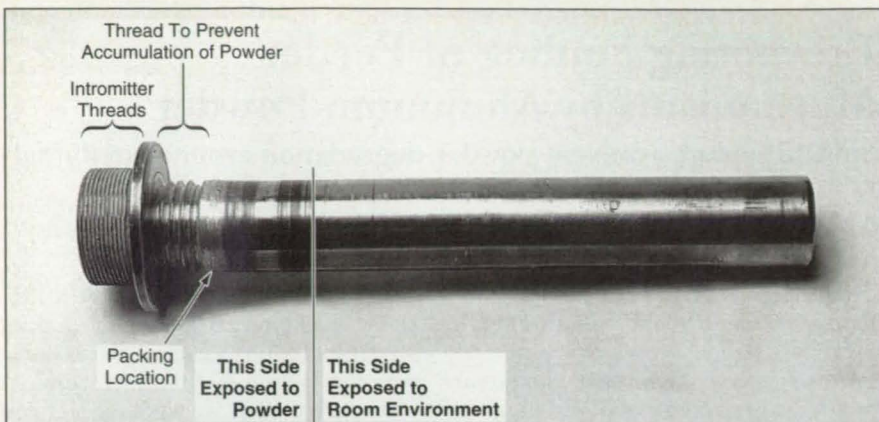

The **Deep Thread** just to the right of the flange acts as an auger to prevent the accumulation of powder inside the hopper near the packing seal.

tures prevent the formation of foil by creating a gas pocket around regions where clearances between moving and stationary parts are very small. Similar features might also be useful in gravimetric feeders like those used in the food and chemical industries, where fouling could cause contamination, frictional heating (leading to fire hazards), and possibly other adverse effects, depending on the material(s) being fed.

In the gravimetric feeder, aluminum powder will typically foul where rotating auger and intromitter shafts penetrate the wall of an aluminum-powder-filled hopper. At the wall penetration of each shaft, the interior of the hopper is sealed with graphite packing, a brass lantern ring, and a packing gland, to prevent leakage of aluminum powder. Because of the explosive nature of aluminum powder, an oxygen-free gas (nitrogen) at a pressure of 2 psig (gauge pressure of 14 kPa) is piped directly over the lantern ring. This pressurizes the packing with respect to the environment in the hopper, thereby preventing the flow of aluminum powder into the packing.

Additional antifouling features help to prevent the accumulation of aluminum powder around each shaft near the wall penetration. In the case of the intromitter shaft, one of these features is a deep thread, which is cut into the end of the shaft near the wall penetration (see figure). This thread acts as an auger, moving accumulated powder away from the wall penetration. Another antifouling feature is a chamfer around the inside edge of each shaft hole in the hopper wall. The chamfers eliminate what were previously blind holes that trapped powder. A third antifouling feature is a radiused shield that is welded in place on the wall of the hopper just above each shaft. The design of the shield is based on the bulk properties of aluminum powder. A horizontal projection into any vertically flowing powder will create a powder-free area underneath it. The size of this area depends on the physical properties of the material and the geometry of the shield. These antifouling features allow for the shafts to turn inside the powder-filled hopper with little or no powder present in the tight clearances between the shafts and the stationary parts.

This work was done by Joel Crook and Charles D. Fuller of Thiokol Corp. for Marshall Space Flight Center. For further information, write in 42 on the TSP Request Card.

Inquiries concerning rights for the commercial use of this invention should be addressed to the Patent Counsel, Marshall Space Flight Center; (205) 544-0021. Refer to MFS-31128.

When Precision & Power are needed, the UPK series of step motor & driver packages with precision gearheads provide the ultimate performance.

Precision – The 5-phase motors coupled with low backlash gearheads provide high resolution for exact positioning and smooth, quiet performance.

Power – The PK high torque step motors coupled with precision gearheads provide the ultimate in running torque.

Easy to Use – The driver is powered by 115 VAC. The motor and gearhead come assembled and factory matched to a driver to ensure optimal performance and easy installation.

Quality – Motor, driver and gearhead are all produced by one manufacturer to ensure quality products and reliable support.



PRECISION



ORIENTAL MOTOR U.S.A. CORP.

2580 West 237th Street, Torrance, CA 90505

1-800-816-6867

Inlet Gas Distributor for Pneumatic Powder-Conveying Vessel

**Powder in the vessel is
fluidized to prevent
"ratholing."**

*Marshall Space Flight Center,
Alabama*

An inlet gas distributor has been devised to ensure that the entire volume of aluminum powder is conveyed out of a pneumatic conveying vessel during each conveying cycle, thereby increasing the time-averaged conveying rate. The vessel and the rest of the pneumatic conveying system are part of a facility that manufactures solid rocket propellant containing aluminum powder plus other ingredients. Similar inlet gas distributors might also be useful for increasing conveying rates in some of the numerous other industrial processes that utilize pneumatic conveying of materials.

The pneumatic conveying vessel is a hopperlike pressure vessel with a discharge valve connected to a discharge pipe at the bottom (see figure). Each batch of powder is conveyed in the following way: First, the vessel is filled with powder. Next, the powder-inlet valve is closed and the interior of the vessel is pressurized with nitrogen. Once the pressure has risen to a predetermined level, the discharge valve is opened, allowing the pressurized nitrogen to push the powder out through the discharge pipe. During this discharge, pressurized nitrogen continues to flow into the vessel. When the discharge is complete, pressurized nitrogen is supplied for a little while longer to blow the discharge pipe clear.

A phenomenon called "ratholing" occurs during the discharge as a result of the tendency of aluminum powder to settle and consolidate into a weak mass, with just enough strength to hold its shape against gravity. When the discharge valve is opened, only the powder immediately above it is discharged, leaving a thick layer of powder around the periphery of the vessel and a vertical hole (the "rathole") in the middle. Thus, a significant portion of the original powder filling remains in the vessel after discharge. This decreases the effective volume of the vessel, and the time-averaged conveying rate is reduced correspondingly. This prob-

HSI: The Mini Motor Experts

Actual size:
Linear & Rotary Steppers

Dynamic Ideas Set In Motion

Linear & Rotary Motor Series

From .5" to 1.8" diameter - HSI has the thrust and torque ratios you want, in a variety of...

- captive or non-captive shafts
- linear, rotary, oscillating, pancake designs & XY Tables

On-site, rapid turn-around response teams

Prototypes? Call us now. HSI's average turn-around time is 48 hours for most requests, thanks to our dynamic, on-site design/engineering/assembly teams ready to service you quickly.

Quality products made in the U.S.A.

Call 800-243-2715 (In CT call 203-756-7441)

FAX 203-756-8724

WEB: <http://www.hsi-inc.com>



**Haydon Switch &
Instrument, Inc.**
1500 Meriden Rd.
Waterbury, CT 06705

For More Information Write In No. 847

"The best kept secret in motion"...

for over 30 years ...

Designing, Developing and Manufacturing ...

- DC Servo Amplifiers
- Brushless Servo Amplifiers
- DC Servo Motors
- Brushless Servo Motors

Offering:

- Small, cost-effective design
- High-performance quality and reliability
- One of the World's broadest range of products
- Fast delivery
- World-class customer service



GK GLENTek
MOTION CONTROL SOLUTIONS

208 Standard Street
El Segundo, CA 90245 USA
(310) 322-3026 (310) 322-7709 Fax
www.glentek.com

Avoid "The Pump"



DIN 43 650
hydraulic
connector

To avoid "pump effect" problems associated with conventional transducers, Novotechnik's TLH series of position transducers feature a rodless, side-actuated design which provides stroke lengths of 100-4000mm. The series combines high speed operation of up to 10m/sec with repeatability of 0.01mm and very long life of over 100×10^6 operations.

TLH transducers are precision made, with linearity to within 0.02%, a ball coupling design that eliminates side load errors, and a patented, damped wiper which ignores vibration from 5 to 2,000Hz.

Built to work reliably under extreme environmental conditions, the TLH series has a very low temperature drift, operating temperature range of -30 to +100°C, and a 4th terminal shielding connection provides immunity to EMI*. Call or fax for technical information to:

novotechnik


Siedle Group

Novotechnik U.S., Inc.
237 Cedar Hill Street • Marlborough, MA 01752
Telephone: 508-485-2244 • Fax: 508-485-2430

Visit our Web site at <http://www.novotechnik.com>

*EMI - electromagnetic interference

For More Information Write In No. 849

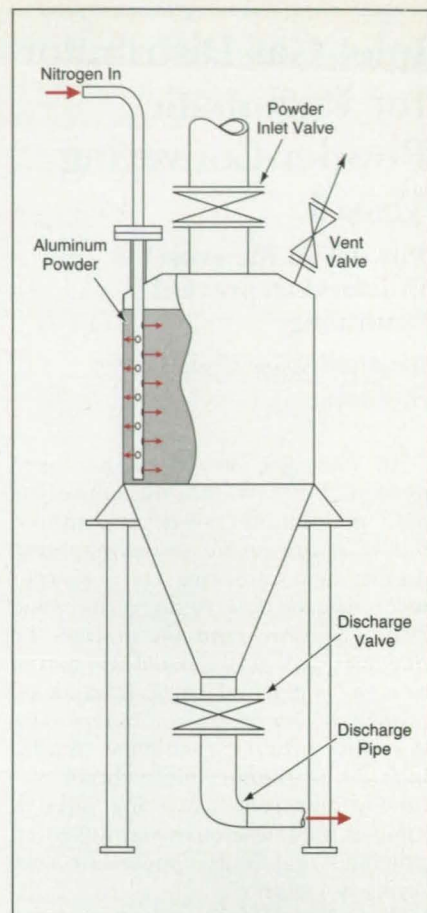

The Pneumatic Conveying Vessel is modified from its original design by substitution of the inlet gas distributor for a nozzle.

lem is further exacerbated when pressure is applied above the powder, just prior to opening the discharge valve. The resultant force from this pressure causes further powder consolidation, which increases the strength of the rathole.

The inlet gas distributor is a capped, perforated pipe that extends along the vertical wall of the vessel. Pressurized nitrogen is fed into the vessel through this distributor. The purpose of the inlet gas distributor is twofold: First, nitrogen pressure is no longer applied directly above the powder. The gas distributor pressurizes the vessel from within the powder mass. This eliminates the differential pressure that can consolidate the material. Second, nitrogen flowing from the distributor fluidizes some of the powder in the vessel along a line that extends vertically through the consolidated ring of powder. The fluidized powder falls out, thereby destabilizing the remaining powder mass enough to make it fall into the discharge pipe.

This work was done by Joel Crook of Thiokol Corp. for Marshall Space Flight Center. For further information, write in 78 on the TSP Request Card.
MFS-31121

LINTECH

POSITIONING SYSTEMS

GIVE TOTAL F-L-E-X-I-B-I-L-I-T-Y

- Lintech positioning tables offer precision performance and design flexibility.
- All standard tables are available in manual and motorized models.
- Standard accessories are available to customize your positioning table for your specific needs.
- 2 different series of rotary tables are available.
- Custom Positioning Systems are also available.



IDEAL FOR:

- Pick & Place
- General Automation
- Inspection Stations
- Test Stands
- Laser Positioning
- Part Insertion
- Part Scanning & many more!

*Lintech Automation Specialists are located throughout the U.S. and Canada. For more information call, write or fax for a **FREE!** complete catalog of all Lintech products.*

LINTECH®

1845 Enterprise Way
Monrovia, California 91016
Telephone (818) 358-0110
Toll Free . . (800) 435-7494
Fax (818) 303-2035

SINGLE OR MULTIPLE AXIS TABLES

Lintech's positioning tables offer precision performance and design flexibility for use in a wide variety of Motion Control applications.

OTHER LINTECH PRODUCTS...

- SINGLE SHAFT ASSEMBLIES
- TWIN RAIL® SHAFT ASSEMBLIES
- TWIN RAIL® CARRIAGE ASSEMBLIES

For More Information Write In No. 850

Biomedicine

Manufacturing

Materials

Sensors

Optics

Energy

Communications

Computers

Electronics

Environment

PLAN NOW TO ATTEND
America's Premier Showcase
Of New Technologies



The Engineering Innovation Show

September 22-24, 1997


Hynes Convention Center

Boston, Massachusetts

- * *Discover Hundreds Of New Product Ideas*
- * *Find Partnering & Licensing Opportunities*
- * *Meet Key Players In Government Labs & Industry*
- * *Explore 80,000 Sq. Feet Of Free Exhibits*

Sponsored by:



 **TECH BRIEFS**

TECHNOLOGY
UTILIZATION FOUNDATION

Held concurrently with SPIE's Photonics East & Electronic Imaging Intl. conferences

For More Information:

Phone: 212-490-3999 • Fax: 212-986-7864 • On-line: www.abptuf.org/T2007

⚙️ Liners for Inlet Bellows of Gravimetric Feeders


Liners increase weightment accuracy by preventing powder accumulation.

Marshall Space Flight Center, Alabama

Flexible liners have been incorporated into the inlet bellows of gravimetric feeders that are used to meter precise amounts of powders for making solid rocket propellants. The bellows provide freedom of movement between the scale portion of the feeder and the rigid pipe connections at the feeder inlet/outlet. The liners prevent accumulation of powder in the convolutions of the bellows. Before the liners were developed, powders tended to accumulate in the bellows convolutions, causing their stiffness to change. These variations in bellows stiffness degraded metering accuracies.

Each liner is made from a sheet of 5-mil (0.13-mm) thick polyurethane that is cut in a pattern, rolled up, and stitched to form a long, flexible cone that resembles a wind sock (see figure). A neoprene gasket is sewn in place around the hole at the wide end. To install the liner, the gasket is bolted between flanges at the top of the inlet bellows. The liner hangs down from these flanges, extending below the lower end of the bellows and into a hopper that is part of the feeder.

The conical taper prevents the liner from dragging on the inner surface of the bellows and thereby affecting the weight measurement of the feeder. The polyurethane liner material is so slick that even relatively sticky powders like iron oxide do not adhere to it. In operation, the hopper is filled by dropping powder in through the inlet pipe and liner. After the refill is complete, an automatic valve opens, causing compressed nitrogen to flow through four nozzles that penetrate the wall of the inlet pipe, directly

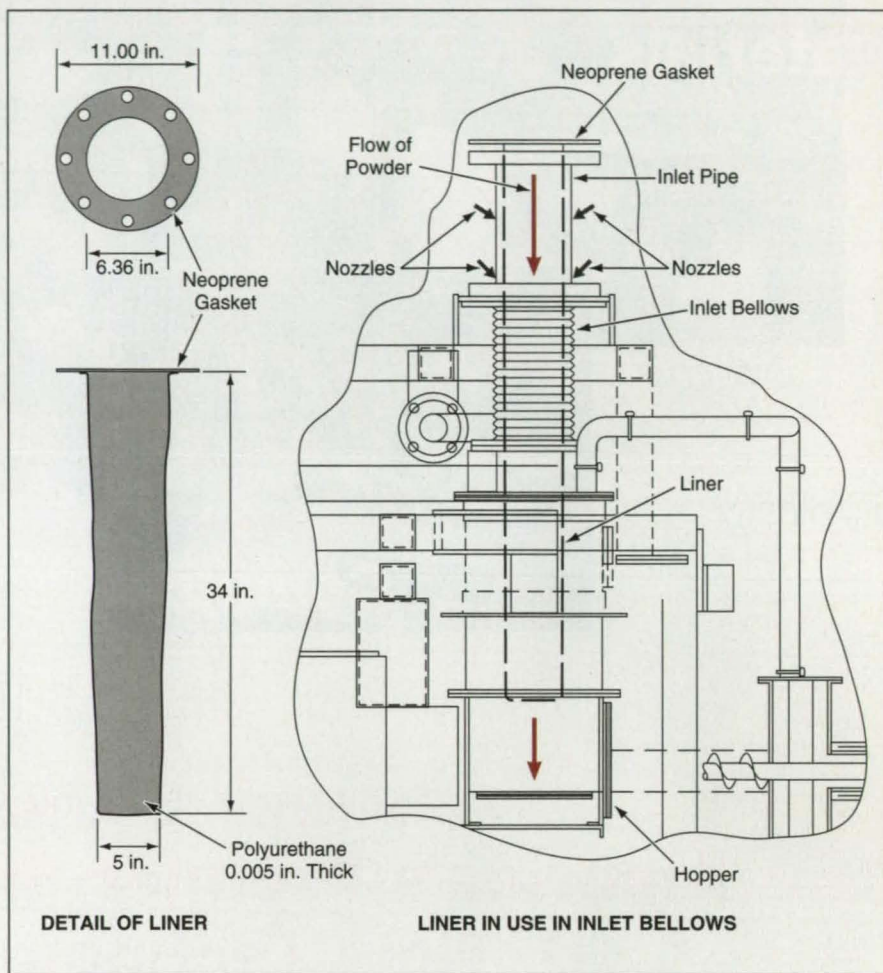

The Liner Is Basically a Flexible, Tapered Pipe that keeps falling powder away from the convolutions of the bellows.

beneath the neoprene gasket of the sock. The nozzles sweep the inlet pipe, while vigorously shaking the bellows sock, to remove fugitive dust and powder agglomerations that may be trapped within wrinkles in the sock. Powder that is shaken loose during

the compressed-nitrogen sweep falls into the hopper, as desired.

This work was done by Joel Crook of Thiokol Corp. for Marshall Space Flight Center. For further information, write in 39 on the TSP Request Card. MFS-31122

⚙️ Deflectors for Outlet Bellows of Gravimetric Feeders

These deflectors serve the same purpose as that of inlet-bellows liners.

Marshall Space Flight Center, Alabama

Deflectors have been placed inside the outlet bellows of bulk-powder gravimetric feeders that are used to meter precise weights of powders. Like the inlet-bellows liners described in the preceding article, the outlet-bellows deflectors are used to prevent accumulation of powders in the con-

volutions of the bellows in order to keep the bellows flexible, as necessary for precise metering of powders by weight.

When powder is discharged from the feed auger, it has a small but significant horizontal velocity. This velocity causes the powder to strike the bel-

lows at some point below and opposite the outlet. The outlet-bellows deflector is a half-cylindrical aluminum shield supported by a flange above the feeder outlet. It hangs down past the outlet and through the bellows to a point somewhat below the lower end of the bellows (see figure). The con-



⊕ Discharge Knife for a Gravimetric Feeder

Discharge weight can be controlled more precisely.

Marshall Space Flight Center, Alabama

The outlet of a gravimetric powder feeder is equipped with a discharge knife that shaves and cuts the material as it is discharged off the end of its auger (see figure). As explained below, the shaving action is needed to increase the accuracy with which the discharged material is weighed out. In this case, the discharged material is iron oxide powder, and the gravimet-

ric feeder is part of a facility that weighs out precise amounts of iron oxide powder that are mixed with other ingredients in making solid rocket propellants. The basic principle of the discharge knife can also be utilized to improve the accuracies of gravimetric feeders that weigh out other materials in the food and chemical industries.

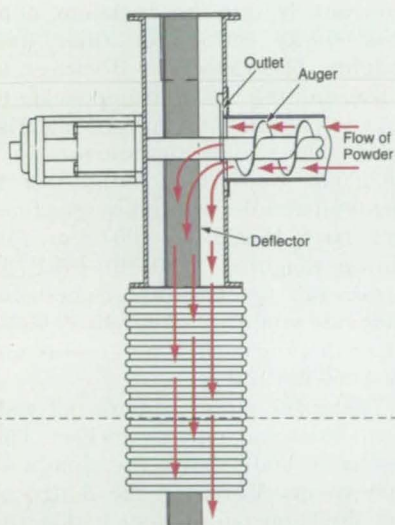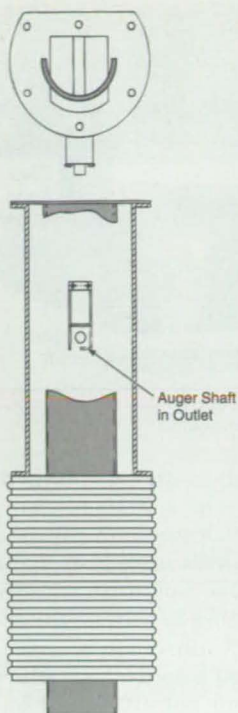


The Deflector Intercepts Powder extruded out by the auger, preventing the powder from striking and getting stuck in the convolutions of the bellows on the opposite side.

cave side of the deflector faces the outlet. As powder contacts the outlet-bellows liner, its horizontal velocity goes to zero, and the powder drops vertically through the center of an oversized pipe. Conductive Teflon (or equivalent) is bonded to the surface of the liner to prevent powder adherence and buildup of electrostatic energy.

This work was done by Joel Crook of Thiokol Corp. for Marshall Space Flight Center. For further information, write in 71 on the TSP Request Card. MFS-31124

POWER TOOLS.

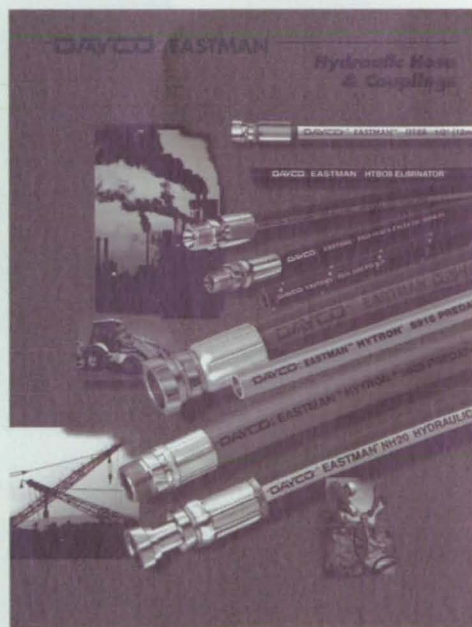

POWER AND FLUID MANAGEMENT SYSTEMS FROM DAYCO/EASTMAN.

Dayco Products and Imperial Eastman combined to bring you one of the most comprehensive lines of hydraulic hose, couplings and accessories available today.

The result; the newly-consolidated Dayco/Eastman Catalog. Included are more than



300 pages of Power and Fluid Management systems, accessories and crimping equipment in an easy-to-use, indexed format.

To order your copy, or for the name of your nearest Dayco/Eastman Power and Fluid Management Systems

distributor, contact:

Dayco Products, Inc.
1 Prestige Place
P.O. Box 1004
Dayton, OH 45401-1004
Phone: (800) 283-2926
Fax: (800) 688-4854
<http://www.dayco.com>

DAYCO

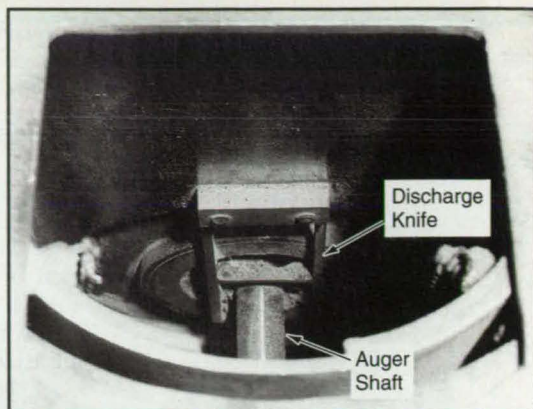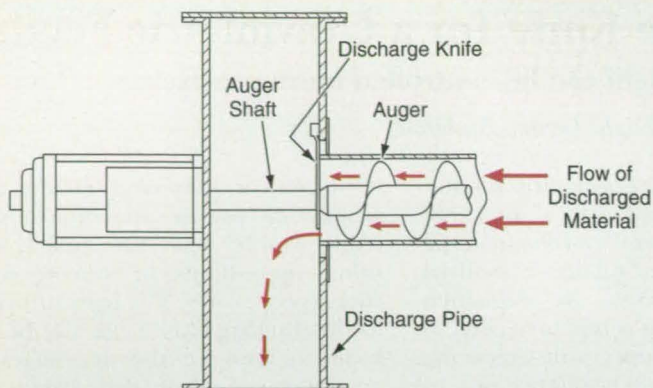

The Discharge Knife Shaves Material drawn out by the auger, making the material fall off the auger in smaller clumps.

Legendary Performance Even Under The Toughest Conditions.



Kollmorgen motion control products

are famous for performing under the toughest conditions. Our motors, drives and actuators are critical to a variety of military and commercial aerospace programs like Rafale, Airbus A300, 310, 320, 330 and 340, Boeing 747, 757, 767 and 777, and McDonnell Douglas MD11. For seat actuation, power drive units, hydraulic pumps and compressors, auxiliary controls, fuel distribution and even windshield wipers. Capable of withstanding incredible shock and vibration, bone-chilling to sun-baked conditions, torrential winds, rain and snow.

And, just about anything in between.

KOLLMORGEN
Motion Technologies Group

1-800-77 SERVO

Fax: 540-731-0847

Internet: <http://www.kollmorgen.com>

Call on Kollmorgen.
Your Motion Technology
Experts. Because you
have to be ready for
what lies ahead.

Ideally, the discharged material would not adhere to the auger and would fall smoothly off the auger into the process stream, so that the rate of discharge would be uniform and well controlled by varying the speed of the auger. Unfortunately, iron oxide powder is so cohesive and adhesive that it does not fall off smoothly; instead, it tends to adhere to the auger and itself to form clumps that grow and extend horizontally, into the discharge, until they break off under their own weights. This causes the discharge to pulse, and this makes it impossible to precisely weigh a discharged material batch. For example, suppose that the a 20.000-lb (9,071.8-g) batch size is required and the amount weighed out thus far is 19.990 lb (9,067.3 g). If a clump weighing 0.070 lb (31.8 g) breaks off, the amount weighed out suddenly jumps to 20.060 lb (9,099.1 g), so that the batch is now overweight by 0.060 lb (27.2 g).

The auger pushes clumps out with small axial and radial velocities. The discharge knife shaves the clumps as they rotate. Moreover, the design of the discharge knife is such that the portion of discharged material that is not shaved is cut into five roughly equal parts. Thus, the net effect of the discharge knife is to make the discharged material fall off in smaller clumps. This makes it possible to approach the required weight of delivered material in smaller increments, stopping the discharge within a smaller undershoot or overshoot of the required discharge weight.

This work was done by Joel Crook of Thiokol Corp. for Marshall Space Flight Center. For further information, write in 84 on the TSP Request Card.

Inquiries concerning rights for the commercial or noncommercial use of this invention should be addressed to the Patent Counsel, Marshall Space Flight Center; (205) 544-0021. Refer to MFS-31123.



Double-Difference Precoding and Postdecoding

This method improves data-compression performance for multiple and time-shifted sets of data.

Goddard Space Flight Center, Greenbelt, Maryland

A method of increasing the efficiency of data-compression coding involves precoding and postdecoding via double-difference computations. The method is particularly suitable for data from multiple and/or time-shifted sources; for example, image data from the same scene observed in different spectral bands and/or observed at different times.

The precoding and postdecoding amount to additional stages of compression and decompression, respectively. Like other data-compression schemes, this one reduces the volume of data to be transmitted by removing some of the correlated and redundant components of successive original data, so that successive transmitted data samples contain a higher proportion of uncorrelated and nonredundant data. Also as in other schemes, the redundant

and correlated components are reconstructed, during decoding, from information contained in both current and previously transmitted coded data samples.

Of the various types of double-differ-

ence schemes that could be used, the one preferred in the present method is called "cross-adjacent" and is illustrated schematically in Figure 1. This scheme applies to two original sets of data; $\{a_i\} = (a_1, a_2, a_3, \dots)$

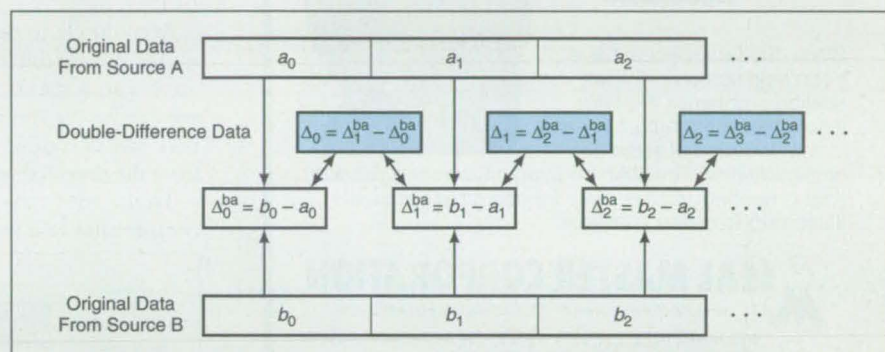


Figure 1. Cross-Adjacent Double Differences $\{\Delta_i\}$ are computed from sequences of corresponding original data $\{a_i\}$ and $\{b_i\}$.

APPLIANCE MANUFACTURER CONFERENCE & EXPO



SPARKING INNOVATION



- 200+ Supplier Exhibits
- 24 Original Technical Presentations
- Keynote Speaker: Robin Edman, Vice President Industrial Design, Frigidaire Co.
- Ancillary Association Events
- AM's Excellence in Design Awards Luncheon

SEPTEMBER 15-17, 1997
OPRYLAND HOTEL
NASHVILLE, TN


For Exhibit information contact:
Linda Moffat • 847/297-3571
FAX: 847/297-3618

For Conference information contact:
Kathleen Sommers • 419/663-7071
FAX: 419/668-9589

Sponsored by: *Appliance Manufacturer* magazine

The Spaulding Solution Begins Now...

With
an
Idea
and a
Goal

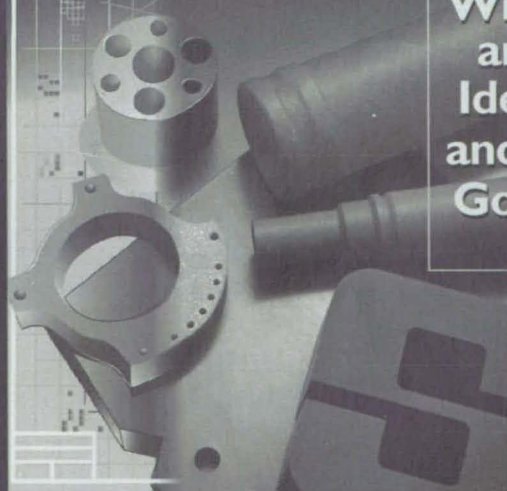

Call us today! We will provide you with specially formulated composite materials. Our fabrication expertise enables us to furnish the most cost effective, precision components!




SPaulding
COMPOSITES CO.

One Monogram Place, Rochester, NH 03866
Phone: 603 332-0555 Fax: 603 332-5357

SEAL MASTER INFLATABLE SEALS

Providing sealing solutions
before others identify
the problems!

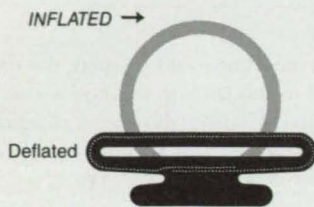

Since 1953, our people have been helping solve difficult sealing problems. We offer innovative custom-built seals in a wide range of sizes and configurations. They can be used anywhere a positive seal is needed. Call or write for design assistance. Illustrated literature available.




SEAL MASTER CORPORATION

INFLATABLE SEALS AND OTHER CUSTOM RUBBER PRODUCTS

368 MARTINEL DRIVE • KENT, OH 44240-4368 USA
(330) 673-8410 • FAX (330) 673-8242

For More Information Write In No. 423

It doesn't take a rocket
scientist to control noise.
No offense.

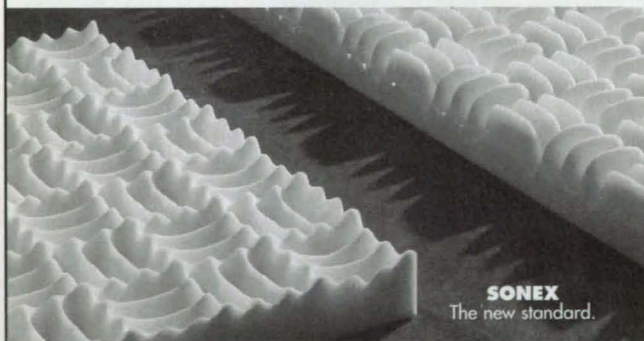

illbruck's family of SONEX products is setting new standards, with completely **FIBER-FREE** acoustical solutions in exclusively **CLASS 1** materials. Our new and improved SONEX combines exceptional absorption properties with Class 1 fire-resistant materials for the safest environment. You'll get peace of mind, as well as peace and quiet. Send today for a free brochure.

illbruck
Minneapolis, Minnesota
1-800-662-0032
(612) 520-3620

and $\{b_i\} = (b_1, b_2, b_3, \dots)$ where successive subscripts denote successive original data and where a_i corresponds to b_i . For example, a_i and b_i could represent original spectral intensities from the same location (the i th pixel) in the same image at two different wavelengths. First, for each (i th) pair of original data, one computes the cross-difference

$$\Delta_i^{ba} = b_i - a_i.$$

Next, one computes the differences between successive (adjacent) cross-differences; that is,

$$\Delta_i = \Delta_{i+1}^{ba} - \Delta_i^{ba}.$$

This is the desired set of double differences.

Straightforward algebraic manipulation of the double-difference equations yields recursive equations for reconstruction of one of the original sets of data from the other original set of data, the double differences, and the zeroth cross-difference term. That is, one obtains equations for reconstructing $\{b_i\}$ from $\{a_i\}$, $\{\Delta_i\}$, and Δ_0^{ba} . Thus, it suffices to transmit the precompressed set of data $(\{a_i\}, \{\Delta_i\}, \Delta_0^{ba})$.

Accordingly, in operation, the original data are precompressed via the double-difference equations, and the precompressed data are fed to a standard lossless or lossy data-compression encoder suitable for the specific application. Following transmission, reception, and decoding, the complete original data are reconstructed from the decoded precompressed data via the recursive equations.

Typical electronic hardware for double-difference precoding compression and postdecoding reconstruction consists of several

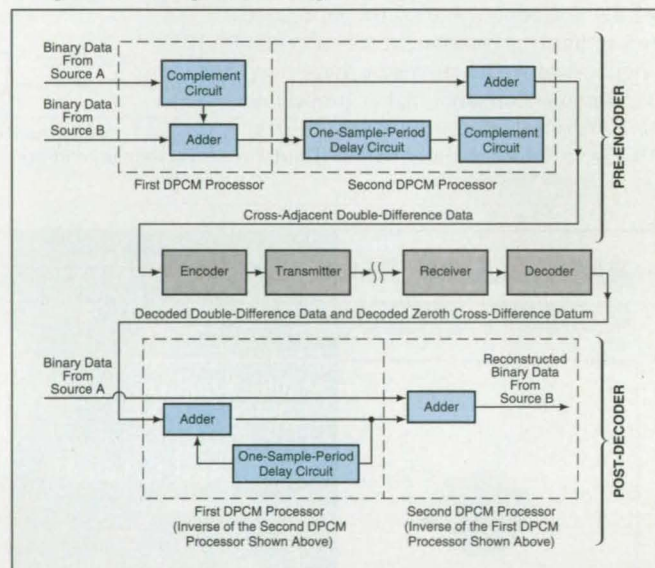


Figure 2. Preencoding and Postdecoding Hardware that implements the cross-adjacent double-difference scheme consists of DPCM functional blocks.

differential pulse code modulation (DPCM) processors (see Figure 2.) In precoding, binary data $\{a_i\}$ from source A are fed to an arithmetic-complement circuit, while binary data $\{b_i\}$ from source B are fed to one of the two input terminals of an adder. The output of the arithmetic-complement circuit is fed to the other input terminal of the adder. The output of the adder is the cross-difference data $\{\Delta_i^{ba}\}$. This output is fed directly to one of the input terminals of a second adder; it is also delayed by one data-sample period, then complemented, then fed to the other input of the second adder. Thus, the output of the second adder computes differences between successive cross-differences, yielding the stream of double-difference data, $\{\Delta_i\}$.

The postdecoding hardware, shown at the bottom of Figure 2, includes logic circuitry similar to that of the precoding hardware, except that it does not include a complement circuit. The decoded binary data $\{a_i\}$ from source A are fed to one of two inputs of the right adder. The decoded double-difference data $\{\Delta_i\}$ and the

zeroth cross-difference (Δ_0^0) are fed to one of the two input terminals of the left adder. The output of the left adder is delayed by one data-sample period and fed back to the other input terminal of the left adder. The output of the left adder is also fed to the other input terminal of the right adder. The output of the right adder is the stream of reconstructed data $\{b_i\}$ from source B.

This work was done by Pen-Shu Yeh of Goddard Space Flight Center. For further information, write in 72 on the TSP Request Card.

This invention is owned by NASA, and a patent application has been filed. Inquiries concerning nonexclusive or exclusive license for its commercial development should be addressed to the Patent Counsel, Goddard Space Flight Center; (301) 286-7351. Refer to GSC-13552.

Flexible Software Processes Telemetric Data

This software provides a less-expensive alternative to ASIC telemetry-processing hardware.

Goddard Space Flight Center, Greenbelt, Maryland

The Software Telemetry Processing System (STPS) is a computer program that performs telemetric-data-processing functions that, heretofore, have been performed by custom-designed application-specific integrated circuits (ASICs). The cost of using the STPS in a given application ranges between one-tenth and one-fifth that of using ASICs. Originally designed to process data from spacecraft telemetry as specified by the Consultative Committee for Space Data Standards (CCSDS), the STPS can also be used, with little or no modification, to process non-CCSDS data.

In comparison with older telemetric-data-processing hardware and software, the STPS offers greater portability, scalability, and flexibility. Portability is achieved by use of the C language, which can be compiled and installed on most computers. Scalability is a consequence of portability in the sense that one can take advantage of portability to select a computer capable of handling data at the required rate for a specific application. Flexibility is achieved by incorporating the main data-processing capabilities into three software modules that can readily be customized for specific applications; an additional degree of flexibility is the possibility of using the computer for other tasks when there is no need to process telemetry.


The STPS performs the functions of a traditional frame synchronizer with an embedded Reed-Solomon Decoder and service processor. The first of the three software modules is functionally equivalent to an ASIC frame synchronizer that follows a "search, check, lock, and flywheel" synchronization strategy. It features programmable frame length, synchronization pattern, and tolerance settings. When executed on a Sun Microsystems Ultra 1-170 (or equivalent) computer with 32MB of ran-

dom-access memory, this module can process data at a rate up to 18 Mb/s.

The second software module is functionally equivalent to an ASIC Reed-Solomon decoder. High-speed operation is achieved by clever use of registers and pointers in a highly optimized version of the Reed-Solomon decoding algorithm. This module features programmable virtual fill and interleaving settings. It can decode any Reed-Solomon code with a symbol length up to eight bits. When executed on a computer like the one mentioned above, this module can function at a data rate up to 2.55 Mb/s for data with a bit-error rate $< 10^{-9}$, or at a somewhat lower data rate for data with a higher bit-error rate.

The third software module — functionally equivalent to an ASIC service processor — accepts a stream of synchronized, decoded data from the preceding modules in a CCSDS format called "Channel Access Data Units" (CADUs). The data are subjected to either of two CCSDS processes called "Virtual Channel Data Unit Service" ("VCDU Service" for short) and "Path Service," respectively. The output of this module is in the form of data packets or VCDUs that do not include synchronization markers but do include headers that describe the processing that was performed and, optionally, descriptions of the data. The performance of this module depends on the lengths of packets; typical rates for execution on the previously mentioned computer are 10 Mb/s or 4×10^4 packets per second.

This work was done by Steve Duran, Chris Wilkinson, Tom Grubb, Karen Michael, Alex Krimchansky, John Park, and Greg Henegar of Goddard Space Flight Center, and Jay Masino of Lockheed Martin. For further information, write in 27 on the TSP Request Card. GSC-13826

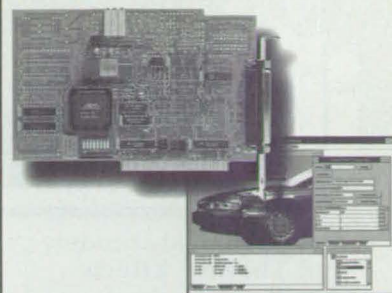

Lowest Cost Data Acquisition

ADAC's new **Value-Line** has uncompromising design features and high quality components at prices below the low cost guys!

Just check out the specs:

Lowest Cost

5500MF

8 channels 12-bit A/D,
16 digital I/O, Counter/Timer

\$195

High Speed

5508LC

8 channels 12-bit A/D,
100KHz, DMA

\$245

Multi-Function DMA

5516DMA

16 channels 12-bit A/D,
DMA, 16 digital I/O

\$295

High Resolution

5500HR

16 channels 16-bit A/D,
DMA, 8 digital I/O

\$595

learn more:

voice **800-648-6589**
fax **617-938-6553**
web **www.adac.com**
email **info@adac.com**

ADAC

American Data Acquisition Corporation
70 Tower Office Park, Woburn, MA 01801



Books & Reports

Coupled Fluid-Dynamic and Thermal Effects in a Turbomachine

A report summarizes a study of coupled fluid-dynamic and thermal effects that affect the performance and longevity of the fuel turbine of the Space Transportation main engine. The fuel turbine is a two-stage transonic turbine designed to produce a power of approximately 60,000 hp (≈ 45 MW) and drive a three-stage turbopump that pumps cold hydrogen. A method called "conjugate heat transfer analysis" was used to solve equations for the conduction of heat in each disk. The goal of this and similar studies is to design a disk-cooling scheme that yields an acceptable thermal environment throughout the turbine.

This work was done by George Bache, Richard Swaim, and Robert Blumenthal of Gencorp Aerojet for Marshall Space Flight Center. To obtain a copy of the report, "A

Numerical Procedure for Coupled CFD/Thermal Conduction Analysis of Turbine Disks and Disk Cavities," write in 20 on the TSP Request Card.
MFS-28935

Crack-Propagation Studies of Failure Modes in Thin-Rim Gears

A report describes theoretical and experimental studies of the effects of rim thicknesses on the propagation of cracks in thin-rim gears, which are used in advanced aircraft because they weigh less than conventional gears do. The goal of the studies was to determine whether cracks grow through gear teeth (a relatively benign failure mode) or through the rims (a catastrophic failure mode) at various rim thicknesses. The theoretical studies included finite-element computer simulations of gear-tooth bending, fatigue, and propagation of cracks based on linear elastic fracture

mechanics. In both the theoretical and experimental studies, it was found that tooth fractures occurred in gears with backup ratios of 3.3 and 1.0, and rim fractures occurred in gears with a backup ratio of 0.3. For gears with a backup ratio of 0.5, the experiments revealed rim fractures, whereas the theoretical study showed instability; that is, the possibility of either tooth or rim fracture, depending on initial conditions.

This work was done by David G. Lewicki of the Vehicle Propulsion Directorate of the U.S. Army Research Laboratory for Lewis Research Center. To obtain a copy of the report, "Crack Propagation Studies to Determine Benign or Catastrophic Failure Modes for Aerospace Thin-Rim Gears," write in 79 on the TSP Request Card.

Inquiries concerning rights for the commercial use of this invention should be addressed to NASA Lewis Research Center, Commercial Technology Office, Attn: Tech Brief Patent Status, Mail Stop 7-3, 21000 Brookpark Road, Cleveland, Ohio 44135. Refer to LEW-16436.

When you need to see the tree and the forest



Datavisor 80



Datavisor
VGA / HiRes



Virtual Binoculars
VGA / HiRes




n•vision
7680 Old Springhouse Road
McLean, Virginia 22102
1.703.506.8808 voice
1.703.903.0455 fax
<http://www.nvis.com>
sales@nvis.com

See the difference with n•vision's complete line of immersive display systems

LITERATURE SPOTLIGHT

Free catalogs and literature for *NASA Tech Briefs* readers. To order, write in the corresponding number on the Readers Information Request Form (preceding page 81).



APPLICATIONS GUIDE FOR RETICULATED POLYURETHANE FOAM

FilterCrest™ and FeltCrest™ reticulated polyurethane foam Applications Guide includes fold-out chart listing applications by market and function. Crest Foam materials are used in products and processes for applying, filtering, metering, reservoiring, wicking, cushioning, sealing, suppressing/baffling, and many others. They are offered in many pore sizes to meet specific applications. A questionnaire is included to help select a suitable material for your application. Crest Foam Industries, Inc., 100 Carol Place, Moonachie, NJ 07074; Tel: 201-807-0809; Fax: 201-807-1113; E-mail: info@crestfoam.com; <http://www.crestfoam.com>.

Crest Foam Industries, Inc.

For More Information Write In No. 300




AUTOMATED PRESSURE CONTROL SYSTEM

APP's Automated Pressure Control System (APCS) allows easy computer control of high pressure generation up to 60,000 PSI. Using the RS232 serial port through an existing computer, the supplied Windows®-based software measures pressure ramps that can be pre-programmed for complete hands-off operation. Our software also provides automatic overpressure protection through a three-level failsafe system. Specify a list of the desired pressures and holding time and the APCS does the rest. Advanced Pressure Products, 83 Brown Road, Ithaca, NY 14850; Tel: 800-277-8258; <http://www.pmiapp.com>.

Advanced Pressure Products

For More Information Write In No. 301

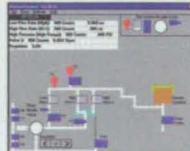


GAS PERMEAMETER

PMI's gas permeameter provides a practical means of testing materials with typically very low permeability. The instrument uses water vapor or a non-corrosive gas to test the permeability of a sheet sample. Gas under pressure flows through the sample into a chamber with vacuum pressure. The change in pressure in the vacuum chamber is measured over time to determine the rate of diffusion and thus the permeability of the sample. Custom sample chambers also can be designed to accommodate different sample sizes and shapes. Porous Materials, Inc., 83 Brown Road, Ithaca, NY 14850; Tel: 800-825-5764; <http://www.pmiapp.com>.

Porous Materials, Inc.

For More Information Write In No. 302

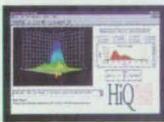

FREE HIQ EVALUATION SOFTWARE

National Instruments offers HiQ® for Windows, featuring ActiveMath™ and visualization tools for Microsoft Office. HiQ on Windows NT or Windows 95 uses ActiveX™ (OLE) for integration with Microsoft Office and Microsoft's OpenGL 3D graphics library, making advanced technical calculation, data visualization, and documentation solutions more cost effective and simpler for technical professionals. Call for your FREE HiQ evaluation software. National Instruments, 6504 Bridge Point Pkwy., Austin, TX 78730; Tel: 512-794-0100 or 800-433-3488; Fax: 512-794-8411; E-mail: info@natinst.com; <http://www.natinst.com>.

National Instruments

For More Information Write In No. 303



QUALITY ALUMINUM CASTINGS

This newly updated, full color brochure illustrates permanent mold aluminum casting, a process best suited for high-strength, high-quality products ranging from a few ounces to several hundred pounds with yearly production runs of 3000 or more. Explanations of the complete in-house machining, engineering and tooling Stahl can provide are also included. Stahl Specialty Co., Kingsville, MO 64061; Tel: 800-821-7852.

Stahl Specialty Company

For More Information Write In No. 304



BURST PRESSURE TESTER

Advanced Pressure Products has developed a fully automated computer controlled burst pressure testing system. This system is designed to determine the exact pressure of failures at controlled pressurizing rates.

- Test accuracy up to .05% of full scale
 - Leak or burst pressure resolution within .01% of full scale
 - Testing pressure designated by operator up to 60,000 PSI for hydraulic systems or 5,000 PSI for pneumatic systems.
- Advanced Pressure Products, 83 Brown Road, Ithaca, NY 14850; Tel: 800-277-8258; <http://www.pmiapp.com>.

Advanced Pressure Products

For More Information Write In No. 305



PC-BASED JTFA TECHNIQUES SOLVE DIVERSE ANALYSIS APPLICATIONS

Learn how to use PC-based joint-time-frequency analysis techniques (JTFA) with the National Instruments *Joint Time-Frequency Analysis Application Note* to achieve more precise time and frequency domain resolution than traditional FFT-based measurements. PC-based JTFA techniques solve diverse signal processing, biomedical, vibration, sound, and noise analysis applications. National Instruments; Tel: 512-794-0100 or 800-433-3488; Fax: 512-794-8411; E-mail: info@natinst.com; <http://www.natinst.com>.

National Instruments

For More Information Write In No. 306



PRECISION MEASUREMENT & SENSING INSTRUMENTS FOR MANUFACTURING

Advanced line of measurement and sensing instruments for the calibration and maintenance of machine tools, robots, and CMMs and for the measurement of machined parts. Includes 5-D laser measuring system, ballbars, spindle dynamic and thermal analysis system, levels, dual-axis beam steerer systems, laser trackers, and more. Automated Precision, Inc., 7901-C Cessna Avenue, Gaithersburg, MD 20879; Tel: 800-537-2720 or 301-330-8100; Fax: 301-990-8648.

Automated Precision, Inc.

For More Information Write In No. 307




SCSI EXTENDERS, CONVERTERS & REGENERATORS

Set of 5 data sheets describe Paralan's SCSI Problem Solvers: SCSI Extenders stretch the SCSI bus as far as 1000 ft. Also described are Paralan's Differential/Single-Ended Converters, SCSI Isolating Regenerators, SCSI Bus Switches and unique Quiet Cable for reliable SCSI operation. Tel: 619-560-7266; E-mail: scsi@paralan.com; URL: <http://www.paralan.com/ntb>.

Paralan Corporation

For More Information Write In No. 308

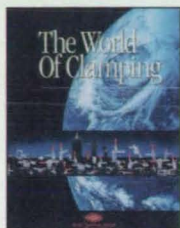

WORLD OF CLAMPING

The World of Clamping introduces DE-STA-CO's new line of high-strength composite clamps, details their remaining line of approximately 500 toggle clamps, and features expanded dimensional and application information. DE-STA-CO's toggle clamp line includes hold-down, latch, straight-line, and squeeze-action clamps. This catalog also contains DE-STA-CO's pneumatic and hydraulic clamping systems. (Catalog 197) DE-STA-CO, PO Box 2800, Troy, MI 48007; 810-594-5600; <http://www.destaco.com>; E-mail: cust.srv@destaco.com.

DE-STA-CO

For More Information Write In No. 309



ADVANCED COMPOSITE TRAINING

Abaris Training offers 14 different "hands-on" workshops in advanced composite materials technology. These workshops cover fabrication, repair, manufacturing, tooling, print reading, adhesive bonding, ultrasonic inspection of composites, resin transfer molding, and several engineering workshops. Emphasis is placed on glass, carbon, and aramid fiber materials and processes, utilizing vacuum bagging, and oven and autoclave curing. Three workshops are Canadian D.O.T. approved. For a free brochure, call toll-free: 1-800-638-8441; Fax: 702-827-6599; <http://www.abaris.com>. Abaris Training Resources, Inc., 5401 Longley Lane, Suite 49, Reno, NV 89511.

Abaris Training Resources, Inc.

For More Information Write In No. 312



VORTEX TUBES

Data sheet describes how EXAIR Vortex Tubes produce up to 10,000 Btu/hr. with no moving parts. Tubes convert an ordinary supply of compressed air into two streams: one hot and one cold. Temperatures are adjustable from -50° to +250°F. Bulletin highlights advantages for a variety of industrial cooling applications. EXAIR Corporation, 1250 Century Circle North, Cincinnati, OH 45246; Tel: 800-903-9247; Fax: 513-671-3363; E-mail: techhelp@exair.com; <http://www.exair.com>.

EXAIR Corporation

For More Information Write In No. 315




CONSTANT-TEMPERATURE SOLUTIONS FOR SEMICONDUCTOR INDUSTRY

NESLAB introduces its new product catalog, featuring constant-temperature equipment designed specifically for the semiconductor industry. This catalog includes features, specifications, application tips, and customizing options available including refrigeration, controller, pump, fluid, heater, and electrical specs. For more information contact Terri Pruett, Marketing Coordinator, NESLAB Instruments, Inc., PO Box 1178, Portsmouth, NH 03802-1178; 603-430-2251; FAX 603-436-8411.

NESLAB Instruments Inc.

For More Information Write In No. 318

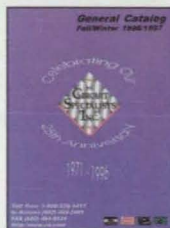

COMPUTERS AND ELECTRONICS

Circuit Specialists, Inc., in business for 25 years, has released the new Fall/Winter 1996 catalog. This 132-page catalog has over 9,000 products including industrial & personal computers, computer peripherals, board level data acquisition & control products, test equipment, motion control products, educational laser & fiber optics, wiring products, & much more! Circuit Specialists, Inc., 220 S. Country Club Dr., Bldg. 2, Mesa, AZ 85210; 24-hour catalog request line: 800-811-5201, ext. 5; Fax: 602-464-5824; <http://www.cir.com>.

Circuit Specialists, Inc.

For More Information Write In No. 310




S-VHS CASSETTE DATA RECORDERS

New datapack on Avalon's 1997 range of high-performance recorders. Analog recording to 12 MHz. Digital recording to 8 Mbps. Single- and multi-channel units for static, mobile, and MIL-SPEC applications such as intelligence gathering, ASW, wide-band telemetry, radar signature recording, etc. Avalon Electronics, Inc., 98 Blacks Mill Drive, Dawsonville, GA 30534; Tel: 800-797-1337; Fax: 706-216-2485; E-mail: avelinc@stc.net; <http://www.aval.demon.co.uk/avalon>.

Avalon Electronics, Inc.

For More Information Write In No. 313

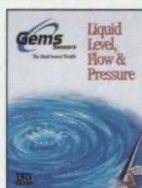

NEW LEVEL, FLOW AND PRESSURE SENSORS CATALOG

New 232-page catalog (more than 350 standard products) is now available from The Fluid Sensor People™ at GEMS! In addition to the thousands of sensor variations for OEM design engineers, the full-color Qwik Picks™ Section showcases hot products and cool tips for novices and experts alike, plus same-day shipping! Sensor technologies include: ultrasonic, electro-optic, fiber-optic, float, conductivity, Hall Effect, CVD transducers, and more. Gems Sensors, 1 Cowles Rd., Plainville, CT 06062; Tel: 800-321-6070; Fax: 860-793-4500.

Gems Sensors

For More Information Write In No. 316



VESPEL® POLYIMIDE PARTS & SHAPES

DuPont VespeL® parts offer reliability and durability for semiconductor manufacturing. These high-performance components can reduce costs through longer life and extended maintenance intervals versus quartz and ceramics. VespeL® parts perform at high temperatures, resist chemical attack, and exhibit superior cleanliness, dimensional stability, and dielectric performance. Applications include clamping rings and other "in chamber" applications, wafer handling and processing, and IC handling and testing. DuPont Engineering Polymers, Barley Mill Plaza, Bldg. 22, PO Box 80022, Wilmington, DE 19880-0022; Tel: 800-972-7252.

DuPont Engineering Polymers

For More Information Write In No. 319



HI-TEMP SOLUTIONS WORLDWIDE

Aremco produces high-temperature ceramics, adhesives, coatings, sealants, tapes, greases, castables, and potting compounds. These materials are used throughout industry in the design of sensors, electrical components, and analytical instruments, as well as the maintenance of high-temperature industrial process equipment. Aremco also produces dicing equipment and screen printers which are used in the processing of electronic and technical ceramics. Aremco Products, Inc., PO Box 429, 23 Snowden Ave., Ossining, NY 10562-0429; Tel: 914-762-0685; Fax: 914-762-1663.

Aremco Products, Inc.

For More Information Write In No. 311



WASHERS AND SPACERS

Boker's free 40-page Catalog '97 offers more than 12,000 non-standard sizes with no tool charge. Outside diameters of 0.080" to 2.631", a wide variety of inside diameters and thicknesses, and 2,000 material variations create millions of possibilities. Materials include low carbon, cold-rolled strip, and sheet steel; five types of spring steel; stainless steel; aluminum; brass; copper; nickel silver; and non-metallic materials such as Delrin®, Teflon®, Mylar®, and nylon. Metric sizes also. Boker's, Inc., 3104 Snelling Ave., Minneapolis, MN 55406-1937; Tel: 800-927-4377; Fax: 612-729-8910; <http://bokers.com>.

Boker's Inc.

For More Information Write In No. 314



FREE LINEAR BEARING DESIGN TOOLS

A comprehensive 70-page technical printed catalog is available and is duplicated electronically on disk, CD-ROM, and website forms. Selection software allows the designer to select products automatically via input of application criteria, and perform instant calculations of life and moment load formulas. CAD drawings may be viewed and imported directly into the CAD system. Del-Tron Precision Inc., 5 Trowbridge Dr., Bethel, CT 06801; Tel: 800-245-5013; Fax: 203-778-2721; E-mail: deltron@deltron.com.

Del-Tron Precision Inc.

For More Information Write In No. 317




MOTION CONTROL

Oregon Micro Systems' new motion control product guide – a full line of multi-axis controllers with up to 8 axes on a single board. Thanks to exclusive patented technology, OMS motion controllers have higher reliability and lower costs. Shipment is from stock for immediate delivery. Oregon Micro Systems Inc., 1800 NW 169th Place, Ste. C100, Beaverton, OR 97006; Tel: 503-629-8081; Fax: 503-629-0688.

Oregon Micro Systems Inc.

For More Information Write In No. 320

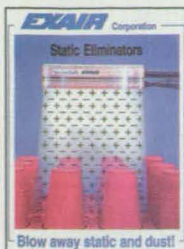

STATIC ELIMINATORS

EXAIR-Ionizers improve static and dust removal in many applications and contain no radioactive element. Air-delivered ions neutralize static and clean surfaces at distances to 20 feet. Three styles, including air knife and blowgun, are available. Applications include web cleaning, pre-paint auto body blowoff, and neutralizing plastic parts. EXAIR Corporation, 1250 Century Circle North, Cincinnati, OH 45246; Tel: 800-903-9247; Fax: 513-671-3363; E-mail: techelp@exair.com; <http://www.exair.com>.

EXAIR Corporation

For More Information Write In No. 321



ULTRA-LOW DISTORTION FUNCTION GENERATOR

The DS360 provides total harmonic distortion (THD) better than -100 dB. Functions include sine, square, two-tone, white and pink noise. It has a frequency range of 1 MHz to 200 KHz, 1 MHz frequency resolution, 25 ppm frequency stability, linear and log frequency sweeps, digital outputs (AES-EBU and SPDIF/EIA) and standard RS-232 and GPIB computer interfaces. BNC, XLR, and Banana output connectors provide easy interfacing to virtually any system. U.S. List Price: \$2,395. Stanford Research Systems; Tel: 408-744-9040.

Stanford Research Systems

For More Information Write In No. 324



ALGOR PROVIDES "4-WAY" INFO ON THE WORLD WIDE WEB

Algor's Internet place has detailed information on four product lines. Discover Houdini, Algor's automatic CAD solid model to 8-node "brick" mesh converter. Learn about Algor FEA, including case histories. Preview engineering videos, books and multimedia. See all new integrated piping/vessel/plant design software. If you do not have Internet access, call for free info. Algor, Inc.; E-mail: info@algor.com; URL: <http://www.algor.com>; Tel: 412-967-2700; Fax: 412-967-2781.

Algor, Inc.

For More Information Write In No. 327



MAGNETIC SHIELDING CABLE, CONDUIT SLEEVING & WIRE

This literature details applications for Magnetic Shield's Inter-8 Weave cable, Spira-Shield Flexible conduit, CO-NETIC Braided Slewing, and CO-NETIC AA Wire. Each product's specifications are described. All materials are in stock. Custom variations are also available. Magnetic Shield Corp., 740 N. Thomas Drive, Bensenville, IL 60106; Tel: 630-766-7800; Fax: 630-766-2813.

Magnetic Shield Corp.

For More Information Write In No. 330



SPIRAL RETAINING RING CATALOG RR-95B

Select from over 2,000 standard retaining rings, stocked in diameters from 1/2" to 16", in both English and metric sizes and carbon or stainless steel. Find all ring sizes in our newly released 56-page catalog. Use the Ring Selection Guide containing tables of ring series. The catalog contains comprehensive design formulas and data for materials, shear, bending, RPM, installation stress, and groove design. Special rings are easy, too! Smalley Steel Ring Co., 385 Gilman Ave., Wheeling, IL 60090; Tel: 847-537-7600; Fax: 847-537-7698; <http://www.ringspring.com>.

Smalley Steel Ring Co.

For More Information Write In No. 322



LAMBDA CHROME® LASER DYES

Lambda Chrome® quality laser dyes from Lambda Physik, the leader in the excimer/dye laser industry with over 25 years of experience. This complete compendium includes information on the most frequently asked questions, lasing wavelengths, solvents, and pump sources. Available at no charge with your first dye order. Overnight delivery available. Lambda Physik, Inc., 3201 W. Commercial Blvd., Fort Lauderdale, FL 33309; Tel: 800-EXCIMER or 954-486-1500; Fax: 954-486-1501.

Lambda Physik, Inc.

For More Information Write In No. 325



NEW INTERACTIVE CD-ROM BASED ON ENGINEERING "BEST-SELLER"

A comprehensive FEA CD-ROM/textbook that blends theory & real-world engineering examples. Dr. Constantine Spyraikos, well-known finite element stress and vibration analysis expert, has created a reference for all engineers from designers to "gurus." CD-ROM includes search capabilities, Internet-type browser & 3D, full-color graphics. Hard- and soft-cover books include every example problem on disk. APD; Tel: 800-482-5467; URL: <http://www.algor.com/apd>; E-mail: apd@algor.com.

APD

For More Information Write In No. 328



LIGHT SOURCES FOR RESEARCH NEEDS

Looking for small, bright point sources or large, collimated, uniform beams? From 10W to 1000W sources, for single wavelengths or broadband radiation, including output that simulates the solar spectrum, our pulsed and CW sources represent the most complete line of UV to IR sources available today. Choose from deuterium, arc, and quartz tungsten halogen lamps and IR elements; calibrated irradiance sources; spectral calibration lamps; lasers; fiber-optic and monochromator illuminators; flood exposure sources; and solar simulators. Oriel Instruments, Tel: 203-380-4375; Fax: 203-375-0851; E-mail: res_sales@oriel.com; <http://www.oriel.com>.

Oriel Instruments

For More Information Write In No. 323



SOLIDSTATE BACKLIGHTING

SolidState Backlighting that provides brighter, more uniform light at lower power is described in a new data sheet. These molded backlighting panels feature an ultra-thin design and are ideal for applications where power, brightness, and cost are prime design considerations. Panels as large as 3.5 x 5" can be backlit with as few as five LEDs. SolidState Backlighting is appropriate for use in a variety of electronic products, as well as automotive applications. LUMITEX, Inc., 8443 Dow Circle, Strongsville, OH 44136; Tel: 216-243-8401 or 800-969-5483; Fax: 216-243-8402.

LUMITEX, Inc.

For More Information Write In No. 326



NEW KIND OF MULTIMEDIA VIDEO TEACHES FEA LESSONS

Finite Element Analysis in Action! is a new kind of instructional video for engineers. Available on VHS tape or interactive, multimedia CD-ROM, the video packs a lot of information into a short running time of only 26 minutes. Live lab experiments and FEA analysis are conducted to show how to better use any FEA software. Demonstrates specific modeling and analysis techniques. Tel: 1-800-482-5467; URL: <http://www.algor.com/apd.htm>; E-mail: apd@algor.com.

APD

For More Information Write In No. 329



BORESCOPIC VIDEO SYSTEM

The MCV-8000 borescopic video system couples any Machida borescope to a miniature, high-quality color camera to create the clearest images for review on a monitor screen. The portable MCV-8000 is a quick set-up unit protected in a rugged, shock-mounted, shippable carrying case. The 1/2" VHS record/playback unit with microphone allows inspections to be recorded easily with narration. Machida's MCV-8000 borescope video system is the professional choice for high-resolution video inspection. Machida, Inc., 40 Ramland Road South, Orangeburg, NY 10962; Tel: 800-431-5420 or 914-365-0600; Fax: 914-365-0620.

Machida, Inc.

For More Information Write In No. 331




MID-WEST EXPRESS STOCK SPRINGS CATALOG

New, 56-page Mid-West Express Stock Springs Catalog describes over 4,500 different stock springs and spring kits available for immediate delivery. The catalog contains specifications, price list, order form and other helpful information. Describes compression, extension, torsion, die springs and Belleville washers. Mid-West Express, Div. of Mid-West Spring Mfg. Co., 1404 Joliet Road, Unit C, Romeoville, IL 60446; Tel: 800-346-1400; Fax: 888-466-1400.

Mid-West Express, Div. of Mid-West Spring Mfg.

For More Information Write In No. 332

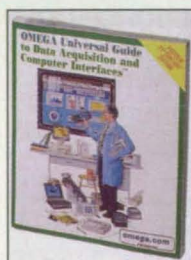

PREMIER TO THE 21ST CENTURY™

OMEGA Engineering is proud to announce the release of its latest Data Acquisition Handbook, "The Universal Guide to Data Acquisition and Computer Interfaces - Premier to the 21st Century™ Edition." This new handbook contains 600-plus pages of products and valuable technical information. Over 140 pages are dedicated to new and unique products. OMEGA Engineering; Tel: 800-TC-OMEGA or 203-359-1660; E-mail: info@omega.com; http://www.omega.com.

OMEGA Engineering

For More Information Write In No. 333



FREE DEMO CD-ROM

Now you can tap into concise, validated, and accurately presented data for design and performance analysis. Provided on CD-ROM are ESDU Fluid Mechanics, Internal Flow Data Items, and computer programs. These tools enable the engineer quickly to optimize compressible and incompressible flow system designs based upon independently validated methods and procedures. Call today for more information and your FREE DEMO CD-ROM. ESDU International plc, London; Tel: +44 (0) 171 490 5151.

ESDU International, plc

For More Information Write In No. 336



GILMONT FLOWMETERS FROM BARNANT

Gilmont flowmeters can be used for all critical flow monitoring applications. These flowmeters are excellent for high temperatures, pressures, and specialty gases. Fluid contacts only glass flow tube, glass or SS float, and Teflon stops, ideal for high-purity and superb chemical resistance. Gilmont flowmeters can be calibrated for most liquids and gases. Computerized flow tables are available. Calibrated/correlated and compact direct reading flowmeters are offered. Barnant Company, 28W092 Commercial Ave., Barrington, IL 60010; Tel: 800-637-3739 or 847-381-7050; Fax: 847-381-7053.

Barnant Company

For More Information Write In No. 339



POWDER METALLURGY DESIGN SOLUTIONS

This 20-page brochure, published by the Powder Metallurgy industry trade association, is yours free for the asking. It features cost-effective design solutions and new ways to handle parts fabrication. Metal Powder Industries Federation, 105 College Road East, Princeton, NJ 08540; Tel: 609-452-7700; Fax: 609-987-8523; http://www.mpif.org.

Metal Powder Industries Federation

For More Information Write In No. 342




CALIBRATOR OFFERS EXCEPTIONAL VERSATILITY

The CL328 calibrator offers exceptional versatility and laboratory performance with a portable construction for field use. Model CL328 signal simulator/analyzer simultaneously will read and source any combination of process milliamp and voltage signals. Calibrate state-of-the-art equipment such as smart transmitters and indicators with your Model CL328, and a full, five-digit resolution lets you check any type of process control equipment. Priced at \$1,295. For more information, use OMEGAfax and request Document #1690 by calling 800-848-4271; E-mail: info@omega.com; http://www.omega.com.

OMEGA Engineering

For More Information Write In No. 334

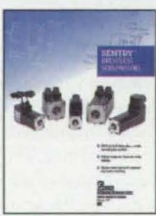

SENTRY™ SERIES BRUSHLESS SERVOMOTORS

New selection guide provides detailed specifications and selection information for these high-performance servomotors. SENTRY servomotors feature the industry's highest torque per frame size. Available in NEMA 23 and 34 frame sizes, SENTRY servomotors meet the most demanding torque, velocity, and/or positioning applications with a medium inertia design for improved load matching. Pacific Scientific, Motor Products Div., Rockford, IL; Tel: 815-226-3100; Fax: 815-226-3080.

Pacific Scientific, Motor Products Div.

For More Information Write In No. 337



'97 ELECTRONIC HARDWARE

New from Globe Electronic Hardware comes the 1997 revised 240-page catalog, which provides complete engineering dimensions and specs for our precision electronic hardware. Products include stand-offs, spacers, captive panel screws, retainers, handles, ferules, thumb screws, shoulder screws, washers, and other components in American and metric standards. Materials include aluminum, brass, steel, stainless steel, nylon, phenolic, and Teflon. Globe Electronic Hardware; Tel: 800-221-1505 or 718-457-0303; Fax: 718-457-7493; http://www.globe-elec-hdwe.com.

Globe Electronic Hardware

For More Information Write In No. 340



1997 PCMCIA PRODUCTS CATALOG

The new PCMCIA-PC CARD standard has been incorporated into many new applications such as: Data logging, agriculture, digital film, and wireless communications. Envoy Data has just released its new catalog for these new applications plus many other products like: memory, I/O (serial, parallel, SCSI, A/D, etc.) cards; PC card drives for ISA, IDE, SCSI, etc.; along with industrial card and drives, multimedia, industrial, and engineering tools for PCMCIA applications. Envoy Data Corporation, 6 E. Palo Verde, #3, Gilbert, AZ 85296; Tel: 602-892 0954; Fax: 602-892-0029; E-mail: info@envoydata.com; http://www.envoydata.com.

Envoy Data Corporation

For More Information Write In No. 343



AVIONICS COMMUNICATIONS SOLUTIONS

Request your FREE info-pack on Sysran's complete line of avionics communications solutions. Board-level products include replicated shared-memory network interfaces, Fibre Channel host bus adapters and switches, I/O IP modules, and 1553 products. Support is available for various buses such as VMEbus, VXibus, Sbus, GIO, EISA, ISA, PCI, PMC, and PCMCIA. Sysran Corp.; Tel: 937-252-5601 or 800-252-5601; Fax: 937-258-2729; E-mail: info@sysran.com; http://www.sysran.com.

Sysran Corp.

For More Information Write In No. 335



POWERPAC™ HYBRID STEP MOTORS

Four-color brochure details Pacific Scientific's powerful new line of hybrid step motors. Brochure reviews product options and benefits for N and K series steppers, which are available in NEMA 34 and 42 frame sizes. POWERPAC has the highest torque per frame size in the industry, up to 5,700 oz-in. (356 lb-in.). These motors meet demanding motion requirements and are a cost-effective alternative to servo motors in applications with moderate speed requirements. Pacific Scientific, Motor Products Div., Rockford, IL; Tel: 815-226-3100; Fax: 815-226-3080.

Pacific Scientific, Motor Products Div.

For More Information Write In No. 338



AUTOMATION CONTROLS & COMPONENTS

New Automation Controls & Components Selector Guide provides overview of pneumatic and electronic industrial automation components and controls available from Festo. Over 90 product categories in 24-page brochure, covering control systems, PLCs, Fieldbus manifolds, sensors, pneumatic cylinders, valves and accessories. Education/Training programs in automation control technologies described. Contact: Festo Corporation, 395 Moreland Road, Hauppauge, NY 11788; Tel: 516-435-0800.

Festo Corporation

For More Information Write In No. 341



BURLEIGH'S SURFACE TOPOGRAPHY DIVISION

Burleigh Instruments manufactures scanning probe microscopes and interferometric optical profilers. This family of products can scan atoms and up to 1.75 mm in X and Y. Z resolution is accurate to a fraction of an Angstrom while maximum Z range is 100µm. Burleigh Instruments, Burleigh Park, PO Box E, Fishers, NY 14453-0755; Tel: 716-924-9355; Fax: 716-924-9072; E-mail: spm@burleigh.com; http://www.burleigh.com.

Burleigh Instruments

For More Information Write In No. 344



EMI/RFI SHIELDING PRODUCTS

New catalog details hundreds of standard gaskets and grounding strip variations, engineered to meet the most common shielding applications. Standard as well as custom designed shields are manufactured from Beryllium, Copper, and other High-performance materials. Special finishes and a variety of mounting methods are offered. For World Class quality and service call 201-890-7455 or visit our Web Site at: [HTTP://WWW.OMEGASHIELDING.COM](http://WWW.OMEGASHIELDING.COM); E-mail: SALES@OMEGASHIELDING.COM.

Omega Shielding Products Inc.

For More Information Write In No. 345



NUMATICS MARK 4 SERIES

Numatics introduces the MARK 4 Series directional control valves, which are miniature direct solenoid and solenoid air pilot actuated valves in which all internal wiring has been eliminated. MARK 4 offers true plug-together

flexibility and expandability to meet design requirements and serial/bus communication interface options. Features include: Z-board™ electrical interface that eliminates wiring within the manifold; plug-together modular discrete inputs/outputs; plug-in speed control sandwich; and meets NEMA 4 specifications. Numatics; Tel: 810-887-4111; <http://www.numatics.com> (reference catalog #LTMK4-1).

Numatics

For More Information Write In No. 348



INSTRUMENT DATA ACQUISITION

The SoftwareWedge™ directs serial (RS232, RS485, RS422) data from any instrument into any Windows 3.x, 95, or NT applications such as Excel, HMI's, statistical, and control applications. Collect data from and control PLCs, bar code scanners, laboratory, process and quality control instruments, etc. If you would like information or have any questions, please contact TAL Technologies, Inc., 2027 Wallace Street, Philadelphia, PA 19130; Tel: 800-722-6004 or 215-763-7900; Fax: 215-763-9711; <http://www.taltech.com>.

TAL Technologies, Inc.

For More Information Write In No. 351



FREE DRIVE COMPONENT LIBRARY

Features over 52,400 off-the-shelf inch and metric, commercial and precision small drive components. These five new catalogs include technical specifications for over 13,000 gears (D190); 7,900 shafts, bearings, and couplings (D200); 18,300 timing belt drives (D210); 9,400 design components (D220); and Fairloc® hub fastening components (D240). Stock Drive Products/Sterling Instrument, New Hyde Park, NY; Tel: 516-328-3300; Fax: 800-737-7436; <http://www.sdp-si.com>.

Stock Drive Products/ Sterling Instrument

For More Information Write In No. 354



1997 CALIBRATION STANDARDS CATALOG

All new free 1997 catalog of metrology calibration standards for surface contamination, critical dimensions, film thickness, surface profiling, roughness, resistivity, and much more. All important for ISO 9000 certification. Also, valuable information on calibration science and services. VLSI Standards, 3087 North First St., San Jose, CA 95134; Tel: 408-428-1800; Fax: 408-428-9555.

VLSI Standards

For More Information Write In No. 346



ACCELEROMETERS

New 108-page catalog of Entran's Accelerometers with associated power supplies, amplifiers & signal conditioning. A broad selection: miniature to rugged, low and high ranges, wide frequency response for static and dynamic. Both damping and overrange stops available. Ideal for acceleration, vibration & shock testing in aerospace, industrial, automotive, military & research applications. Many items in "Off-the-Shelf" stock. Entran Devices, Inc., 10 Washington Ave., Fairfield, NJ 07004; Tel: 888-8-ENTRAN; Fax: 201-227-6865; E-mail: sales@entran.com; <http://www.entran.com>.

Entran Devices, Inc.

For More Information Write In No. 349




AIR KNIFE FOR BLOWOFF

The EXAIR-Knife reduces air consumption and noise levels on a wide range of blowoff applications. Using a small amount of compressed air as a power source, the air knife pulls in large volumes of surrounding air to produce a high-flow, high-velocity curtain of air for blowoff. Compressed air flow is amplified 30:1. Six sizes up to 36" in length are available. Applications include: blowing liquid, chips, and contaminant from parts and conveyors; cooling hot parts; and air screening. EXAIR Corporation, 1250 Century Circle North, Cincinnati, OH 45246; Tel: 800-903-9247; Fax: 513-671-3363; E-mail: techhelp@exair.com; <http://www.exair.com>.

EXAIR Corporation

For More Information Write In No. 352

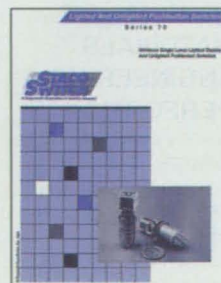

RUGGED MINIATURE SWITCH

The Series 70 is an environmentally rugged line of lighted and unlighted switches. Wet, dusty or oily duty. DPDT MOM or ALT switch actions. Mounts on 0.700" centers with 0.880" depth.

Lighted pushbuttons use T-1 MFB lamps. Variety of display types, colors, and styles. StacoSwitch, 1139 Baker St., Costa Mesa, CA 92627; Tel: 714-549-3041; Fax: 714-549-0930.

StacoSwitch

For More Information Write In No. 355



FREE PC & PCMCIA SOLUTIONS HANDBOOK

Quatech's detailed handbook covers our extensive line of quality communication, data acquisition, and industrial control products for PCMCIA and desktop PCs.

New for 1997 are a unique 4-port RS-232 PC Card, 12- & 16-bit PCMCIA data acquisition systems, and a custom configurable Industrial Test & Measurement System. Product overviews, photos, and complete technical specifications are provided. For a free copy, call 800-553-1170; E-mail: sales@quatech.com; or visit our web site at: <http://www.quatech.com>.

Quatech, Inc.

For More Information Write In No. 347



OLYMPUS HIGH-SPEED VIDEO CAMERA

New Olympus Encore™ video camera lets you pinpoint problems in high-speed industrial equipment. It digitally records up to 2,000 frames per second and provides instant, variable-speed slow-motion replay for analysis. Ideal for manufacturing, testing, QC, and research applications. Compatible with Olympus fiberscopes and borescopes. Olympus America, Inc., Industrial Products Group, Two Corporate Center Drive, Melville, NY 11747-3157; Tel: 800-446-5260; <http://www.olympusimg.com>.

Olympus America, Inc.

For More Information Write In No. 350



PRECISION COMPONENTS CATALOG

PIC Design's comprehensive Catalog 43 is bigger and better than ever – 288 pages including precision Gears, Modular Framing Elements, Linear Motion Systems &

Positioning Tables, and expanded lines of Lead Screws & Nuts, Belts & Pulleys, Ball Slides, Shoulder Screws, Bearings, Shafting, Couplings, and more, all in inch and metric sizes. Ordering from the catalog is easy – major credit cards now accepted. PIC Design, PO Box 1004, Middlebury, CT 06762; Tel: 800-243-6125; Fax: 203-758-8271; E-mail: info@pic-design.com.

PIC Design

For More Information Write In No. 353



MONITOR, RECORD & ANALYZE

Astro-Med's 32-channel recorder with built-in monitor, 170 Mbyte internal hard drive and front-panel floppy drive is described in this illustrated 20-page brochure. The unit, called the MT95K2,

features extraordinary capabilities including three on-board analysis programs, Windows host control, Windows data analysis, and a wide variety of sophisticated data capture options. Tel: 800-343-4039; Fax: 401-822-2430.

Astro-Med Inc.

For More Information Write In No. 356




OPTICAL LIQUIDS

R. P. Cargille's Specialty Optical Liquids catalog features high-transmission, safe-handling laser liquids plus fused silica matching liquids and specific refractive-index liquids (1.300 to 2.11 n_D). The catalog now includes comparative diagrams of glasses and optical liquids. R. P. Cargille Laboratories, Inc., 55 Commerce Road, Cedar Grove, NJ 07009-1289; (201) 239-6633; (201) 239-6096.

R. P. Cargille Laboratories

For More Information Write In No. 357

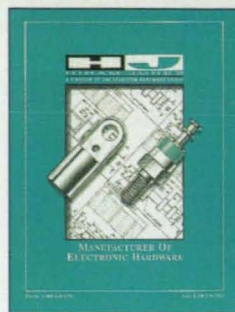

Hiram Jones Electronics, Inc./A Division of the Seastrom Hardware Group manufactures a complete line of standard miniature and sub-miniature terminals including: insulated test jacks, assembled stand-offs and press-type terminals. All standard catalog items are available for immediate pricing

and delivery. Call today for your free 27-page catalog: 800-634-2356.

Hiram Jones Electronics, Inc.

For More Information Write In No. 358



THE SOURCE FOR ELECTRONIC & MECHANICAL HARDWARE

Seastrom takes pride in offering one of the widest selections of standard electronic and assembly hardware available from stock. Seastrom's 66-A Catalog

provides a complete source for over 45,000 products. For a free 550-page catalog, call 800-634-2356.

Seastrom Manufacturing Co. Inc.

For More Information Write In No. 359



VACUUM VALVES

VAT's 192-page catalog contains detailed information on the widest selection of quality vacuum valves in the industry: Gate, angle, fast closing, throttle, pressure control, retrofit, and customized valves. Using innovative sealing technology, both elastomer and all-metal,

they are ideal for applications such as pump isolation, load locks, beam lines, and other vacuum applications. VAT, Inc., 500 W. Cummings Pk., Woburn, MA 01801; Tel: 617-935-1446; Fax: 617-935-3940; E-mail: usa@vatvalve.com; <http://www.vatvalve.com>.

VAT, Inc.

For More Information Write In No. 360



THE BEST ALTERNATIVE TO FAST FOR FREE

Try FIELDVIEW, the World's Leading CFD Post-processor, free for 90 days. FIELDVIEW enables you to cut and plot easily across multi-block grids, unstructured meshes, or analyze results on transient simulations, and is fully supported on all UNIX workstations (including SGI R10000) and PCs. Intelligent Light, 1099 Wall St. West, Ste. 387, Lyndhurst, NJ 07071; Tel: 800-887-8500; Fax: 201-460-0221; <http://www.ilight.com>.

Post-processor, free for 90 days. FIELDVIEW enables you to cut and plot easily across multi-block grids, unstructured meshes, or analyze results on transient simulations, and is fully supported on all UNIX workstations (including SGI R10000) and PCs. Intelligent Light, 1099 Wall St. West, Ste. 387, Lyndhurst, NJ 07071; Tel: 800-887-8500; Fax: 201-460-0221; <http://www.ilight.com>.

Intelligent Light

For More Information Write In No. 361



ESCAPEMENTS FOR COST-EFFECTIVE PARTS FEEDING

Series 160 Escapements are ideal for isolating and feeding individual parts from vibratory feeders, magazines, or hoppers. Internal interlocking pin ensures that both rods are extended before either rod can retract. Available in standard and heavy-duty versions. Send for a free catalog today. PHD, Inc., PO Box 9070, Fort Wayne, IN 46899; Tel: 800-624-8511; Fax: 219-747-6754; <http://www.phdinc.com>.

that both rods are extended before either rod can retract. Available in standard and heavy-duty versions. Send for a free catalog today. PHD, Inc., PO Box 9070, Fort Wayne, IN 46899; Tel: 800-624-8511; Fax: 219-747-6754; <http://www.phdinc.com>.

PHD, Inc.

For More Information Write In No. 364



CUSTOM PRECISION POTENTIOMETERS

FREE, all-new 1997 Betatronix Custom Precision Potentiometers Catalog provides background on industry-leading design and manufacturing capabilities. Betatronix has manufactured conductive plastic and wirewound potentiometers for 30 years. Catalog covers linear & rotary motion, aerospace & missile, outer space, and robotics & animatronics applications. Full-color photos and mechanical parameters are featured. Betatronix, Inc., 110 Nikon Court, Hauppauge, NY 11788; Tel: 516-582-6740; Fax: 516-582-6038.

Betatronix, Inc.

For More Information Write In No. 363




JOURNAL OF MATERIALS ENGINEERING & PERFORMANCE

Subscribe for one year and save 20% (first-time subscribers only). This journal presents information covering all aspects of materials selection, design, characterization, processing, testing, and performance used in engineering applications, including case studies, technical notes, reports, and literature abstracts. Call 800-336-5152 and mention code 0438JMEG66 for a FREE preview package.

Subscribe for one year and save 20% (first-time subscribers only). This journal presents information covering all aspects of materials selection, design, characterization, processing, testing, and performance used in engineering applications, including case studies, technical notes, reports, and literature abstracts. Call 800-336-5152 and mention code 0438JMEG66 for a FREE preview package.

ASM International

For More Information Write In No. 367

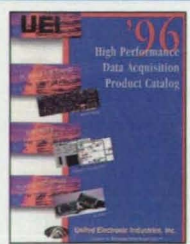

FREE DATA ACQUISITION CATALOG

UEI's catalog gives you full specs for data acquisition boards which are DSP-enhanced and provide 16 channels at 1 MHz continuous A/D. Options include on-board simultaneous sampling and individual programmable gain amplifiers for all channels. Also available: 16 bits at 200,000 samples/sec. Describes UEI's new PowerDAQ™ boards for the PCI bus, to be released July '97. UEI, 10 Dexter Ave., Watertown, MA 02172; Tel: 800-829-4632; Fax: 617-924-1441; <http://www.ueidaq.com>.

United Electronic Industries

For More Information Write In No. 366



NEW MEGAPIXEL CAMERAS

Hitachi Denshi has introduced two new monochrome video cameras, each providing over one million pixels of information. Designed using Hitachi's experience in machine vision, medical and scientific imaging, the cameras are provided with both analog and digital outputs. Hitachi Denshi America, Ltd., 150 Crossways Park Drive, Woodbury, NY; Fax: 516-496-3718.

Hitachi Denshi has introduced two new monochrome video cameras, each providing over one million pixels of information. Designed using Hitachi's experience in machine vision, medical and scientific imaging, the cameras are provided with both analog and digital outputs. Hitachi Denshi America, Ltd., 150 Crossways Park Drive, Woodbury, NY; Fax: 516-496-3718.

Hitachi Denshi America Ltd.

For More Information Write In No. 368

New on the Market

Product of the Month



Keyence Corp. of America, Woodcliff Lake, NJ, has introduced the CV Series Compact Vision System, a **handheld machine vision system** that provides a processing time of 1/60 sec., resolution of 240,000 pixels, 1/10,000 sec. synchronizing shutter, illumination adjustment, auto tracking, pattern matching, and gray search. Four image processing modes are available: area detection, pattern matching, absolute position detection, and relative position detection. The CCD camera is the same size as a sensor; the controller is the size of a micro PLC. The system does not require the use of a PC, and sensitivity and position do not need adjustment once the system is set up.

For More Information Write In No. 743

Kestrel VWF350 multi-output switch-mode **power supplies** from Advance Power, Solon, OH, deliver 350 watts of continuous output power. The units feature universal input of 85 to 264 VAC and power factor correction at 0.99. They are available in a standard three-output version, or optional four- and five-output versions.

For More Information Write In No. 740



Columbia Research Laboratories, Woodlyn, PA, offers the VM-103-MI-8 **vibration monitoring system**, which uses piezoelectric accelerometers as vibration sensors for monitoring rotating or reciprocating machinery. Up to eight accelerometers can be located up to 200 feet from the readout module. The system supplies a readout calibrated in velocity and measures over a frequency range from 2 to 200 Hz.


For More Information Write In No. 741

GE Plastics, Pittsfield, MA, has announced MD133 **ULTEM® resin** and polyphenylene oxide resin blend that provides heat and chemical resistance, and dimensional stability. Designed for use by molders, OEMs, and designers in the manufacture of automotive switches, sensors, and bulb sockets, the material is based on ULTEM polyetherimide resin, an amorphous polymer.

For More Information Write In No. 742

Schaevitz Sensors PS-10,000 **silicon pressure transducer** from Lucas Control Systems Products, Hampton, VA, features a pressure range to 10,000 psi and digital compensation. The unit's signal conditioner compensates for linearity and thermal error, and each unit enables a frequency response of 3,000 Hz.

For More Information Write In No. 745

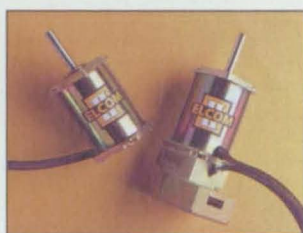

Pittman, Harleysville, PA, has introduced ELCOM® II 3400 slotless **brushless DC motors** that can be configured for back EMF, Hall sensor, or optical encoder commutation applications. Features include gearheads, timing-belt pulleys, cables and connectors, modified shafts, and special configurations.

For More Information Write In No. 747

Associated Spring-Raymond, Maumee, OH, offers Raymond **threaded inserts** for thread repair and reinforcement. They are available in thread sizes of 2/56 to 1-1/2" in UNC and UNF categories. Inserts are made of 18-8 stainless steel, and are offered in phosphor bronze. They are used to replace existing threads, as a bolt-locking mechanism in high-vibration applications, or to reinforce threads in soft metals such as aluminum or magnesium.

For More Information Write In No. 746




LeCroy, Chestnut Ridge, NY, has introduced the LC374A **color oscilloscope**, which features four input channels with 500 MHz bandwidth and 1 GS/s sampling on each channel. It offers a record length of 100 Kpoints per channel and comes with 8 Mb of processing RAM, upgradeable to 64 Mb. The unit is supplied with the ProBus™ Intelligent Probe Interface that enables use with a range of FET probes.

For more information Write In No. 744

World's Fastest A/D Cards for ISA and PCI Bus

500 MSPS

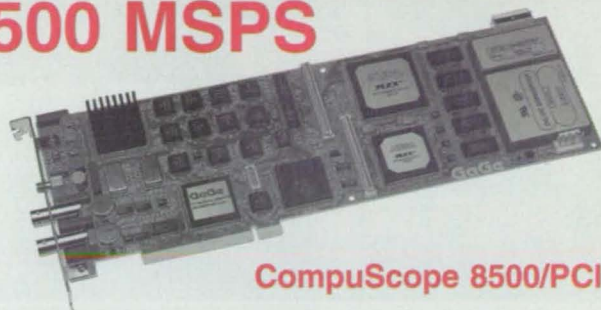

CompuScope 8500/PCI

- ♦ 500 MSPS, 8 Bit Sampling A/D Card for PCI Bus
- ♦ 100 MB/s Data Transfer Rate to PC Memory
- ♦ Real-Time Capture to PC Memory at 100 MSPS
- ♦ Up to 2 Meg Memory
- ♦ Drivers for DOS, QNX, Win 3.1, Win 95, Win NT
- ♦ Support for HP VEE, LabVIEW, LabWindows CVI

Many Other Models Available

GaGe

Call 1-800-567-GAGE

Ask for extension 3405 4 2 4 3

GAGE APPLIED SCIENCES (U.S.) INC.

1233 Shelburne Road, Suite 400, South Burlington, VT 05403

Tel: 1-800-567-4243, Fax: 1-800-780-8411

e-mail: prodinfo@gage-applied.com, web site: http://www.gage-applied.com

From outside the U.S. contact Gage at 5610 Bois Franc, Montreal, QC, Canada, H4S 1A9 Tel: 514-337-9844 Fax: 514-337-9844


For More Information Write In No. 426

LOW OUTGASSING ADHESIVES

Designed To Your Specifications

MASTER BOND SUPREME 10HT EPOXY

- One-part system
- Outstanding bond strength
- Fast cures at moderate temperatures
- 400°F thermal stability
- Void free cures
- Long storage stability without refrigeration
- Passes NASA outgassing test

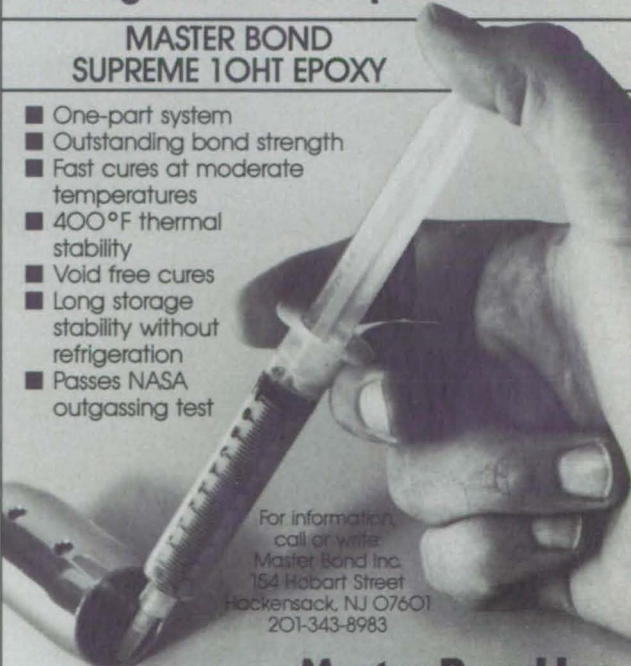

For information, call or write:
Master Bond Inc.
154 Hobart Street
Hackensack, NJ 07601
201-343-8983

Master Bond Inc.
Adhesives, Sealants & Coatings

World's smallest position sensor



For the tightest installations, Kaman's 0.080-inch diameter sensor lets you resolve microscopic displacements down to 4 microinches at 50 kHz, without contact. Ideal for both magnetic and non-magnetic materials, this sensor is only one of Kaman's 24 standard sensors that let you see small changes in position. Call us today for information.


Kaman Instrumentation, 1500 Garden of the Gods Rd.
Colorado Springs, CO 80907 Voice 719-599-1132
Fax 719-599-1823 E-mail: info-cos2@kaman.com
www.kamansensors.com/kaman

800-552-6267

KAMAN

For More Information Write In No. 428

barracoders



Take a bite out of resolver costs with our tough, submersible, industrial-strength, JR optical



NSB Series



NMC Series



SE Series




NSC Series

encoders. They survive harsh environments for about a tenth of what you pay for resolvers. And with less displacement. Which helps your design and your build cost. CUI/Stack supplies standard or custom components. You won't need an exceptional order to get exceptional service. Call [800] 275-4899 for a quick quote. Or fax your specs to [503] 643-6129.

On top of it.™


For More Information Write In No. 429

New on Disk

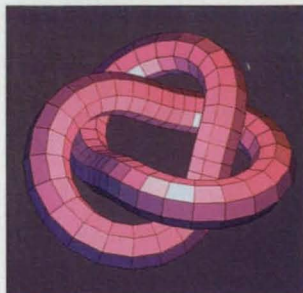


Research Systems, Boulder, CO, has introduced IDL Version 5.0 **visualization and programming software** for engineers, scientists, and software developers building data analysis and data visualization applications. It includes mathematics, statistics, graphics, image processing, mapping, and data manipulation tools, as well as IDL Insight, a pre-built graphical user interface. The software is available for Windows 3.1, 95, NT, Macintosh, Power Macintosh, UNIX, Linux, and Open VMS.

For More Information Write In No. 732

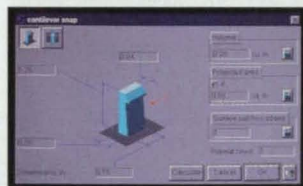

Early Cost Estimating for Injection Molding version 2.0 Windows-based **injection molding analysis software** from Boothroyd Dewhurst, Wakefield, RI, provides cost estimates at any point in the product development process. Design engineers can obtain estimates for process parameters such as set-up time and cost, and mold time, allowing them to see the cost impact of material choice, wall thickness values, tolerance specifications, and other molding elements.

For More Information Write In No. 727

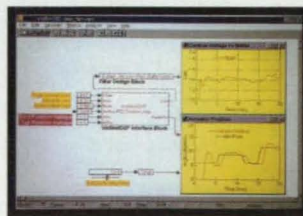

VisSim/DSP **modeling and simulation software** from Visual Solutions, Westford, MA, integrates DSP algorithm design/simulation with automatic code generation for development of DSP products and embedded systems. The Windows 95-based program is an add-on module to VisSim dynamic system modeling software, and features mathematical, engineering, and scientific functions.

For More Information Write In No. 733


Autodesk, San Rafael, CA, has introduced Mechanical Desktop™ Release 1.2 **solid and surface modeling software** for mechanical design on a Windows 95/NT PC. The program includes an Express User Interface with a context-sensitive menu structure; Edit-in-Place assembly functionality; and enhanced ordinate dimensioning, editing, and displaying of crosshatch patterns, surface sealing, section views, and BOM generation.

For More Information Write In No. 725



Transom Technologies, Ann Arbor, MI, offers Transom Jack V1.1 real-time **human modeling and simulation software**, which provides a 3D graphical environment enabling users to create or import graphics of objects and environments; populate the environment with a human figure or figures; and interact with the virtual scene. Users can walk or fly through digital mock-ups of products, perfect product ergonomics, plan product assembly and maintenance procedures, and train operators. It runs on Silicon Graphics workstations.

For More Information Write In No. 737

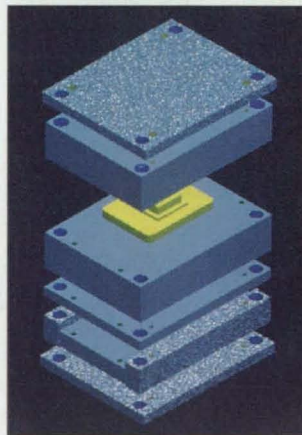

Bentley Systems, Exton, PA, offers MoldDesign™ **mold design software** that generates designs from 3D solid model parts, automating the process of designing plastic and high-pressure aluminum injection molds. Users can choose from various components such as plates, leader pins, bushings, and ejectors for use in generating the mold. The software provides tools for designing the mold-cooling system and for generating a bill of materials.

For More Information Write In No. 726

New on Disk



Galactic Industries Corp., Salem, NH, offers GRAMS/32 Version 5 **data analysis and management software** for Windows NT and 95. Enhancements include Spectral Workbooks, which provide a custom environment for processing and viewing data; network administration tools; and features such as improved printing options, an Array Basic Debugger for programming; and the ability to preview data files and open multiple files simultaneously.

For More Information Write In No. 729



Brady USA, Identification Solutions Div., Milwaukee, WI, has released BradyTRAXX™ **data management software** to help users track, store, and manage information about assets, tools, and supplies. The software is based on Microsoft® Access™ and is available in single-user and network versions. It runs on Windows™ 3.1, 95, NT, or Windows for Workgroups and allows users to print bar code labels for item identification.

For More Information Write In No. 728

Matra Datavision, Andover, MA, offers Euclid 3 Version 2 **design software** that enables designs involving large or complex models and assemblies, as well as import/export of large files from other CAD systems. Tools include mechanism design, animation of 3D assemblies, multiple collision detection, interference control, and multi-scenario/multi-group simulations. It is available on UNIX platforms from Digital Equipment, Hewlett-Packard, Silicon Graphics, and Sun.


For More Information Write In No. 730

Continuum Builder Software from Continuum Engineering, Canoga Park, CA, is a **motion programming software** program that includes direct visual screen representations in three dimensions. Multiple changes in velocity, acceleration, and motor run current levels; input and output initialization values; x, y, and z motion programming; time delays; and other parameters can be performed through a touch-screen feature. It is compatible with Windows 3.xx, 95, and NT.

For More Information Write In No. 736


Verbal Control Suite **voice control software** from Voisys International, Nutting Lake, MA, provides complete voice control of any Windows 95-based PC, PC-based product, or software package by using voice commands. It can be embedded into PC-based hardware and software, enabling selective verbal control, hands-free operation, and system security. The software suite includes Verbal Mouse, Verbal Keyboard, Verbal Navigator, and Verbal Explorer. The four functions are speaker-independent and allow use of a PC without the need for a manual mouse or keyboard.

For More Information Write In No. 738

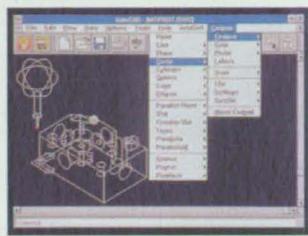

CADMeasure™ 6000 **CMM programming software** from Mitutoyo, Aurora, IL, is a Windows NT system that provides multi-tasking and 32-bit operation for graphical on-line/off-line part programming for coordinate measuring machines (CMMs). It supports measurement of non-prismatic and prismatic geometry and can be combined with AutoCAD® to perform reverse engineering and other CAD functions. Features include automatic probe calibration, modelless operation, and user-selectable tolerances.

For More Information Write In No. 731

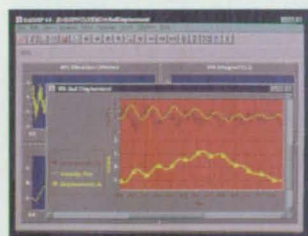

DSP Development Corp., Cambridge, MA, has released a native version of DADISP 4.0 **data analysis and signal processing software** for Windows NT and 95. The software allows users to work with data series, matrices, images, waveforms, and signals to perform graphical data analysis, mathematical and statistical analysis, data management, and FFT analysis. It includes the Series Processing Language, a programming language for additional customization. Enhancements include message logging, dynamic linked libraries, and a menu-driven import generator.

For More Information Write In No. 735



"SURFCAM allowed for uncompromised design and direct database-to-tool implementation."
Carl Ledbetter, Senior Industrial Designer, Microsoft Corp.

SURFCAM Delivers.

Version 7.0 is here. With dozens of shop-tested enhancements, SURFCAM's surface modeling, lathe and 2 through 5-axis machining are now joined by Z-level cutting, improved turning and new interface features. New SURFCAM Solids integrates solid modeling.

Whether you design in SURFCAM or any other system, SURFCAM cuts it. Gouge-free.

Supported by manufacturing specialists worldwide.

Let SURFCAM deliver productivity to your shop.

800.SURFWARE

See us at WESTEC '97, Booth #3267

tel 818.991.1960

fax 818.991.1980

email sales@surfware.com

web www.surfware.com



For More Information Write In No. 430

Flexibility,
Sensitivity
and Accuracy
with...

couplings

Servometer Flexible Shaft Couplings are indispensable for Robotic, Encoder, Resolver, Computer and Servomotor applications, offering flexibility, extreme sensitivity and accuracy.

- Zero cyclic speed variation during 360° rotation
- Zero backlash
- Very low elastic wind-up
- Low side thrust on bearings
- Set screw or split hubs available

Call for
free brochure



SERVOMETER®

501 Little Falls Road
Cedar Grove, NJ 07009

Fax (USA): (800) 785-0756

Fax: (201) 785-0756

Tel: (201) 785-4630

Shock & Vibration Damping. Up To 94%

Sorbothane® patented visco-elastic material absorbs and dissipates unwanted energy and outperforms rubber and other materials by providing:



- Shock Absorption
- Vibration Isolation
- Sound Damping
- Standard Products
- Cost-Effective Custom Molding

Sorbothane is the ultimate damping and isolation material

Free brochure and prototype sample.
330.678.9444

Sorbothane Inc.

2144 State Route 59, Kent, Ohio 44240 • tel 330.678.9444 fax 330.678.1303
www.sorbothane.com

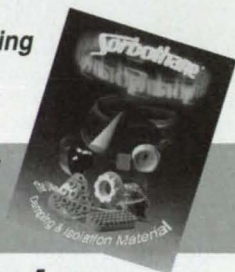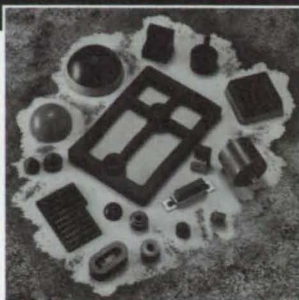


For More Information Write In No. 432

TRIM-LOK® INC.

if you have an edge...we have a trim!

For over 25 years,
the leader in
flexible plastic
and rubber
extrusions!

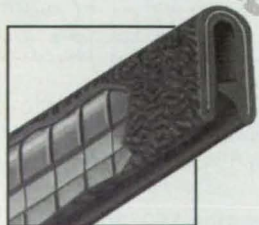

call for
FREE samples

e-mail: trimlok@deltanet.com

call
toll-free


1-888 TRIMLOK

714-562-0500 fax 714-562-0600

6855 Hermosa Circle Buena Park, Ca 90622-6180

For More Information Write In No. 433

New Literature

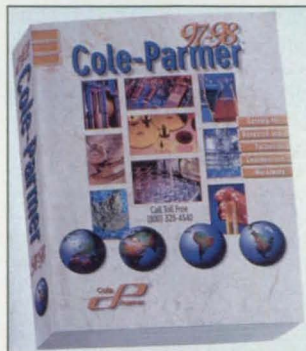

A 1997-98 catalog of scientific instruments, equipment, and supplies is available from Cole-Parmer Instrument, Vernon Hills, IL. Included are more than 30,000 products, including a new line of polarimeters, laser equipment, and the MASTERFLEX® series of pumps.

For More Information Write In No. 722

LaVezi Precision, Glendale Heights, IL, offers a 32-page selection guide of more than 80 sprockets and rollers in rectangular tooth and round tooth configurations. The sprockets are machined in stainless, hardened steel, aluminum, engineering plastics, or other specified material.

For More Information Write In No. 721



Bishop-Wisecarver Corp., Pittsburg, CA, has released a 24-page catalog describing LoPro linear motion systems in four sizes and with drive options including belt, chain, lead screw, and pneumatic cylinder actuator. Designed to minimize installation, the systems are available with three different wheel plate assemblies.


For More Information Write In No. 718

Non-Linear Systems, San Diego, CA, has released a six-page brochure describing the Series 8000 signal conditioners, including transmitters, isolators, and converters. The signal conditioners use PIN configuration and allow input, output, and special function selectability and interchangeability.

For More Information Write In No. 720

Superior Tube, Collegeville, PA, offers a 10-page brochure describing small-diameter metal tubing available in a variety of stainless steels, nickel, and nickel alloys. Applications include aerospace, medical, nuclear, instrumentation, automotive, and fabricated parts.

For More Information Write In No. 715

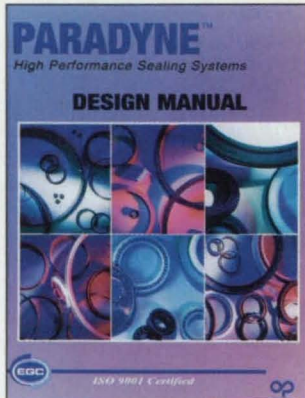

Paradyne™ sealing systems are described in a 72-page design manual from EGC Corp., Houston, TX. Metallic spring energized seals, rotary lip seals, and elastomer energized seals are used as rod, piston, face, and flange seals in applications requiring resistance to extreme temperatures, chemicals, corrosion, wear, and pressure.

For More Information Write In No. 717

A 50-page catalog of industrial I/O products is available from Acromag, Wixom, MA. Featured are VMEbus boards, ISA bus cards, and IP mezzanine modules for analog I/O, digital I/O, and communication functions. Accessories described include signal conditioning systems, termination panels, cables, adapters, and software.

For More Information Write In No. 716



Data loggers are described in a 28-page brochure from ACR Systems, Surrey, BC, Canada. Products include self-powered and pocket-sized devices that measure and record temperature, relative humidity, electric current, pressure, process signals, pulse frequency, and power quality.

For More Information Write In No. 719



**FREE!
130
Page
Catalog**

**"Optics
for
Industry"**

Free 130 page product catalog from Roly, world's largest supplier of "Off-the-Shelf" optics. 24-hour delivery of simple or compound lenses, filters, prisms, mirrors, beamsplitters, reticles, objectives, eyepieces plus thousands of other stock items. Roly also supplies custom products and coatings in prototype or production quantities. **ROLYN OPTICS Co.**, 706 Arrowgrand Circle, Covina, CA 91722-2199, (818)915- 5707, FAX (818)915-1379


For More Information Write In No. 580

POSITION ACCURACY

to ± 0.5 arc second!

Inductosyn[®] transducers provide absolute or incremental position data to ± 0.5 arc second (Rotary) or ± 40 microinches (Linear). Resolution to 26 bits.

For brochure,
call 914/761-2600
or fax 914/761-0405.

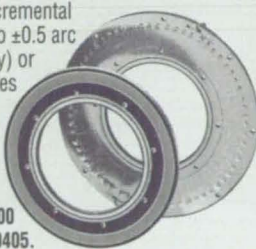

FARRAND CONTROLS
DIVISION OF RUHLE COMPANIES, INC.
99 Wall Street, Valhalla, NY 10595

For More Information Write In No. 581

ASL Applied Science Laboratories
175 Middlesex Tpk, Bedford, MA 01730
tel: 617-275-4000 ASL@A-S-L.com


Eye Tracking

Pupil Size

Easy to use
Reliable
Flexible
Customized



For More Information Write In No. 582

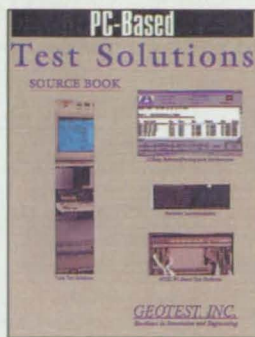

FREE TEST SOLUTIONS CATALOG

New, Free, 64-page 1997 PC-Based Test Solutions Source Book from Geotest, Inc., features over 100 PC-based products for ATE, data acquisition, and test & measurement applications. New products

featured include: NT5000 CPU Commander-ROM Emulator, GT40/41-RFS 200MHz Multiplexer Scanner, GT416-SM Series High Density Switch Matrix, InterV3 In-Circuit Fault Detection/Analysis Board, and more. Geotest, Inc.; call 800-330-9774 for your free copy, or visit us on the Web at: <http://www.geotestinc.com>.

Geotest, Inc.

For More Information Write In No. 583



Space Station T-Shirt

Colorful rendition of orbiting space station superimposed dramatically on back of black shirt; image of Earth on front left side. 100% cotton. Adult L or XL. Only U.S. \$12.95 each!



Space Coloring Book

Fun and educational! Easy-to-understand descriptions of spacecraft and missions, with drawings for your young artist to color. 36 pp. \$4.50

Add \$5.00 for postage. NY residents add sales tax to total. Mail payment (check/draft/postal/express order), U.S. \$ payable to: Associated Business Publications to Associated Business Publications, Dept. F, 317 Madison Ave, New York, NY 10017, U.S.A. For credit card orders call 1-212-490-3999.

"Can Do."



**Whatever You Need in
Inorganics — We'll Work
With You to Make It Happen.**

- Virtually Any Size or Shape: Powders, Evaporation Materials, Sputtering Targets
- Quantities from Grams to Thousands of Kilograms
- The World's Widest Selection of Inorganics
- Nearly Any Composition
- Custom Manufacturing



Call For Our Free Catalog
414-289-9800

CERAC Incorporated

407 N. 13th St. • P.O. Box 1178 • Milwaukee, WI 53201 USA
Tel: 414/289-9800 • Fax: 414/289-9805
E-mail: marketing@cerac.com • Home Page: www.cerac.com

YOUR SINGLE SOURCE FOR INORGANICS
FROM RAD TO FULL SCALE UP.

For More Information Write In No. 434

The Technology Connection

To Advertise Call (800) 944-NASA

Engineering Catalog



Inventors Marketplace

"How To Offer Your Invention For Sale."

We have helped hundreds of inventors and showed them how to offer their inventions for sale to businesses all over the world. No cost. Free Information.

Call 1-800-537-1133. Kessler Sales Corp., C-47-7, Fremont, Ohio 43420.

NASA Tech Briefs, ISSN 0145-319X, USPS 750-070, copyright© 1997 by Associated Business Publications Co., Ltd. Copyright is not claimed for the individual "tech briefs" contained in this publication. The U.S. Government has a paid-up license to exercise all rights under the copyright claimed herein for government purposes. NASA Tech Briefs is published monthly by Associated Business Publications Co., Ltd., 317 Madison Ave., New York, NY 10017-5391. Editorial, sales, production and circulation offices at 317 Madison Ave., New York, NY 10017-5391. Subscription for non-qualified subscribers in the U.S., Panama Canal Zone, and Puerto Rico, \$75.00 for 1 year; \$125.00 for 2 years; \$200.00 for 3 years. Single copies \$10.00. Foreign subscriptions one-year U.S. Funds \$195.00. Remit by check, draft, postal, express orders or VISA, MasterCard, or American Express. Other remittance at sender's risk. Address all communications for subscriptions or circulation to NASA Tech Briefs, 317 Madison Ave., New York, NY 10017-5391. Second Class postage paid at New York, NY and additional mailing offices.

POSTMASTER: please send changes to NASA Tech Briefs, P. O. Box 10523, Riverton, NJ 08076-0523.

Advertisers Index

Company	Web Site	Write in Number	Page
Abaris Training Resources, Inc.	www.abaris.com	312	86
ADAC, American Data Acquisition Corporation	www.adac.com	435	83
Adaptive Research	www.adaptive-research.com	641	25
Advanced Pressure Products	www.pmiapp.com	301,305	85
Aerospace Optics Inc.		615	13
Alacron	www.alacron.com	545	4
Alcatel		476	3c
Alesa Aluisse Canada Ltd.		420	77
Algor, Inc.	www.algor.com	609,327	7,87
Altair Computing, Inc.	www.altair.com	524	55
AMP Incorporated	www.amp.com	604	43
Analytical Graphics	www.stk.com	683	49
Ansoft	www.ansoft.com	668	51
APD	www.algor.com/APD	680,328-329	61,87
API Motion	www.industry.net/api	845	15b
Appliance Manufacturer Conference & Expo		425	81
Applied Science Laboratories		582	95
Aremco Products, Inc.		311	86
Arianespace	www.arianespace.com	478	5c
ASM International		367	90
Astro-Med, Inc.	www.astro-med.com	657,356	57,89
Autodesk AutoCAD LT	www.autodesk.com/al27		9
Automated Precision, Inc.		371, 307	11a,85
Avalon Electronics, Inc.	www.aval.demon.co.uk/avalon	313	86
Barnant Company		339	88
Bentley Systems, Incorporated	www.bentley.com	650	19
Betatronix, Inc.		363	90
Boker's, Inc.	www.bokers.com	314	86
Breault Research Organization Inc.	www.breault.com	372	11a
Buckbee-Mears St. Paul	www.bmcind.com	422	80
Burleigh Instruments	www.burleigh.com	344	88
CADSI	www.cadsi.com	411	66
Canon	www.usa.canon.com	458	5a
R.P. Cargille Laboratories		357	90
Cerac Incorporated	www.cerac.com	434	95
Circuit Specialists, Inc.	www.circ.com	310	86
CNES		477	4c
Communications Specialties, Inc.	www.commspecial.com	408	60
Corel Corporation	www.corel.com	627	27
Crest Foam Industries, Inc.	www.crestfoam.com	300	85
CUI Stack		429	92
Custom Servo Motors Inc.		527	79
Cybernetics		562	23
Data Translation	www.datx.com	612	15
Datacube, Inc.	www.datacube.com	482	11c
Dayco Products, Inc.	www.dayco.com	851	21b
De-Sta-Co	www.destaco.com	309	86
Del-Tron Precision Inc.		317	86
Delta Tau Data Systems	www.deltat.com	833	4b
Digi-Key Corporation	www.digkey.com	636	5
Digital Equipment Corporation	www.workstation.digital.com	533	31
Dipix Technologies Inc.	www.dipix.com	450	1a
Dolch Computer Systems, Inc.	www.dolch.com	402	18
DuPont Engineering Polymers		319	86
DuPont Vertrel		552	47
E.S.A.		475	1c
Eastern Air Devices, Inc.		839	11b
Eastman Kodak		451	3a
Edmund Scientific		455	8a
Enterprise Software Products, Inc.	www.entsoft.com	647	29
Entran Devices, Inc.	www.entran.com	349	89
Envoy Data Corporation	www.envoydata.com	343	88
Epix Incorporated	www.epixinc.com/epix	410	64
Ergotron	www.ergotron.com	413	71
ESCO Precision Optics		457	10a
ESDU International		336	88
Evans Capacitor Company	www.evanscap.com	407	58
EXAIR Corporation	www.exair.com	315,321,352	86,87,89
EXFO Electro-Optical Engineering		373	11a
Exporter Insider		462	12a
Farrand Controls		581	95
Faugere & Jutheau		485	16c
Festo Corporation	www.festo-usa.com	834,341	5b,88
FloMet, Inc.	www.flomet.industry.net	401	16
Gage Applied Sciences (U.S.) Inc.	www.gage-applied.com	426	91
Gems Sensors		316	86
Geotest Inc.	www.geotestinc.com	583	95
Glentek	www.glentek.com	848	17b
Globe Electronic Hardware	www.globe-elec-hdwe.com	340	88
Globe Motors		421	80
Government Micro Resources, Inc.	www.gmri.com	660	35
Harmonic Drive Technologies		838	10b
Haydon Switch & Instrument, Inc.	www.hsi-inc.com	847	17b
HD Systems, Inc.	www.hdsystemsinc.com	409	63
Hewlett Packard, HP Logic Dart	www.hp.com/info/LogicDart1	530	67
Hewlett-Packard Company, Technical Computing Systems	www.hp.com/go/technical		10-11
Hiram Jones Electronics, Inc.		358	90
Hitachi Denshi America		368	90
illbruck	www.illbruck-SONEX.com	424	82
IMEC	www.imec.be	487	17c
Integrated Engineering Software		644	39
Intelligent Light	www.ilight.com	361	90
Intelligent Motion Systems, Inc.		835	6b

Company	Web Site	Write in Number	Page
Intergraph Corporation	www.intergraph.com/solidedge	630	41
Intespace		486	16c
Invention Machine Corporation	www.invention.machine.com	639	37
Kaman Instrumentation	www.kamansensors.com/kaman	428	92
Kaydon Corporation		844	14b
Keithley Metrabyte	www.keithley.com	684-687	20-21
Kerk Motion Products, Inc.		842	12b
Kidasa Software, Inc.	www.kidasa.com	415	72
Kingston Technology	www.kingston.com/ad.htm	483	13c
Kollmorgen	www.kollmorgen.com	852	22b
Lambda Physik	www.chor.com/lp/lp_home.html	510,325	2,87
Lasiris Inc.	www.lasiris.com	453	6a
Lincoln Electric Company	www.lincolnelectric.com	836	7b
LinTech		850	18b
Litton		830	COV IIb
Lumitex, Inc.		326	87
Machida, Inc.		331	87
Magnetic Shield Corporation		330	87
Man & Machine, Inc.	www.manmachine.com	405	45
Master Bond Inc.		427	91
The MathWorks, Inc.	www.mathworks.com/ntb	519	16A-B, 17
Metal Powder Industries Federation	www.mpif.org	342	88
Mid-West Spring Mfg. Co.		332	87
Minco Products, Inc.		418	76
Morgan Matroc Inc.		459	10a
N Vision	www.nvis.com	436	84
National Instruments Corporation	www.natinst.com	600,303,306	COV II,85
National Photocolor		460	12a
National Technology Transfer Center	www.nctn.hq.nasa.gov/nctn/	655	COV III
NEAT (New England Affiliated Technologies)	www.neat.com	831	1b
Neslab Instruments, Inc.	www.neslabinc.com	452,318	COV IIa,86
Norwegian Space Centre	www.spacecentre.no/	481	9c
Novespace		479	18c
Novotechnik US, Inc.	www.novotechnik.com	849	18b
Numerics	www.numerics.com	348	89
Olympus America, Inc.	www.olympusimg.com	350	89
Omega Engineering, Inc.	www.omega.com	620-621,333-334	1,88
Omega Shielding Products Inc.	www.omegashielding.com	345	89
Optima Precision Inc.	www.optima-prec.com	454	7a
Oregon Micro Systems Inc.		320	86
Oriel Instruments	www.oriel.com	323	87
Oriental Motor U.S.A. Corp.		846	16b
Pacific Scientific		337-338	88
Paralan Corporation	www.paralan.com/ntb	308	85
Parametric Technology Corporation	www.ptproducts.com	575	59,80A-D
Parker Hannifin Corporation, Pneumatic Div.		675	69
PHD, Inc.	www.phdinc.com	364	90
Phytron, Inc.		840	11b
PIC Design		353	89
PLX		365	90
Porous Materials, Inc.	www.pmiapp.com	302	85
Portescap US, Incorporated	www.portescap.com	837	9b
Presray Corporation		417	74
Quatech, Inc.	www.quatech.com	347	89
Renco Encoders		841	12b
Research Systems, Inc.	www.rsinc.com	515	COV IV
RGB Spectrum	www.rgb.com	400	12
Rifocs Corporation	www.rifocs.com	416	72
Rockwell		832	3b
Rolyn Optics Co.		370,580	11a,95
Ruggedtronics		414	73
S.A.B.C.A.		480	8c
Seal Master Corporation		423	82
Seastrom Manufacturing Co. Inc.		359	90
Servometer		431	93
Sky Computers, Inc.	www.sky.com	488	7c
Smalley Steel Ring Co.	www.ringspring.com	322	87
Solid Concepts Inc.	www.solidconcepts.com	412	70
SolidWorks Corporation	www.solidworks.com/304	690	3
Sony Electronics Inc.	www.sony.com/professional	542	52-53
Sorbothane Inc.	www.sorbothane.com	432	94
Spaulding Composites Co.		440	81
Specialty Steel & Forge	www.steelforge.com	484	15c
StacoSwitch		305	89
Stahl Specialty Company		354	85
Stanford Research Systems		324	87
Stock Drive Products/ Sterling Instrument	www.sdp-si.com	354	89
Surfware	www.surfware.com	430	93
Systan Corp.	www.systan.com	335	88
TAL Technologies, Inc.	www.taltech.com	351	89
TCAM		843	13b
TEC Products	www.tecstress.com/tec	456	8a
Technology 2007			19b
Transducer Techniques, Inc.	www.tloadcells.com	362	90
Trim-Lok		433	94
United Electronic Industries	www.ueidaq.com	366	90
VAT Incorporated	www.vatvalve.com	360	90
Vector Fields Inc.	www.vectorfields.com	406	50
Velmex, Inc.	www.velmex.com	419	76
VLSI Standards		346	89
Western Graphtec, Inc.		404	44
Wolfram Research	www.wolfram.com/applications/csn	541	33

Over the past 30 years, NASA technology has helped thousands of companies develop new products. From the programmable pacemaker, to a more comfortable ski boot, to a pacifier that changes color with a baby's temperature. If you'd like to read more about these and other partnerships in technology, visit our Web site at <http://nctn.hq.nasa.gov/nctn/>. To find out what NASA can do for your company, call the National Technology Transfer Center (NTTC) at 1-800-678-6882.



THE NEXT TIME YOUR COMPANY NEEDS HELP
DEVELOPING A PRODUCT, GIVE US A CALL.

JUST DON'T SAY, "HOUSTON, WE HAVE A PROBLEM."
WE'RE GETTING A LITTLE TIRED OF THAT ONE.



PUT OUR TECHNOLOGY
TO WORK FOR YOU.

Spinoff products highlighted above are based on information provided by manufacturers who acknowledge that aerospace technology contributed wholly or in part to development of the product. Publication herein does not constitute NASA endorsement of the product.

For More Information Write In No. 655

Create Revolutionary Results. Fast.



Visualize your data with IDL®, the *Interactive Data Language*, and see results in a whole new way.

Easily create amazing graphics with IDL software's accelerated 3D system. Want to spin or fly-through a surface? No problem. Shade and illuminate with multiple light sources?

IT'S A SNAP IN IDL.

IDL software's array-oriented architecture is designed for high-performance processing of large, complex data. That's why it's the standard in the world's preeminent medical, military, engineering & science organizations. IDL is so efficient that a few lines of IDL can do the job of hundreds of lines of C or Fortran. And, its object-oriented system lets you develop sophisticated applications from reusable code modules.

Image processed in IDL software and courtesy of NASA and ST ScI.

Analyze data faster. Create simulations easier. Write better applications.

Read in, analyze and output your data with the click of a mouse with IDL Insight™.

Connect to your relational database with the IDL DataMiner™.

Automatically share your programs – with full graphical interfaces – among Windows, Unix and Macintosh systems. Check out our flexible license options – we'll help you protect your intellectual property and economically distribute your applications.

Create maps in any of 16 projections.

Crunch numbers with IDL's integrated mathematics, statistics and industry-standard Numerical Recipes™ algorithms.



new release

IDL 5.0

For More Information Write In No. 515

Stop waiting for your results. Call us for a free Demo CD or visit our website and download it today. WWW.rsinc.com

Research Systems 303-786-9900 info@rsinc.com Software = Vision™

International Distributor Offices
Austria, Germany, Liechtenstein, Luxembourg, Switzerland, The Netherlands CREASO, GmbH tel: 49 8105 25055 • Brazil SulSoft tel: 55 51 237 39 91 • China, Hong Kong 3-Link Systems Pte Ltd. tel: 86106 261 0161
France, Belgium Fast Parallel Solutions France tel: 33 1 41 73 20 00 • Italy Alliant Computer Systems SRL tel: 39 39 6091766 • Japan Adam Net Ltd. tel: 81 35802 2251 • Korea InterSys tel: 82 42 869 4746
Spain Estudio Atlas tel: 34 45 298 060 • Taiwan Concentrate Corporation tel: 886 2 683 7752 • United Kingdom Floating Point Systems UK Ltd. tel: 44 118 977 6333

IDL SOFTWARE